

Motorola Adventure V750 Micro SD Replacement

Use this guide to replace the Micro SD card in the Motorola Adventure V750.


Written By: Kyle



INTRODUCTION


If you have a new Micro SD card or your old one is broken on your Motorola Adventure V750, this guide will provide a step-by-step process on how to access and replace the Micro SD card.

Step 1 — Micro SD

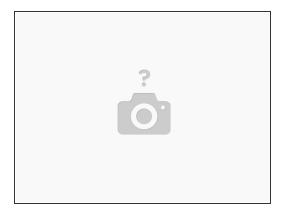


- (i) Ensure that the device is off first.
- Locate the back cover and the cover's latch. Remove the cover from the back of the phone.

Step 2

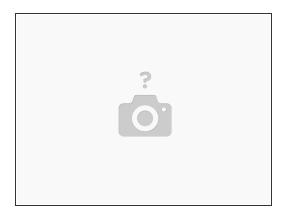


• Locate the sim card slot which is above the battery compartment.

Step 3

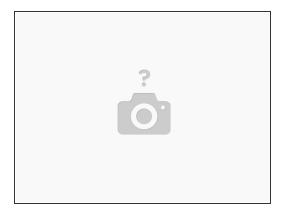


• With your forefinger, gently slide the sim card out to the right until the card is cleared from the card slot.

Step 4

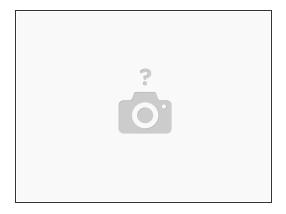

• Insert the new sim card by sliding it underneath the sim card slot.

Step 5

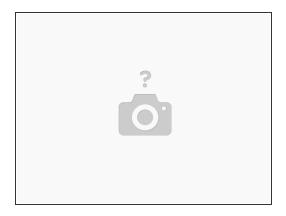

Put the back cover back on the phone.

To reassemble your device, follow these instructions in reverse order.