



Sony Vaio PCG-4121GL Battery Replacement

This guide will show you how to replace the battery for the Sony Vaio PCG-4121GL (VPCSA3AFX).

Written By: McKinley Hubred



INTRODUCTION

If your laptop is not powering on or is not holding a charge, a faulty battery could be the issue. Before starting this guide, it may be helpful to have a secure place to put the screws after they have been removed.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the two 3mm Phillips #0 screws on the bottom of the computer that secure the plastic backing.

Step 2



- Pull the bottom plate towards yourself until it unhinges fully.
- Once the plate is free from the backing remove it completely.

Step 3



- Look for the blue tab that is located to the bottom left of the battery.

Step 4



- Pull the blue tab towards yourself until you hear a click.
 - Once the blue tab is released, pull up on the battery.
 - Once the battery can move freely, take it out completely.
- i** It may be helpful to have a spudger to make it easier to release the blue tab.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:14:58 AM (MST).

