


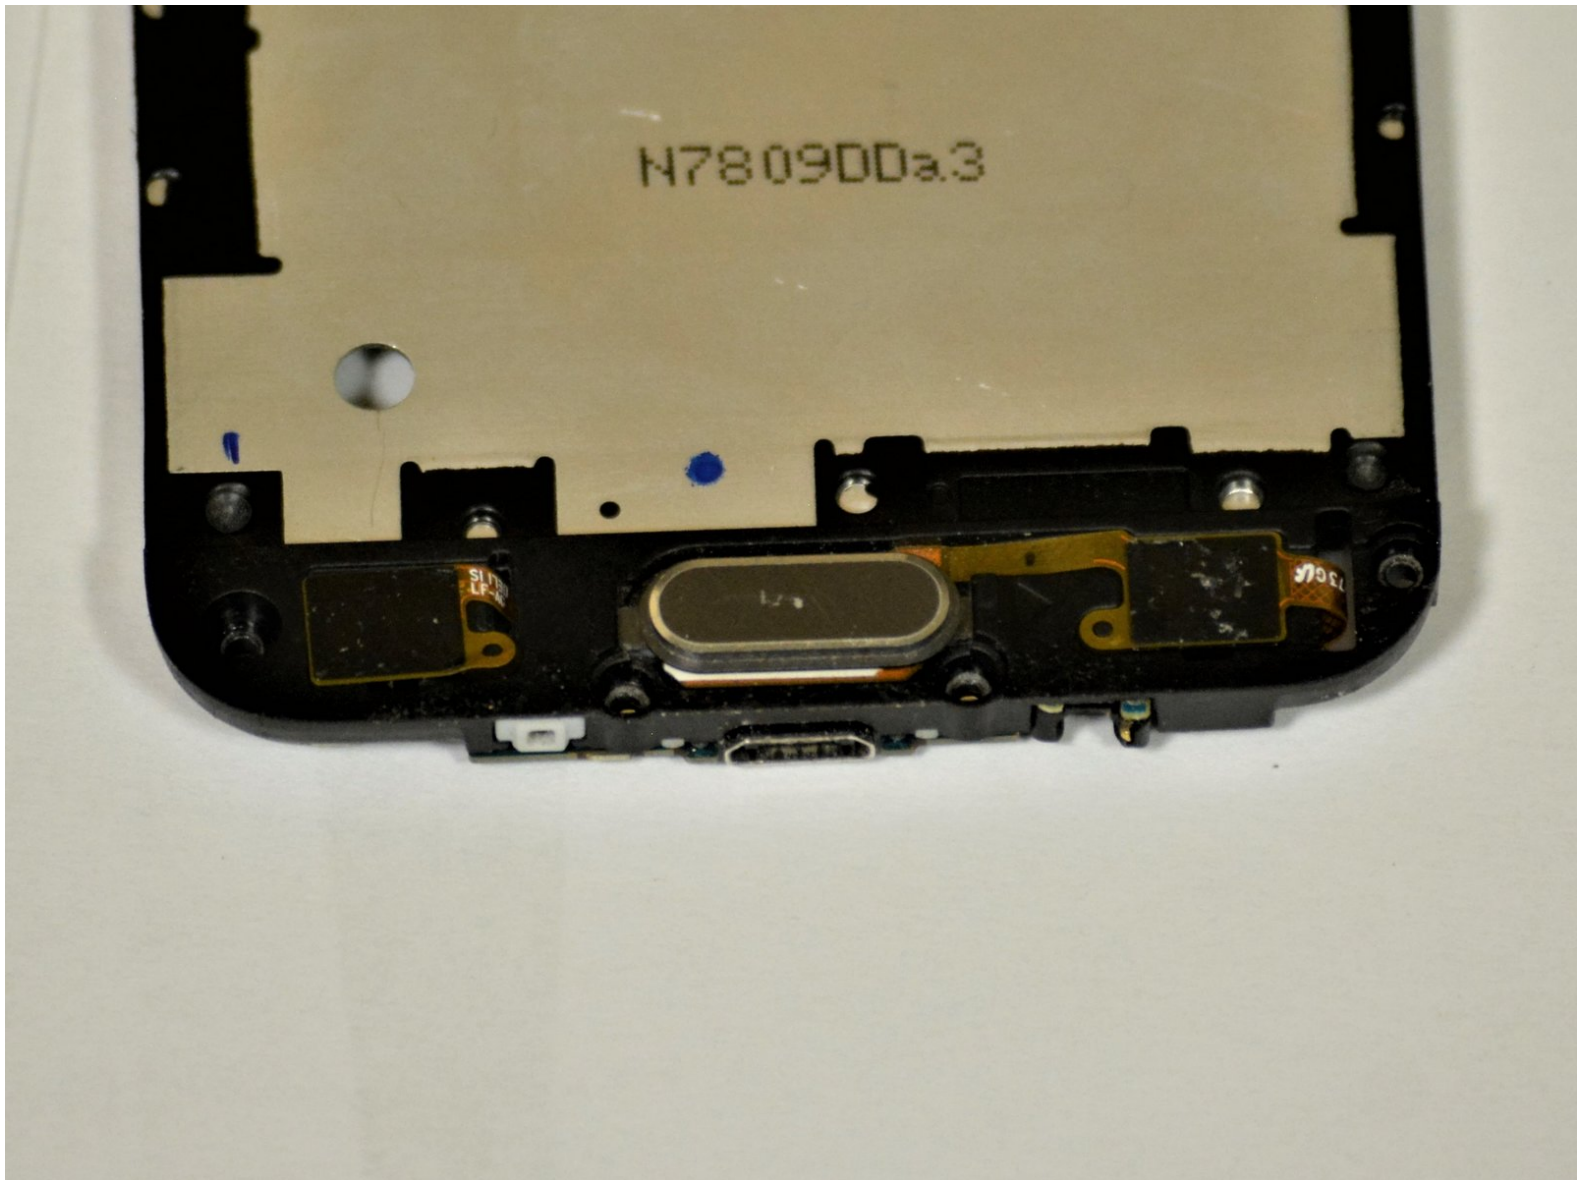

# Samsung Galaxy J3 Emerge Home Button and Audio Jack Replacement

How to replace the home button and audio jack for a Samsung Galaxy J3 Emerge Model SM-J327P.

Written By: Hugh Cosculluela



---

## INTRODUCTION


Home Button and Audio Jack guide for a Samsung Galaxy J3 Emerge Model SM-J327P. May need to replace the home button if it is unresponsive. If audio becomes distorted when plugged in to the jack it needs replacing.



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Screen

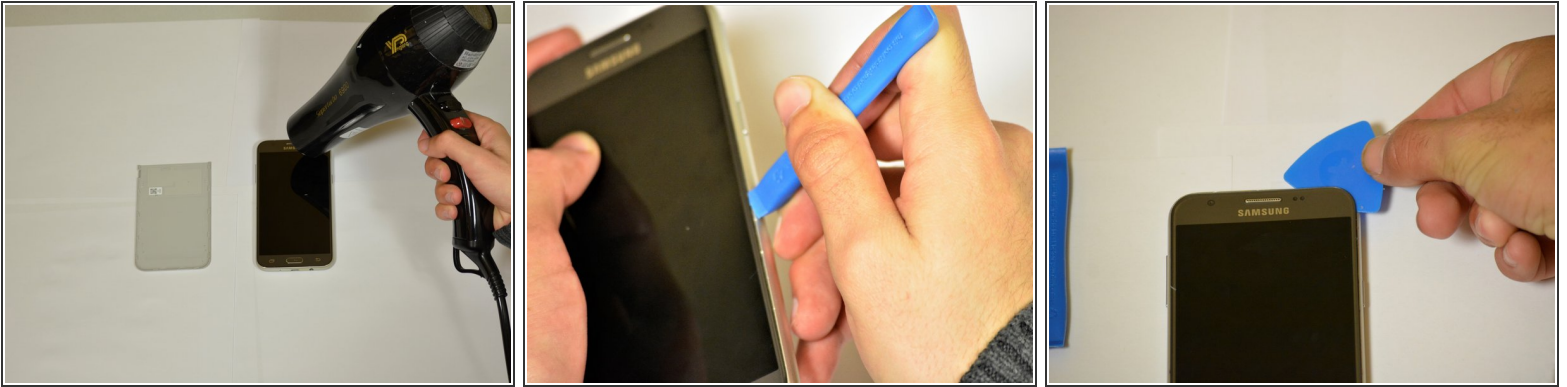

- Heat up the edges of the screen with a hair dryer.
- Put the iFixit Opening Tool between the screen and body to open the edge of the screen up.
- Work the iFixit Opening Tools around the whole screen to break the glue.



## Step 2

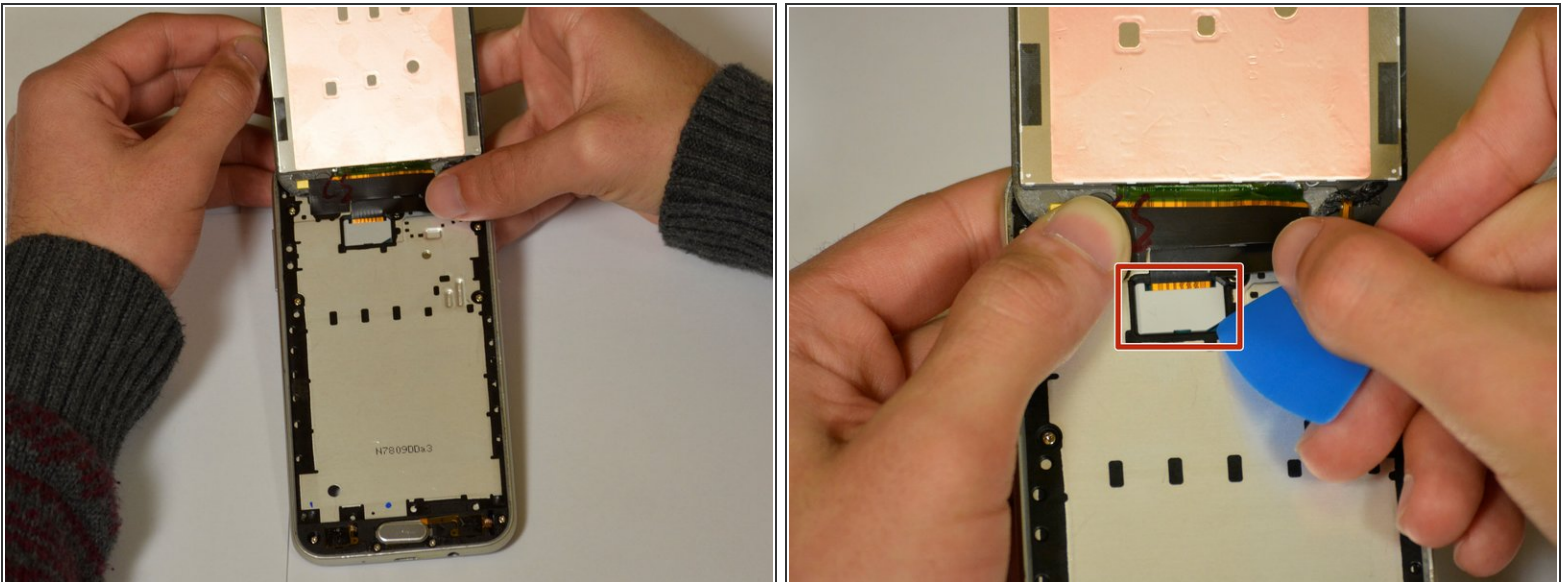

- Lift the screen up from the bottom.
- ⚠ The screen could crack when lifting it up.
- Pry the gray cover open.





## Step 3

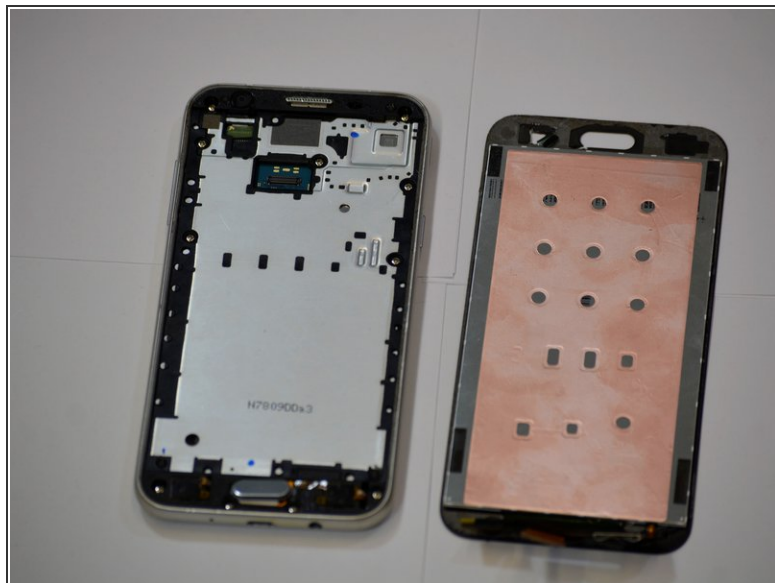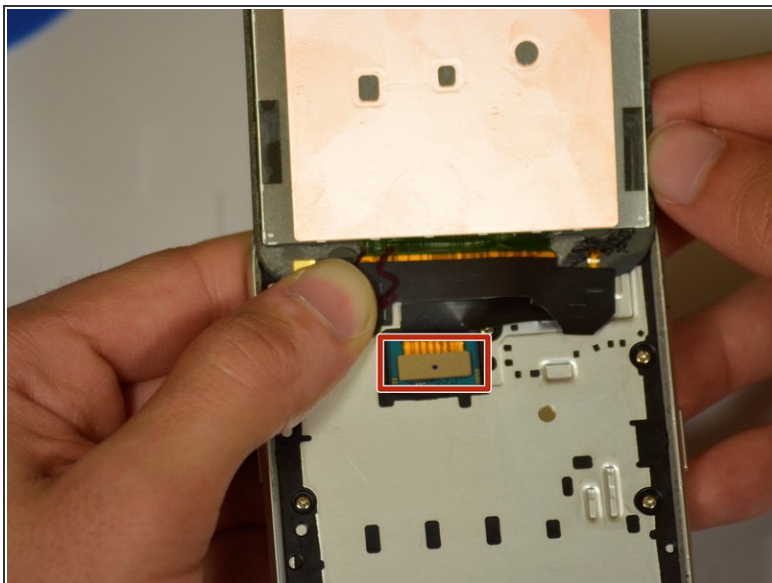

- Pry the connector off of the motherboard by using a clean nail or the iFixit opening tool.

## Step 4 — Motherboard

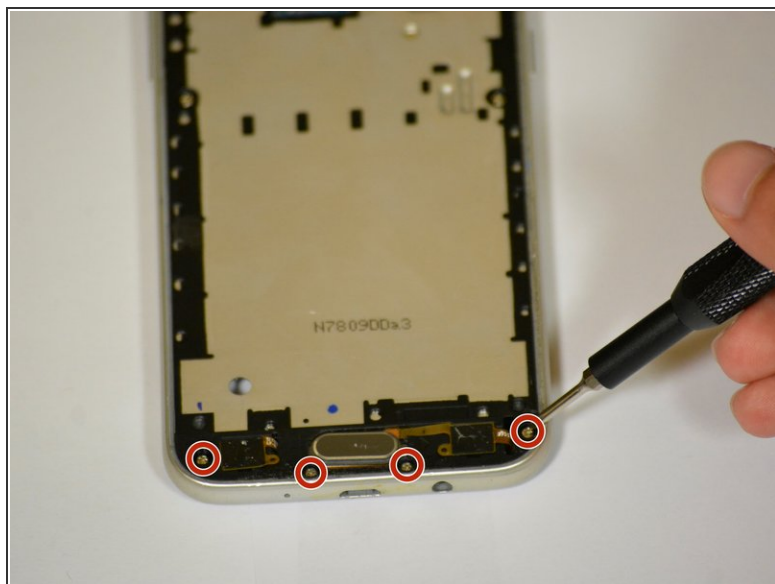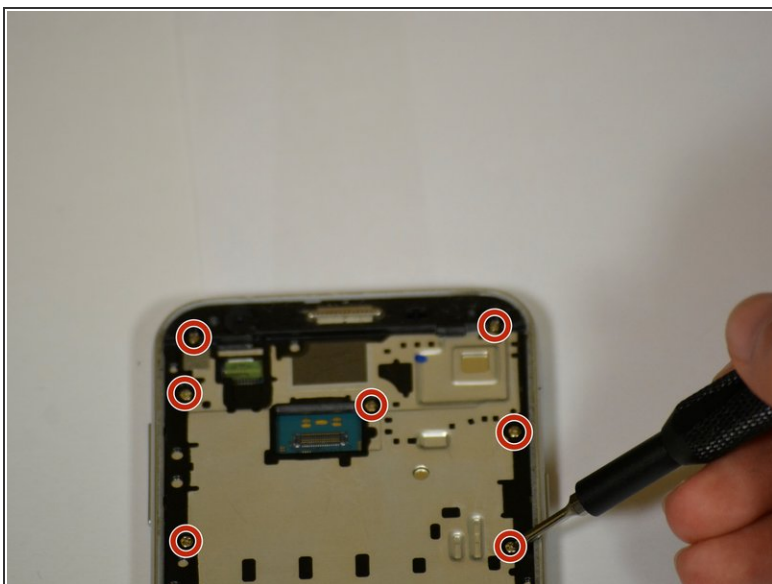

- Remove the eleven Phillips #00 3.5mm screws.

**i** If the screws get stuck when removing, try using tape to get them out. Place the adhesive side of tape on the screws and pull the tape off the spot.

## Step 5



- Turn the phone over and push down where the battery was.
- ❗ There will be a loud clicking noise when applying pressure.

## Step 6




- Insert the iFixit Opening Pick between the motherboard and the panel.
- Work the iFixit Opening Pick around the outside of the motherboard.

## Step 7



- Pry the motherboard away from the phone using your hand.

## Step 8 — Home Button and Audio Jack

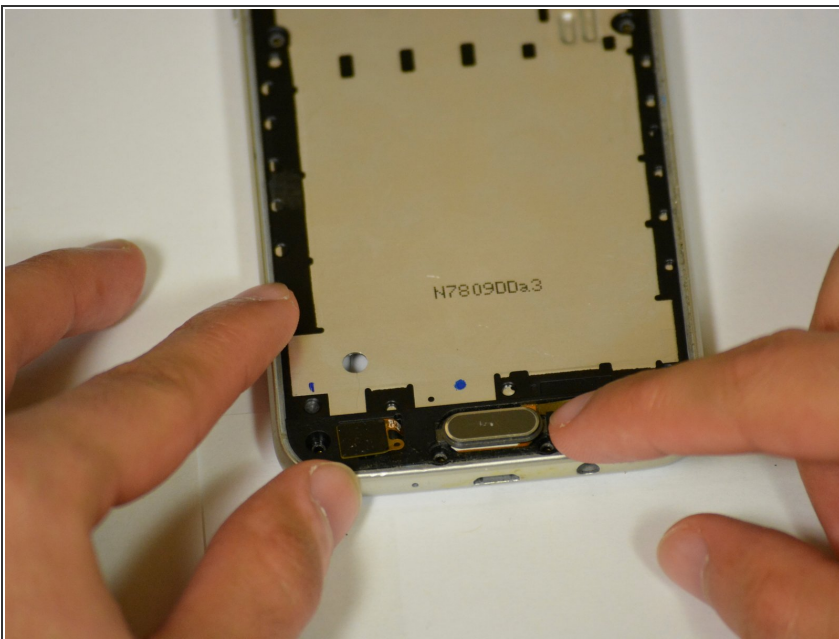

- Slide the home button to the left to pop it off.




## Step 9




- Remove the connector where the home button was using the iFixit Opening Pick.

## Step 10

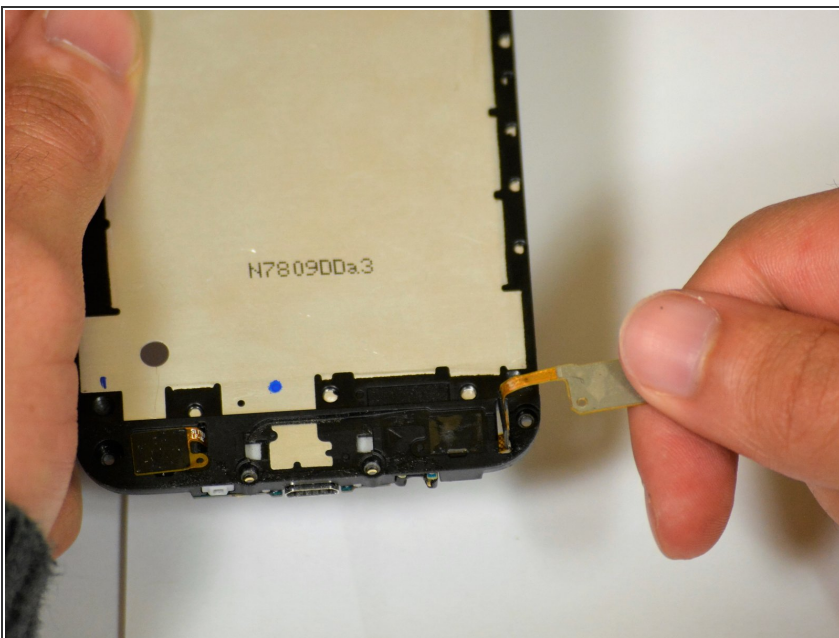

- Lift up the connector and push it through the motherboard by following the ribbon.

## Step 11

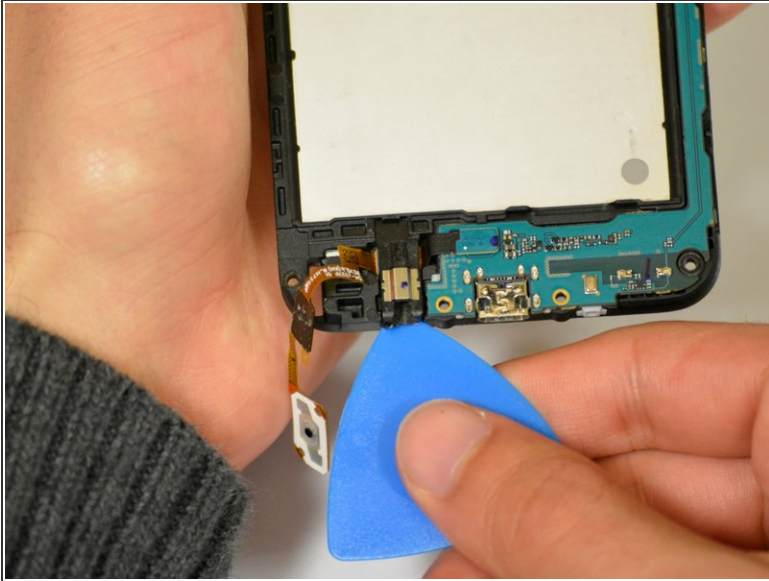

- Follow the ribbon and gently pop the audio port out using the iFixit Opening Pick.

To reassemble your device, follow these instructions in reverse order.