



Akaso EK7000 4K Battery Replacement

This guide will walk you through how to replace your camera battery. No special tools required.

Written By: Annie Sun



INTRODUCTION

This guide will show you how to replace the battery in your Akaso EK7000. This is a simple procedure with no special tools needed although fingernails are recommended.

Step 1 — Battery



- Locate the battery cover at the bottom of the camera. Use your fingers to gently pry open the battery cover.

Step 2



- Locate the small plastic flap attached to the battery. Pull the battery out towards you.

To reassemble your device, follow these instructions in reverse order.