



# Asus ROG G55VW-DH71 Disk Drive Replacement

How to replace Disk / CD drive in an Asus ROG G55VW-DH71.

Written By: Savanna Stockman



---

## INTRODUCTION

This guide will aid in the replacement of a faulty disk drive, which will no longer read the disks that are placed in the device.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Disk Drive



- Using the PH0 screwdriver remove the 2 3.6 mm screws.

## Step 2





- Lift and remove the back plate.

### Step 3



- Using the PH0 screwdriver remove the 2 4.6 mm screws.
- Using the PH0 screwdriver remove the 6.6 mm screw.

### Step 4

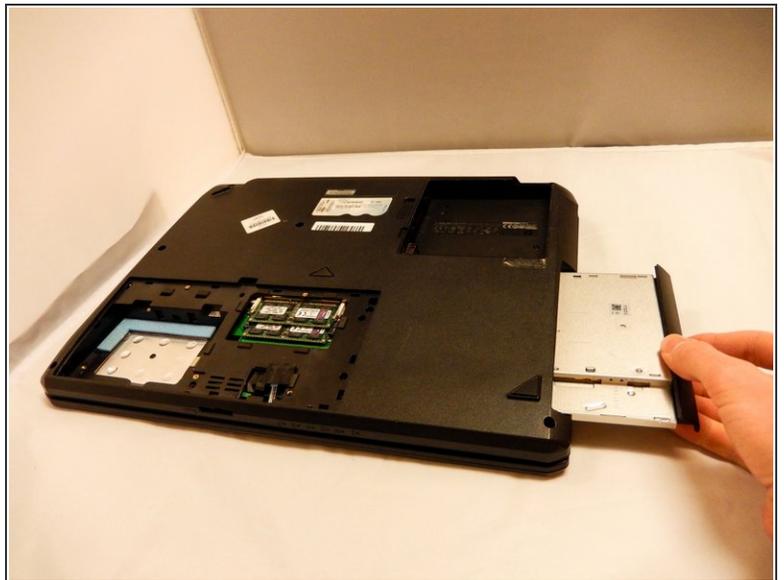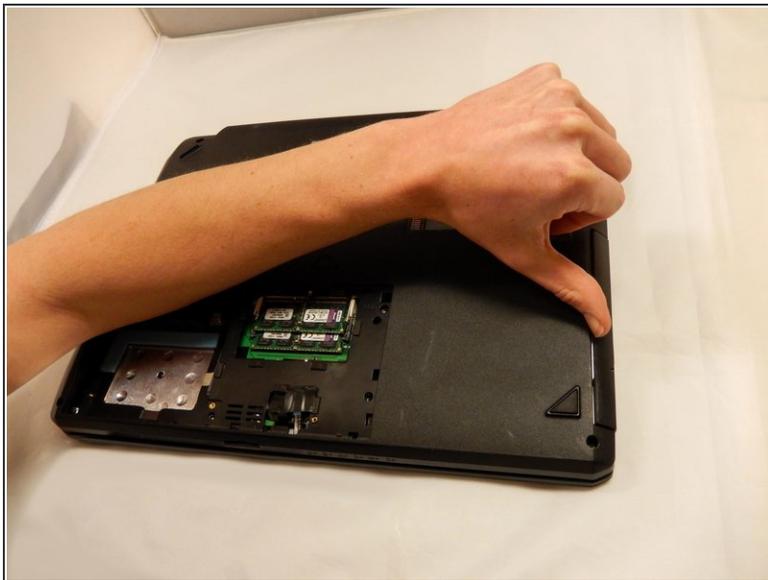

- Pull out the disk drive.

To reassemble your device, follow these instructions in reverse order.