




# Samsung Galaxy S10+ SIM/MicroSD Card Replacement

This guide shows how to eject the dual card tray to remove or replace the SIM card or MicroSD cards from the Galaxy S10+ (S10 Plus).

Written By: Arthur Shi

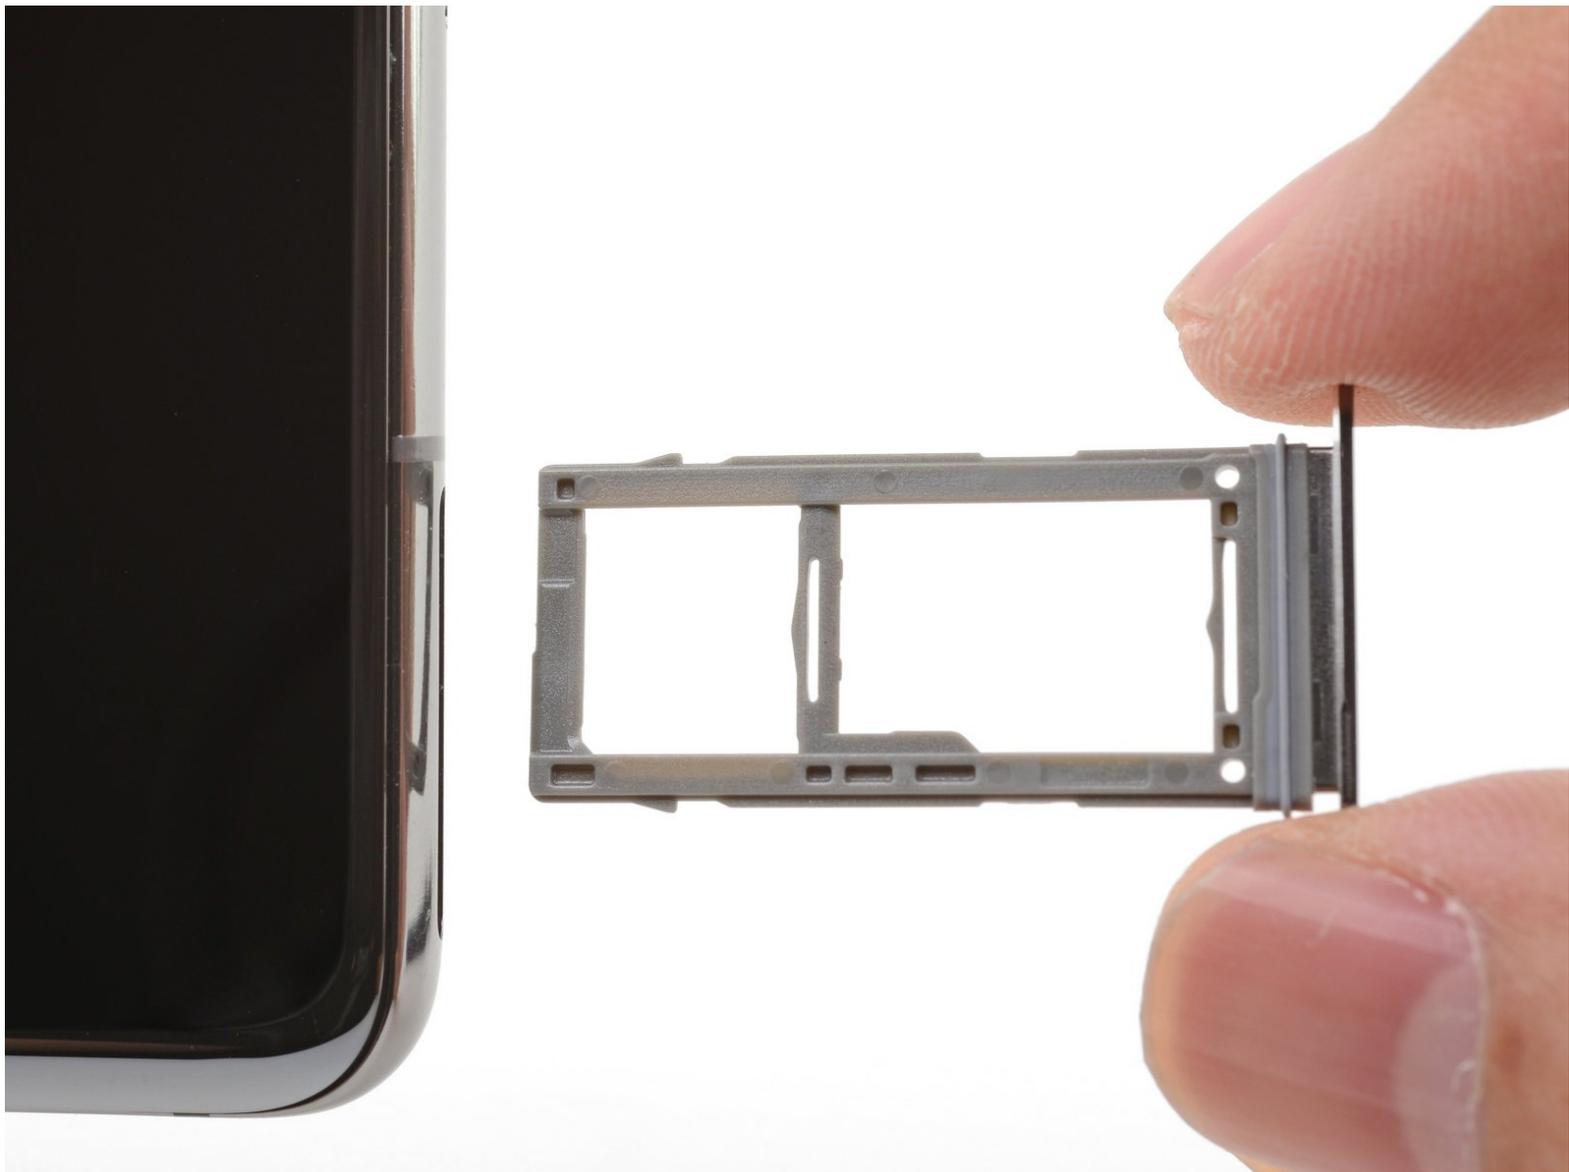

---

## INTRODUCTION

The Galaxy S10+ has a hybrid SIM card tray. Ejecting this tray allows you to replace the nano SIM card, add a MicroSD memory card, or add a second nano SIM card (certain models only).

---

### TOOLS:

- [SIM Card Eject Tool](#) (1)
-

## Step 1 — SIM/MicroSD Card



- Insert a SIM card ejector tool, bit, or a straightened paperclip into the hole on the SIM tray, located at the **top edge** of the phone next to the plastic antenna band.
- ⓘ If you inserted the tool [into the other hole](#), don't worry—the microphone and the ingress gasket are mounted out of harm's way.
- Press firmly to eject the tray.
- Remove the SIM card tray.
- ☑ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

**To reassemble your device, follow these instructions in reverse order.**

After you've completed the repair, [follow this guide](#) to test your repair.