




Samsung Chromebook 3 Bottom Case Replacement

This guide will explain how to remove the bottom case of your Samsung Chromebook 3.

Written By: Austin Blakely

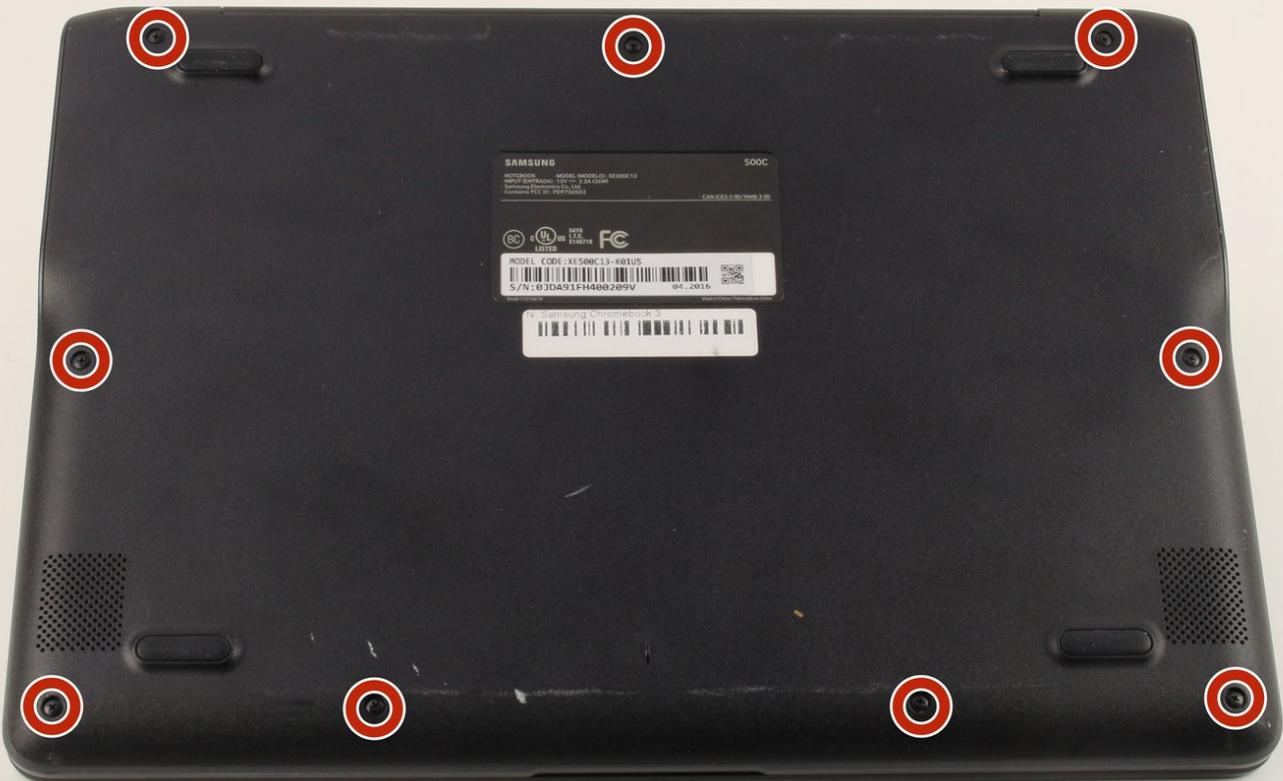

INTRODUCTION

This guide will show you how to remove the bottom case of the Samsung Chromebook 3. This will allow you to get into your device for other repairs or replacements.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Samsung XE500C13 Chromebook Lower Case](#) (1)

Step 1 — Bottom Case



- Place the Chromebook face down so that the bottom case is exposed.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

Step 2



- Use a iFixit opening tool to gently pry the case up from the vent on the hinge side of the Chromebook.
- ⓘ You should hear a popping sound as the connectors disengage inside the case.

Step 3



- Lift the case up and off the device

To reassemble your device, follow these instructions in reverse order.