



# LG K20 PLUS Front Camera Replacement

Written By: Patrick





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Halberd Spudger](#) (1)

## Step 1 — Remove the back cover and battery



- Remove the back cover by inserting a fingernail or opening pick here and disengaging the plastic clips.
- Lift battery up here

## Step 2 — Midframe



- Remove 11 Philips screws.

## Step 3



- Use fingernails or insert an opening pick into the gap between the digitizer and the midframe and pull the midframe outwards to disengage the plastic clips.
- Carefully disengage the clips on the bottom as the headphone jack goes through the midframe.
- Once all the clips have been disengaged, move the midframe outwards and downwards to disengage it from the headphone jack.

## Step 4 — Front Camera



- Use an opening pick or a Halberd spudger to disconnect the front camera flex from its socket on the motherboard.
- The front camera is held in by adhesive. Carefully pry between the camera and its bracket on the frame of the phone to remove it.
- If you're having difficulty removing the front-facing camera, [remove the motherboard](#) to make more room.

To reassemble your device, follow these instructions in reverse order.