




Dell Latitude E7470 Battery Replacement

This guide teaches you how to replace the battery for Dell Latitude E7470 laptop.

Written By: Youyou Yu

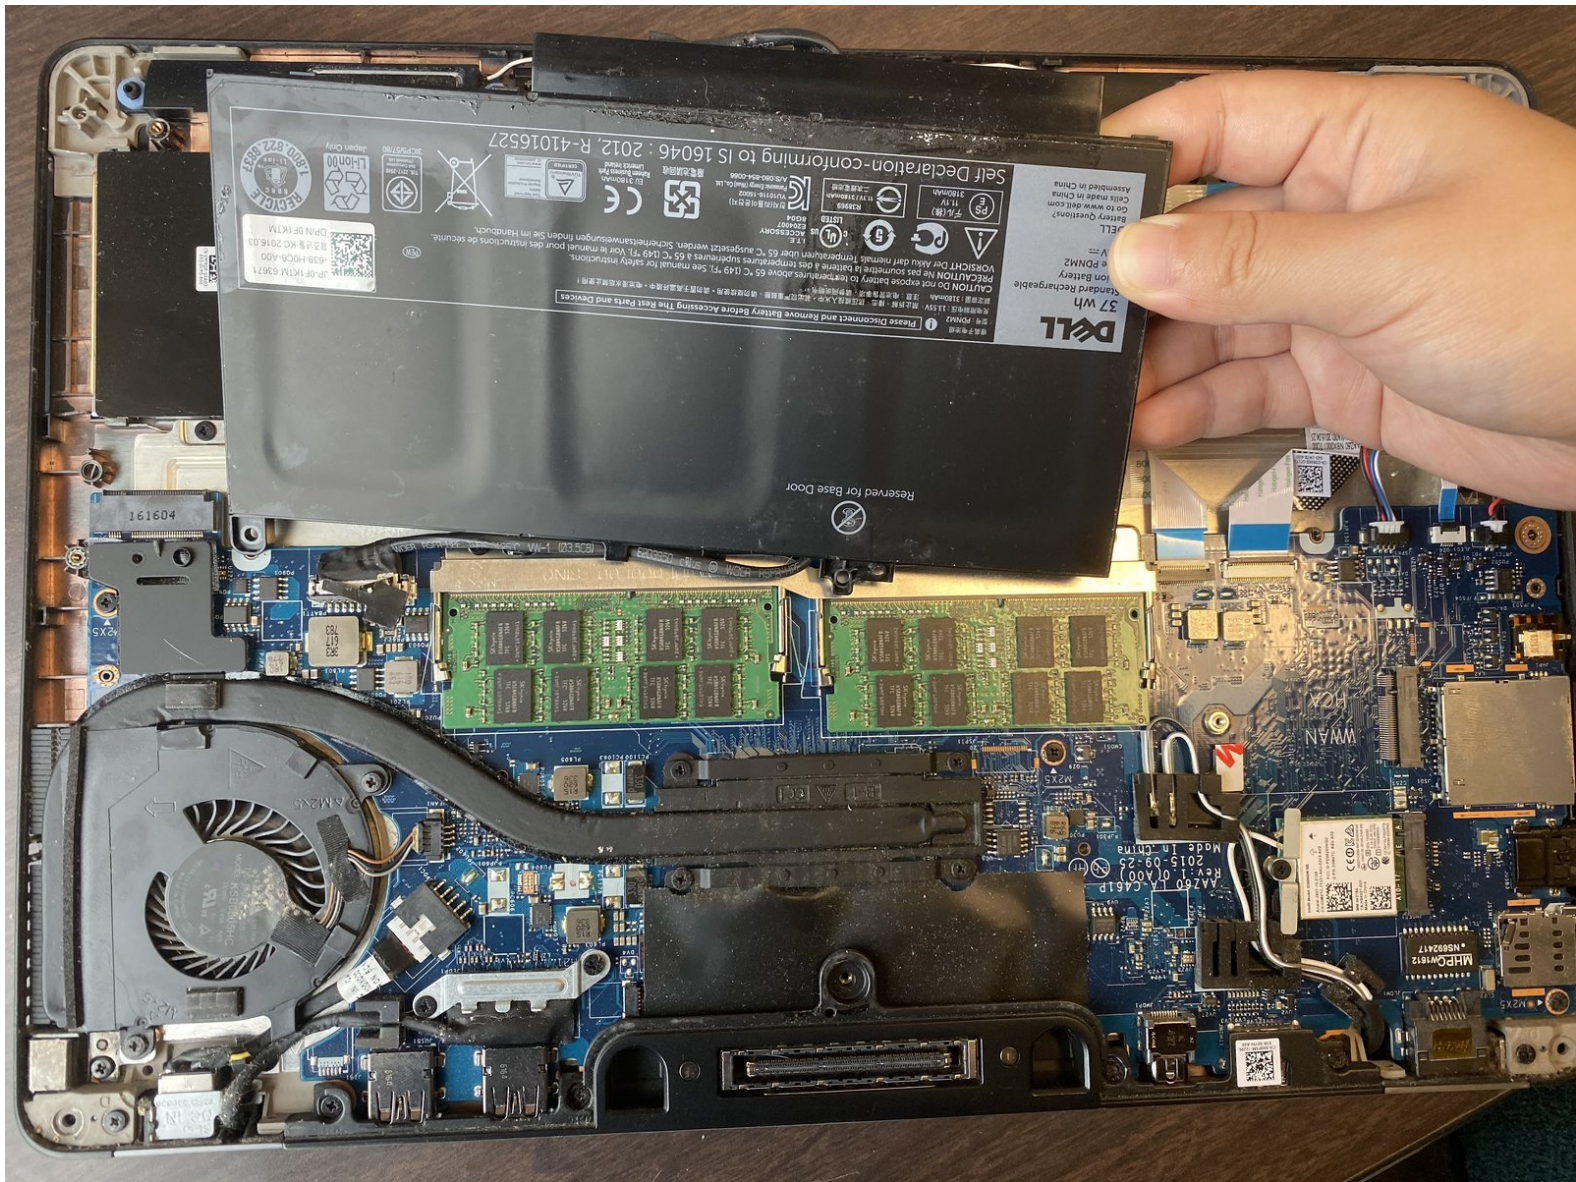

INTRODUCTION

This guide introduces how to remove the battery from Dell Latitude E7470. The laptop comes with different battery configurations. While this guide shows how to replace a standard capacity battery, the procedure is similar when replacing the extended capacity battery.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Dell Latitude 14 E7470 Ultrabook Replacement Laptop Battery](#) (1)

Step 1 — Back Cover




- Remove the eight 4 mm screws on the back cover using a Phillips #0 screwdriver.

Step 2 — Battery

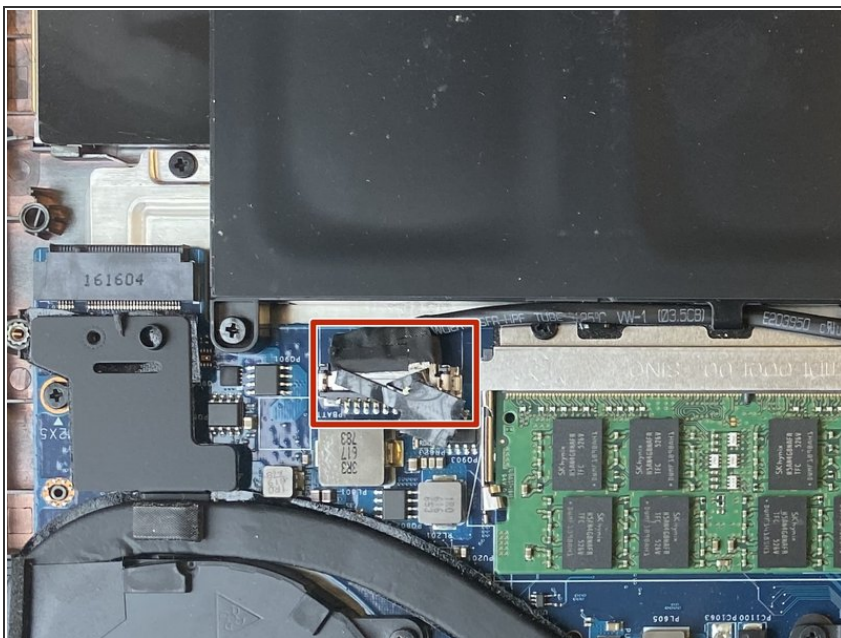


- Use the pull tab on the battery connector to lift the connector straight up off its socket on the motherboard, disconnecting it.

Step 3

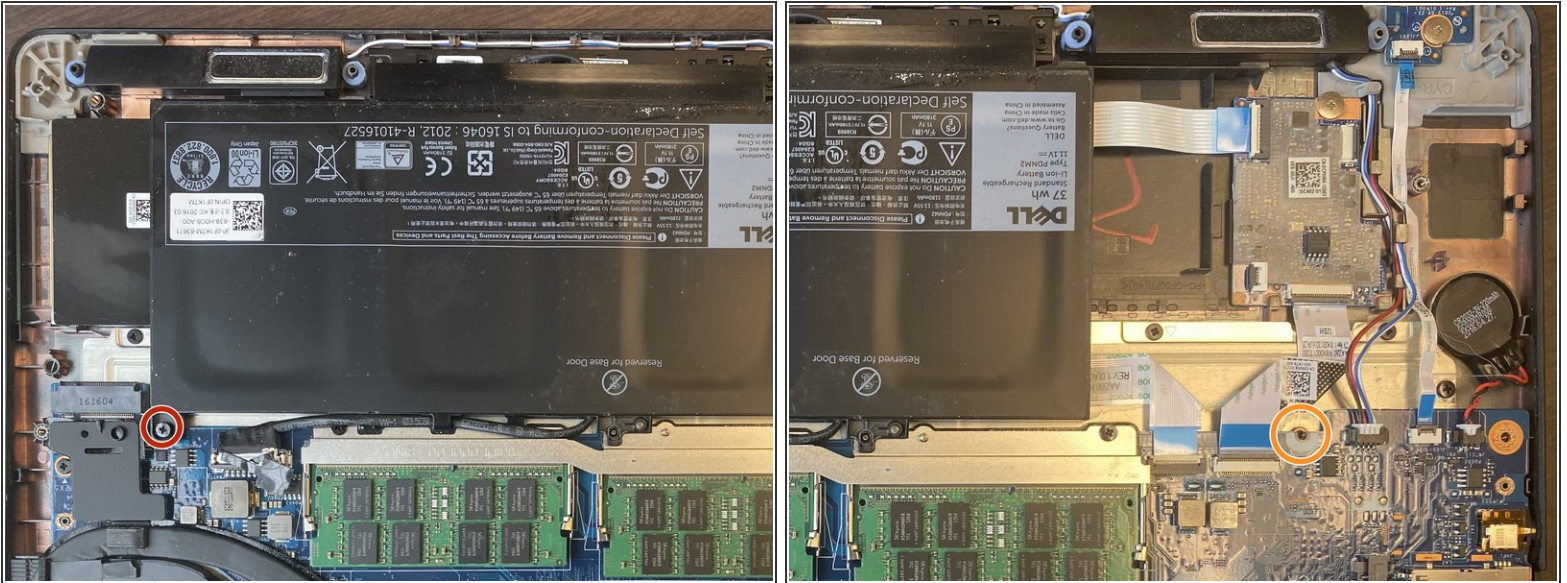

- Remove the single 4 mm Phillips screw securing the bottom left corner of the battery.
- If you are removing an extended capacity battery, remove the Phillips screw securing the bottom right corner of the battery.

Step 4

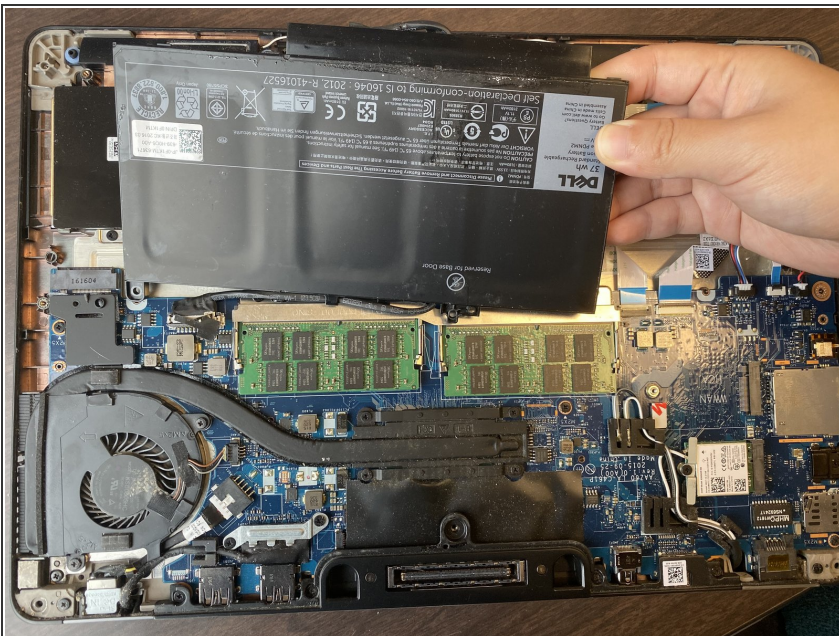

- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.