

Google Pixel 3 XL Flash Diffuser Replacement

This repair guide was authored by the iFixit...

Written By: Arthur Shi



INTRODUCTION

This repair guide was authored by the iFixit staff and hasn't been endorsed by Google. Learn more about our repair guides here.

This guide shows how to remove and replace the plastic flash diffuser on your Pixel 3 XL.



iOpener (1)

Suction Handle (1)

iFixit Opening Picks (Set of 6) (1)

Spudger (1)

Tweezers (1)

iFixit Opening Tool (1)

PARTS:

Google Pixel 3 XL Back Cover Adhesive - Genuine (1)

Step 1 — Heat the edge of the back cover








- <u>Heat an iOpener</u> and apply it to the right edge of the back cover for a minute.
- (i) A hair dryer, heat gun, or hot plate may also be used, but be careful not to overheat the phone—the display and internal battery are both susceptible to heat damage.
- While you wait, note the following areas on the back cover:
 - Strong adhesive—there are large patches of adhesive near the bottom of the phone.
 - Fingerprint sensor cable—be careful not to slice through the cable as you pry

Step 2 — Create a gap under the back cover

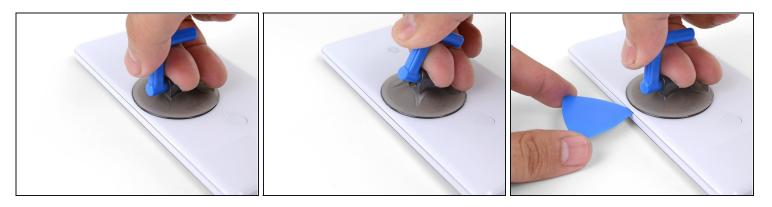

- Apply a suction cup to the heated edge of the back cover, as close to the edge as possible.
- Pull up on the suction cup with strong, steady force to create a gap.
 - Depending on the age of your phone, this may be difficult. If you are having trouble, apply heat to the edge and try again.
- Insert the point of an opening pick into the gap.

Step 3 — Loosen the right edge adhesives



- Slide the opening pick along the right edge to slice through the adhesive.
- The adhesive gums up and becomes hard to slice once it cools. If that happens, re-apply heat to the edge to make slicing easier.
- Once you have sliced through the edge, leave an opening pick in the seam to prevent the adhesive from re-sealing.

Step 4 — Heat the bottom edge of the back cover



 Apply a heated iOpener to the bottom of the back cover for a minute.

Step 5 — Slice through the bottom adhesives



- Use an opening pick to slice around the bottom right corner and continue along the bottom edge of the phone.
- (i) Work slowly as you slice around the corner to prevent the panel from cracking. If the slicing becomes hard, re-apply heat.
- Leave a pick in the edge to prevent the adhesive from re-sealing.

Step 6 — Slice through the remaining edges








- Continue heating and slicing the remaining edges of the phone.
- Be careful as you slice along the left edge of the phone. If your pick feels like it's stuck near the top, you may have snagged the fingerprint sensor. Retract the pick out of the seam slightly and try again.
- Be sure to cut through the thick portions of adhesive near the bottom and right edge of the phone.

Step 7 — Slice through the leftover adhesive



- Gently pry up the right edge of the back cover.
- Use an opening pick to slice through any remaining adhesive along the edges.

Step 8 — Swing open the back cover

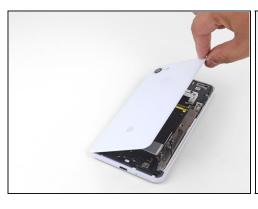






- Swing the right edge of the back cover upwards and rest the flipped panel along the left side of the phone.
- (i) Be sure to maintain slack on the fingerprint sensor cable and prevent it from being pinched.
- During reassembly, this is a good point to power on your phone and test all functions before sealing it up. Be sure to power your phone back down completely before you continue working.
- During reassembly, <u>follow this guide</u> to install custom-cut adhesives for your back cover.
- If you replaced the fingerprint sensor, you'll need to use this software tool to make the phone recognize the new sensor.

Step 9 — Remove the fingerprint sensor tape

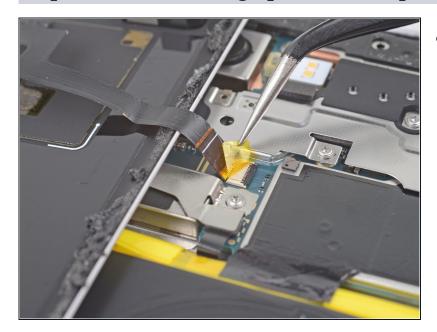

 User <u>tweezers</u> to carefully peel up the yellow tape over the fingerprint sensor connector.

Step 10 — Disconnect the fingerprint sensor



- Use the point of a spudger to carefully flip up the black lock bar on the fingerprint sensor's ZIF socket.
- Grasp the cable's tab with your fingers or tweezers and gently walk the flex cable out of the socket.
 - ① To prevent shorting, be careful not to touch the metal contacts on the flex cable with your tweezers.

Step 11 — Remove the back cover



- Remove the back cover.
- Follow this guide to correctly apply new back cover adhesive.

Step 12 — Remove the flash diffuser



- Insert the edge of an opening tool underneath the plastic flash diffuser and slowly pry up to loosen the diffuser.
- Remove the diffuser.

To reassemble your device, follow these instructions in reverse order.

Repair didn't go as planned? Ask our **Answers community** for help.