



# Dell XPS M1730 M1730 Battery Replacement

This guide describes how to replace the battery...

Written By: Amia Frazier

## INTRODUCTION

This guide describes how to replace the battery for the Dell XPS M1730 M1730.

## Step 1 — Extracting the Hinge Cover



**⚠ CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the [Product Information Guide](#)

- 🔧 NOTICE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on the back of the computer)
- 🔧 NOTICE:** To help prevent damage to the system board, you must remove the battery from the battery bay before you begin working inside the computer.
- Remove the hinge cover (see "Removing the Hinge Cover" on page 25 in the [owner's manual](#)).

## Step 2 — Extracting the Keyboard



- Remove the keyboard (see "Removing the Keyboard" on page 27 in the [owner's manual](#)).

### Step 3 — Remove Battery From the System Board



- Disconnect the coin-cell battery cable from the system board.

### Step 4



- Remove the battery from the compartment on the system board by using a scribe or small screwdriver to lift one side of the battery at the notch in the plastic connector, being careful not to break the plastic.

## Step 5



- Grasp the battery and pull it out of the battery compartment.

## Step 6



- To install the coin-cell battery:
- ⓘ Insert the edge of the coin-cell battery into the plastic battery compartment under the lip on the compartment.
- ⓘ Carefully press the coin-cell battery into the compartment, being careful not to break the plastic.

## Step 7



- Replace the keyboard (see "Replacing the Keyboard" on page 28 in the [owner's manual](#)).

## Step 8



- Replace the hinge cover (see "Replacing the Hinge Cover" on page 26 in the owner's manual).

To reassemble your device, follow these instructions in reverse order.