



# Dell XPS M1710 MXG061 Battery Replacement

How to replace the battery for the Dell XPS M1710.

Written By: Amia Frazier

## INTRODUCTION

This guide will demonstrate how to replace the battery for Dell XPS M1710.

## Step 1 — Removing the Battery



**⚠ CAUTION:** Before performing these procedures, turn off the computer, disconnect the AC adapter from the electrical outlet and the computer, disconnect the modem from the wall connector and computer, and remove any other external cables from the computer.

**ℹ NOTICE:** You must remove all external cables from the computer to avoid possible connector damage.

**⚠ CAUTION:** Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The battery is designed to work with your Dell™ computer. Do not use a battery from other computers with your computer.

- If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.
- Ensure that the computer is turned off.
- Slide and hold the battery-bay latch release on the bottom of the computer, and then lift the battery from the bay.

## Step 2 — Replacing the Battery



- To replace the battery, place the battery in the bay and press down until the battery-bay latch release clicks.

To reassemble your device, follow these instructions in reverse order.