



# Lenovo ThinkPad T580 Screen Replacement

This guide will show how to replace the screen on a Lenovo ThinkPad T580.

Written By: Ben Elkayam



## INTRODUCTION

Welcome to the screen replacement guide for the Lenovo Thinkpad T580.

This guide will detail the steps necessary to replace the external screen.

The most common reasons why this component would need to be replaced is because:

- The screen is damaged
- The screen has bright spots or flickering zones
- The screen does not power on

There are no specialized skills required for replacing the screen.



### PARTS:

- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Screen



- Remove the screen case with a plastic opening pick.
- Unhook any stubborn clips with the hook part of the Halberd spudger.

## Step 2




- Remove all the screws holding down the screen.

## Step 3



- Remove the protective tape from the screens cable with a spudger.
- Undo the latch holding the cable to the screen with a spudger.

## Step 4

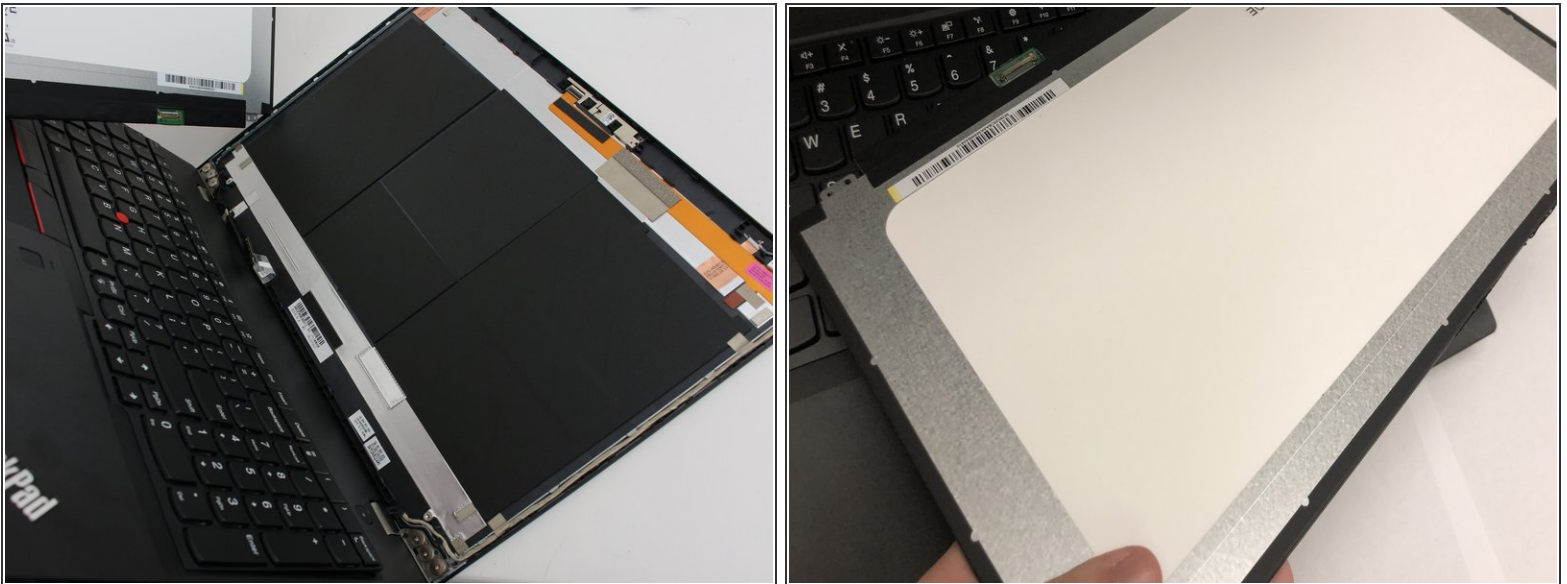

- Remove the screen from the computer.

To reassemble your device, follow these instructions in reverse order.