

# Nikon D500 Memory Card Cover Disassembly

Make sure to remove any memory cards and the...

Written By: Wolphin



# INTRODUCTION

Make sure to remove any memory cards and the battery before doing these steps.

---


## TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Prying and Opening Tool Assortment](#) (1)

---

## Step 1 — Remove Memory Card(s) and Battery

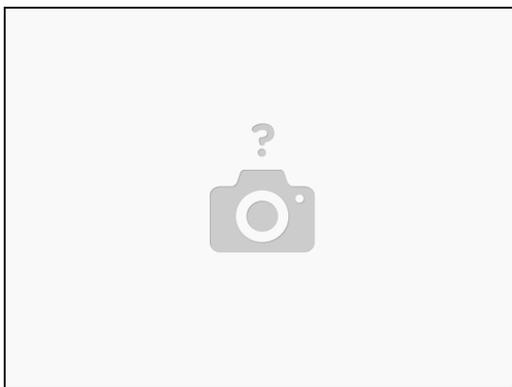

- Remove the Memory Card(s) from the camera
- Remove the Battery from the Camera, and close the battery compartment cover

## Step 2 — Remove 2 exposed screws



- Remove the 2 screws beside the memory slots, then close the cover.
- Note: make sure to remove the memory cards first!

## Step 3 — Remove 2 screws under grip




- Remove the 2 screws under the rubber grip part by peeling back the rubber grip
- Try not to damage the double sided adhesive under the rubber.

## Step 4 — Remove 2 screws under rear grip



- Remove the 2 screws under the rubber pad marked in red.
- Try not to damage the double-sided adhesive under the rubber.
- Note: There is a 3rd screw under the flap, which holds the back to the top (marked in yellow). If needing to remove the back panel not just the memory cover flap, it can be removed at this time as well.

## Step 5 — Lift out panel

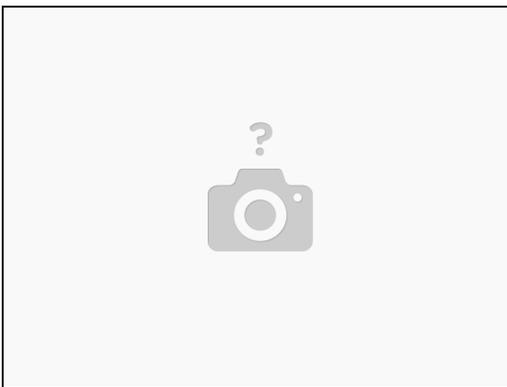

- Lift out the assembly panel, it should come free without much force.
- May open the panel to release it.

To reassemble your device, follow these instructions in reverse order.