




Sony Cyber-shot DSC-T9 Front Cover Replacement

This guide gives instructions on how to remove the front cover of the Sony Cyber-shot DSC-T9 camera.

Written By: Stephannie Allen

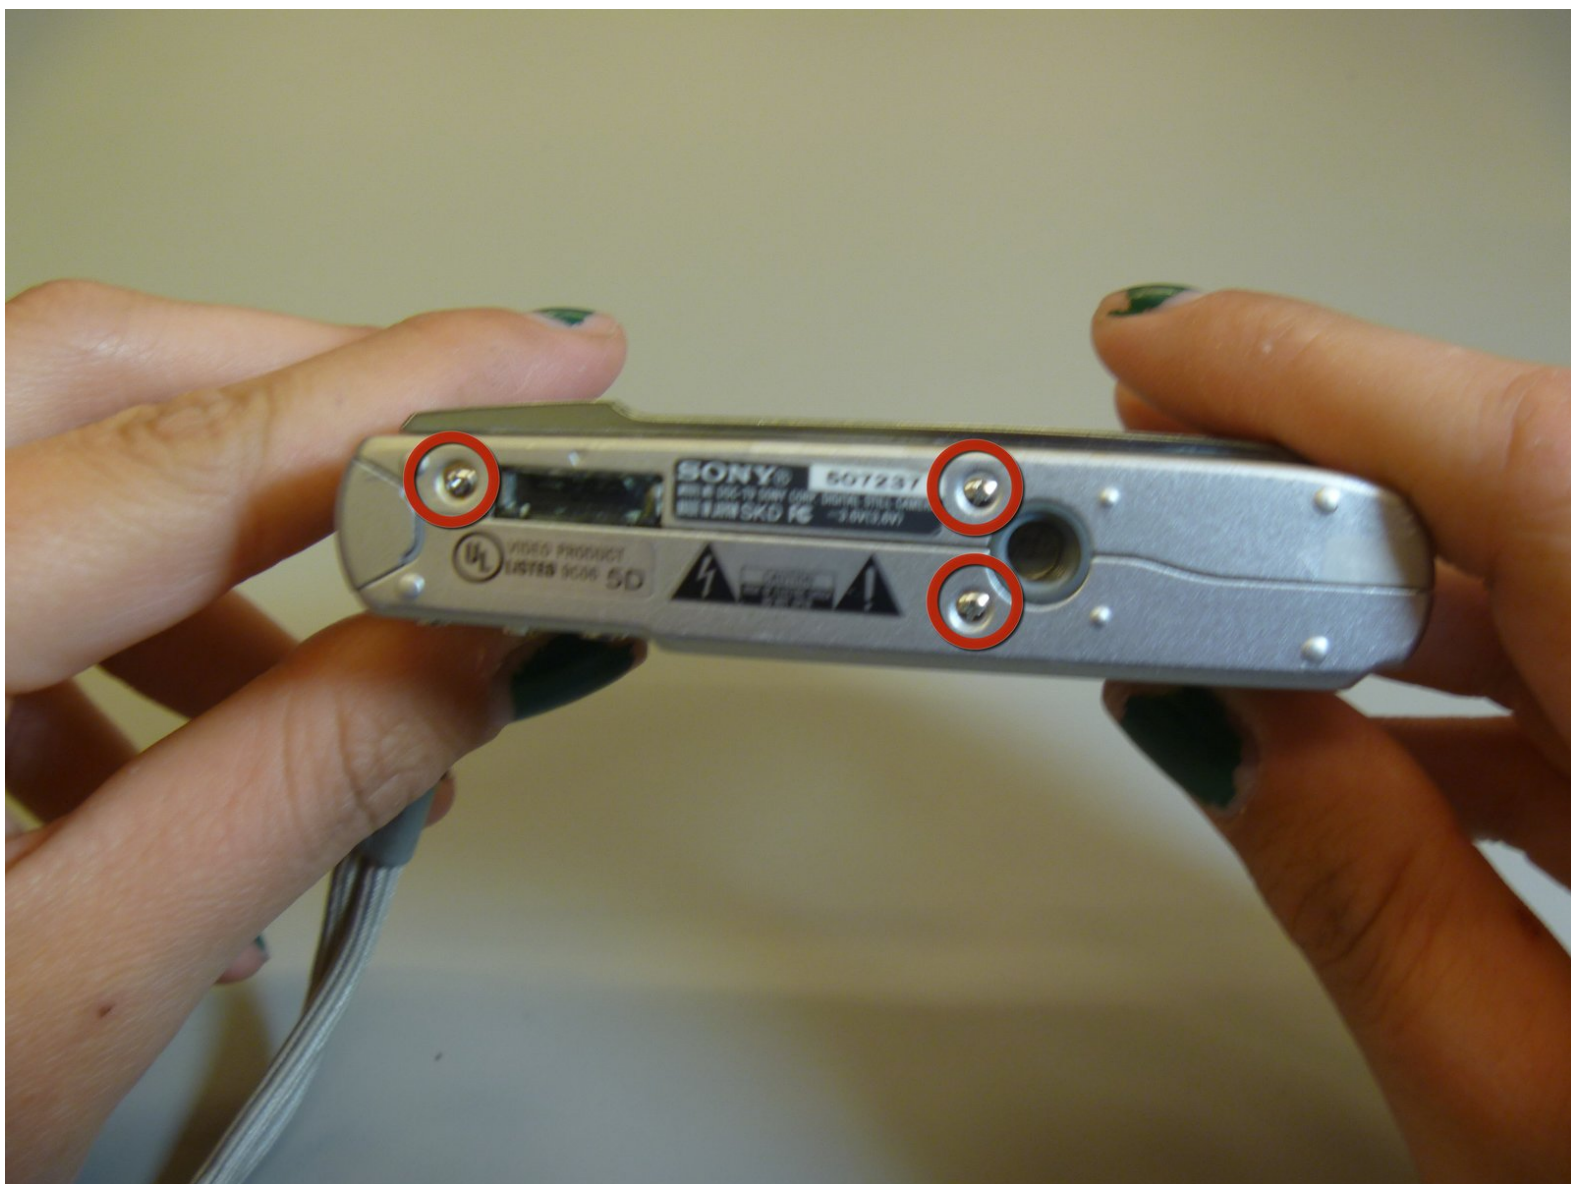

INTRODUCTION


This guide will allow the user to remove the front cover of the camera, necessary for most other steps.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

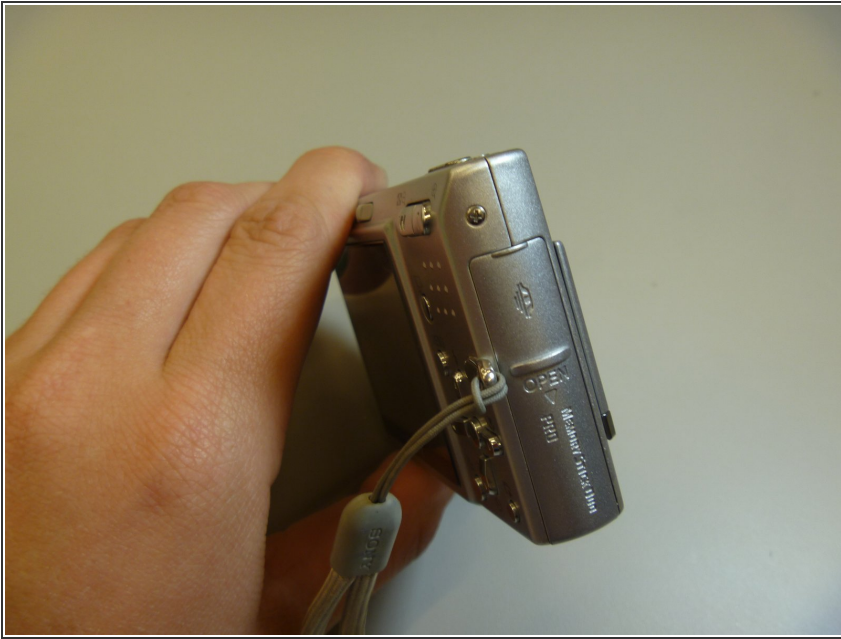

- The battery cover is located on the right side of the camera.
- Slide the cover to expose the battery.

Step 2

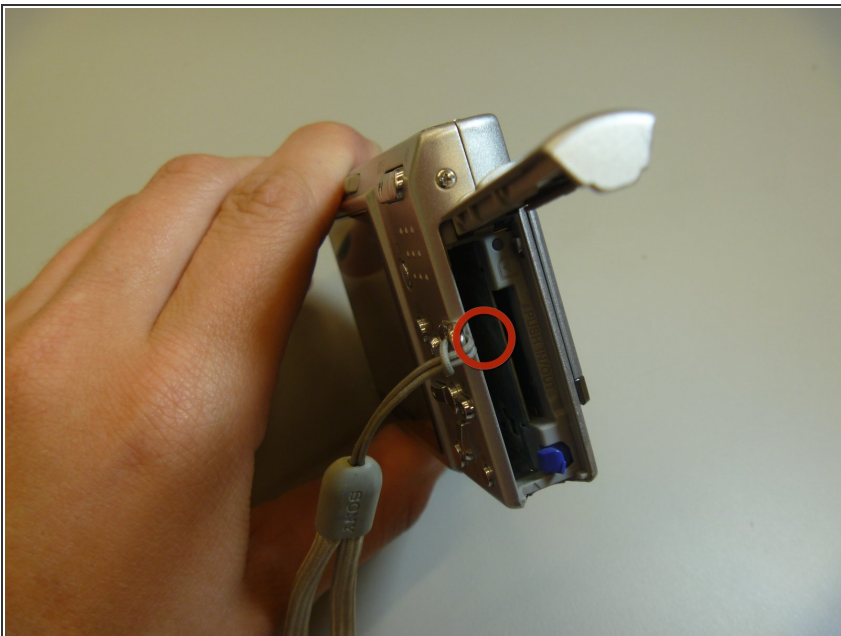

- Ensure that the battery lines up properly with the slot in the camera.
- Slide battery in.
- Slide cover closed.
- ⓘ Battery not shown

Step 3 — Front Cover




- Remove screws from outside of camera. There are 6 screws total.
- 3 screws on underside.
- 1 screw on right side, near battery cover.
- 2 screws on left side.

Step 4




- Use screwdriver to remove screws.

Step 5

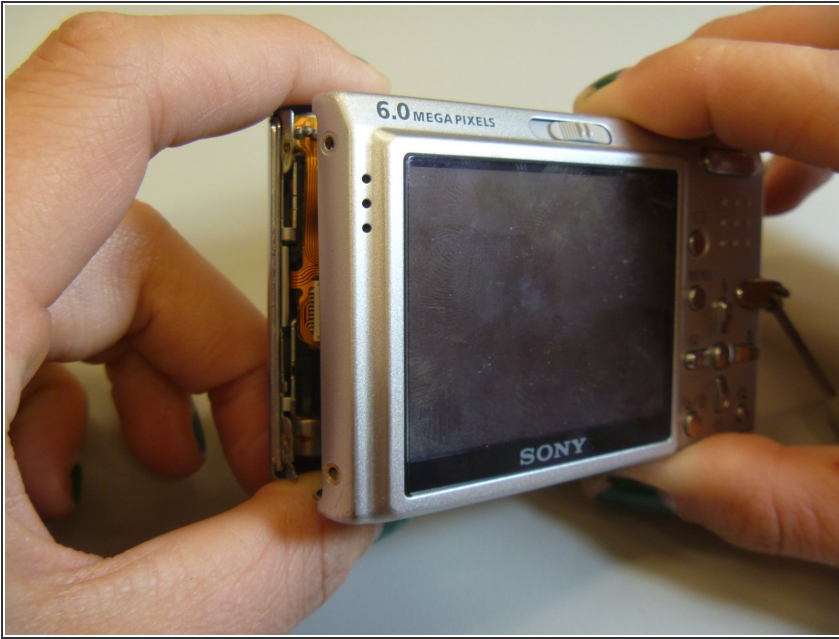

- Gently pull the front cover off of the main camera.
- All of the inner parts of the camera are attached to the back screen.

Step 6

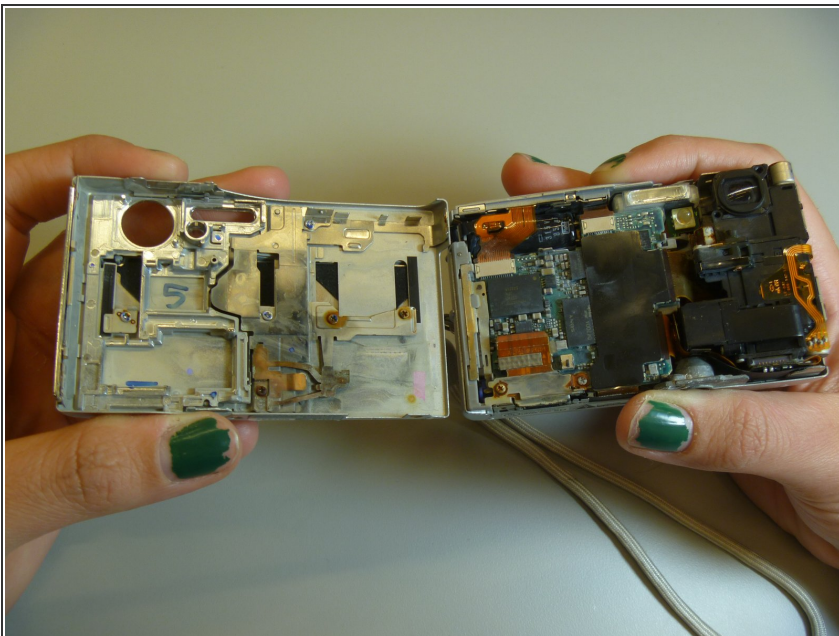

- The front cover is now removed from the camera and the internal hardware is now exposed.

To reassemble your device, follow these instructions in reverse order.