



# MiTM Air Compressors AM1HE0205HD 2014

## Pump Gaskets Replacement

Remove or replace the pump gaskets in a MiTM Air Compressor AM1HE0205HD 2014.

Written By: Adam O'Camb



## INTRODUCTION

Use this guide to remove or replace the pump gaskets in a MiTM Air Compressor AM1HE0205HD 2014.



### TOOLS:



- [3/8" Drive Ratchet](#) (1)
- [10mm Socket](#) (1)




### PARTS:

- [Mi-T-M Gasket 70-0630](#) (1)

## Step 1 — Power off the compressor

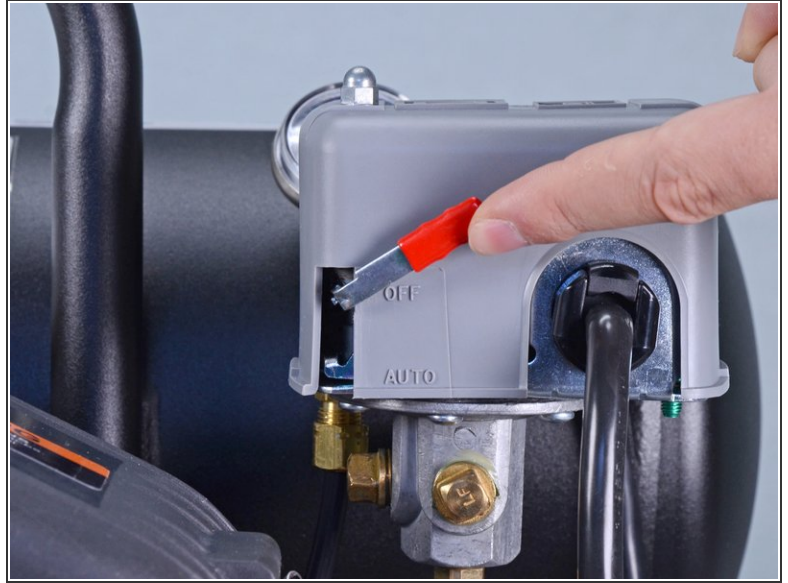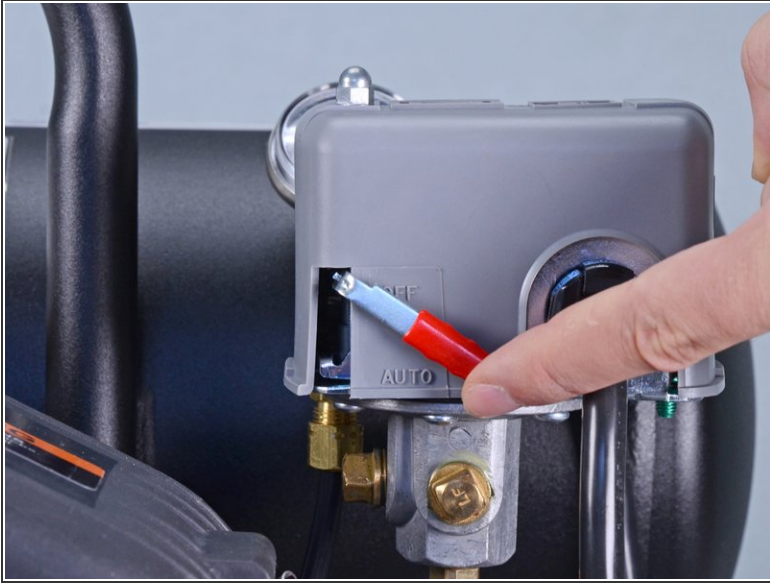

 Before you begin, ensure the device is powered down and cool to the touch.

- Ensure the compressor is unplugged.
- Flip the pressure switch lever up to the **off** position.




## Step 2 — Drain the air from the compressor



- Pull the ring on the safety release valve away from the compressor tank to drain the air from the compressor.
- ⓘ Ensure all air is drained from the tank before beginning repairs.

## Step 3 — Remove the pump head

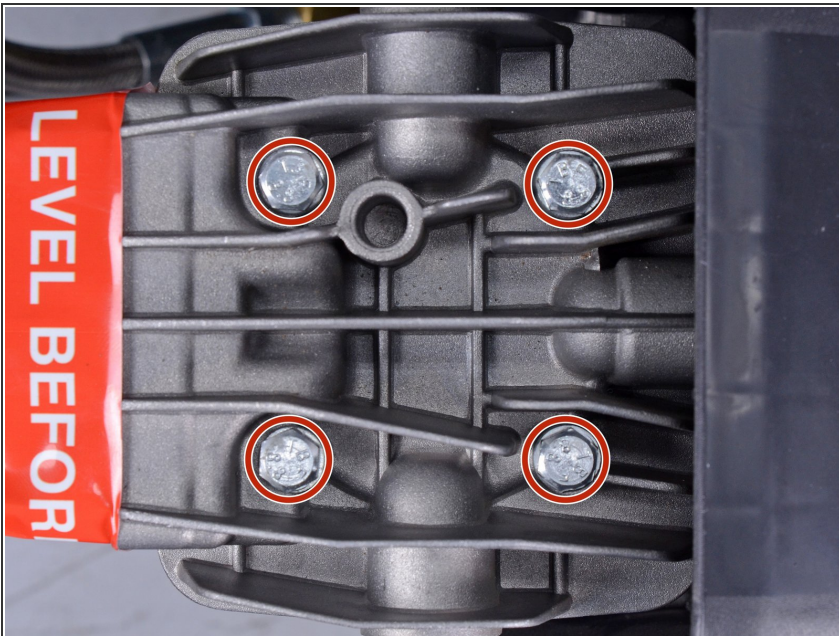

- Use a 10 mm socket to remove the four bolts securing the pump head.
- ⓘ These bolts have washers, take care not to lose them.

## Step 4



- Lift the pump head off of the cylinder and gently set it aside.
  - ⓘ Take care to avoid stressing the hoses connected to the pump head.
- ⚠ For the rest of this guide, note the order and orientation of everything you remove for correct reassembly.




## Step 5 — Remove the upper valve plate



- Remove the upper valve plate.
- ⓘ Take care not to lose the small rectangular valves sitting on the plates.

## Step 6 — Remove the pump head gasket

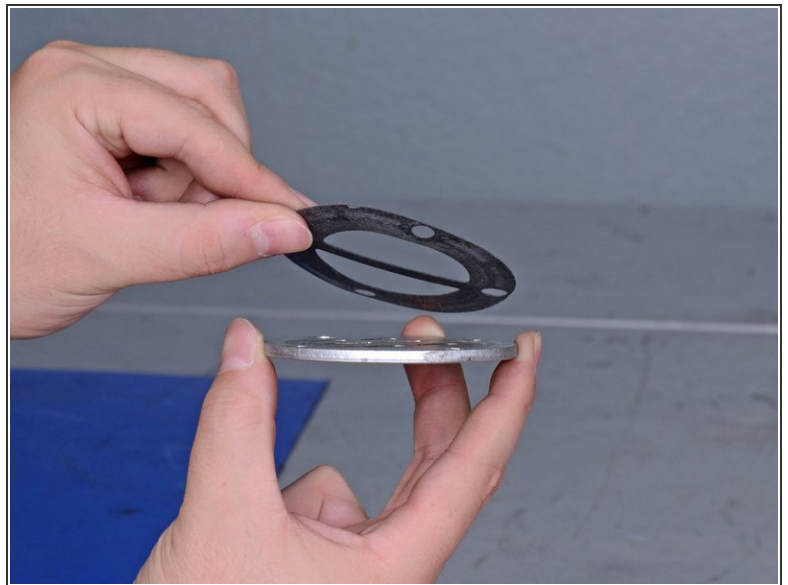


- Peel the pump head gasket off of the upper valve plate.
- ⓘ The pump head gasket may have stuck to the bottom of the pump head. If this is the case, remove it from the pump head.

## Step 7 — Remove the lower valve plate



- Remove the lower valve plate.

## Step 8 — Remove the valve plate gasket

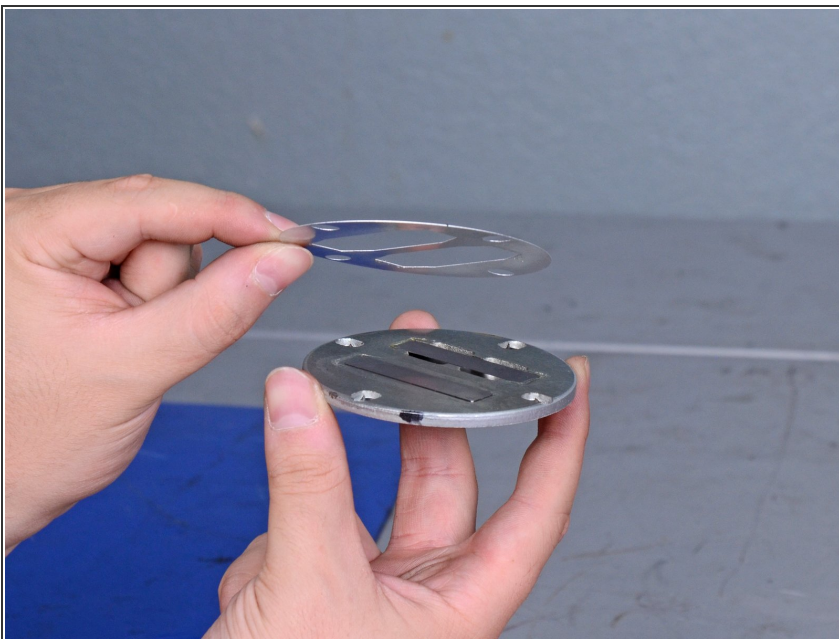

- Remove the valve plate gasket from the lower valve plate.
- ⓘ The valve plate gasket may have stuck to the bottom of the upper valve plate. If this is the case, remove it from the upper valve plate.



## Step 9 — Remove the cylinder gasket



- Peel the cylinder gasket off of the cylinder.
  - ❗ The cylinder gasket may have stuck to the bottom of the lower valve plate. If this is the case, remove it from the lower valve plate."
- ★ During reassembly, make sure to install everything in the correct order and orientation. Use the last image in this step or [the device diagram](#) for reference.

To reassemble your device, follow these instructions in reverse order.