



# Dell Latitude E6400 CMOS/Coin Cell Battery Replacement

Written By: Aaron Thomas





## TOOLS:

- [Phillips #0 Screwdriver](#) (1)



## PARTS:


- [Replacement CMOS Battery for Dell Latitude E6400](#) (1)

## Step 1 — Battery




- First, turn off your laptop and disconnect any external adapter.

## Step 2

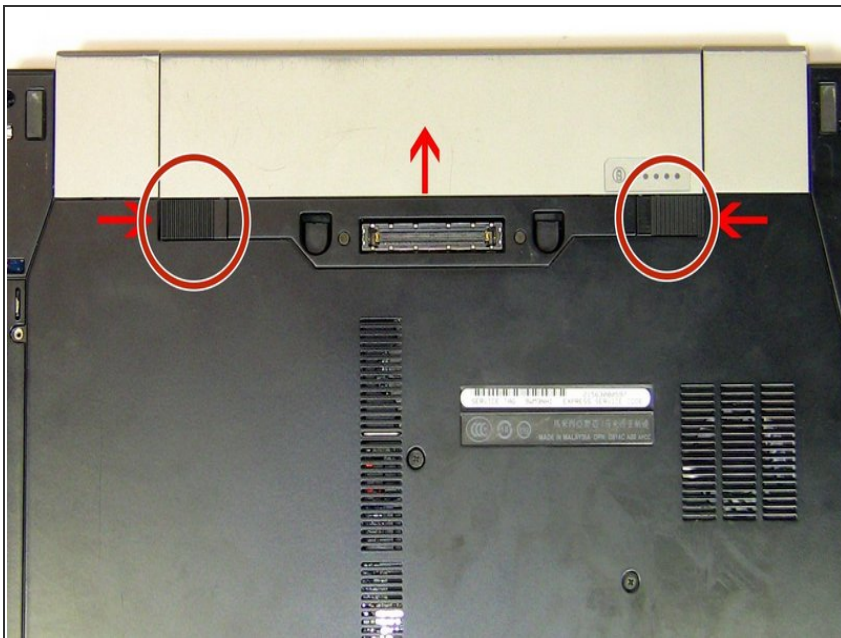


- Release the latch or latches connected to the battery that hold it in place.

### Step 3

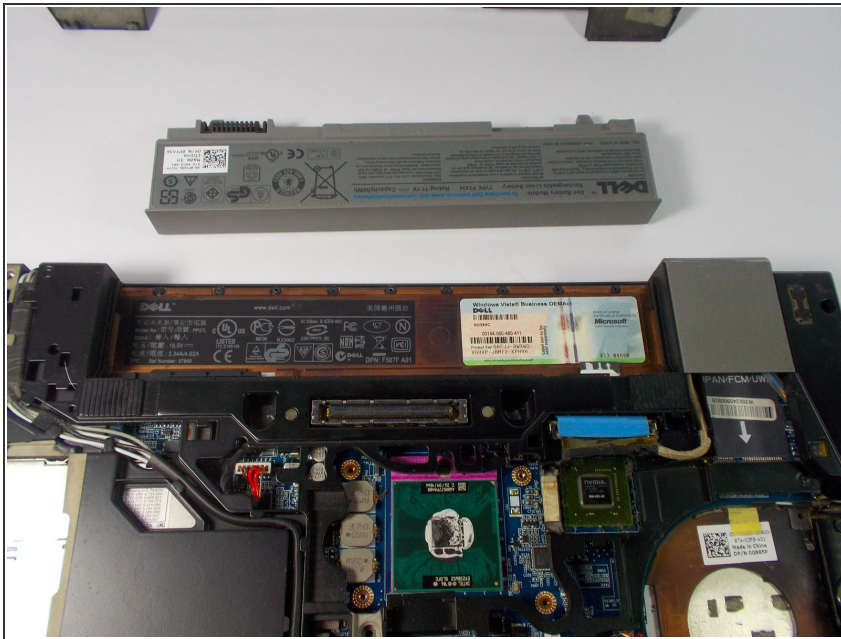


- Remove the old battery from its storage bay.

### Step 4

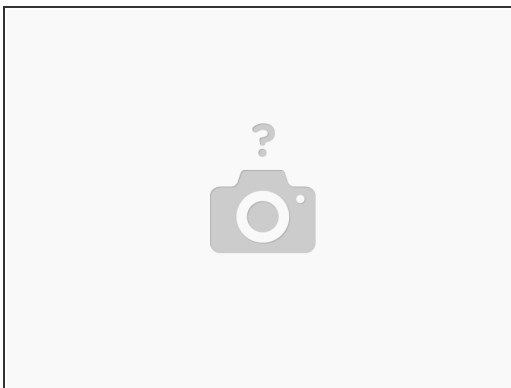


- Plug in the external AC adapter to fully charge the new battery.

## Step 5 — Remove the access panel

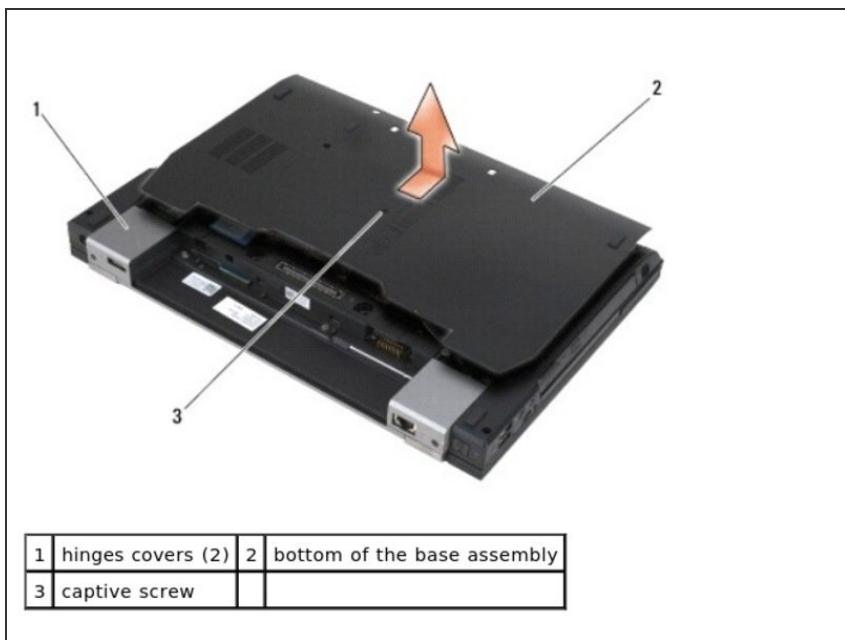


- After removing the battery, loosen the screw holding the access panel in place. Then, slide the access panel away from the hinge covers, and lift to remove the access panel..

## Step 6 — Remove the coin-cell battery

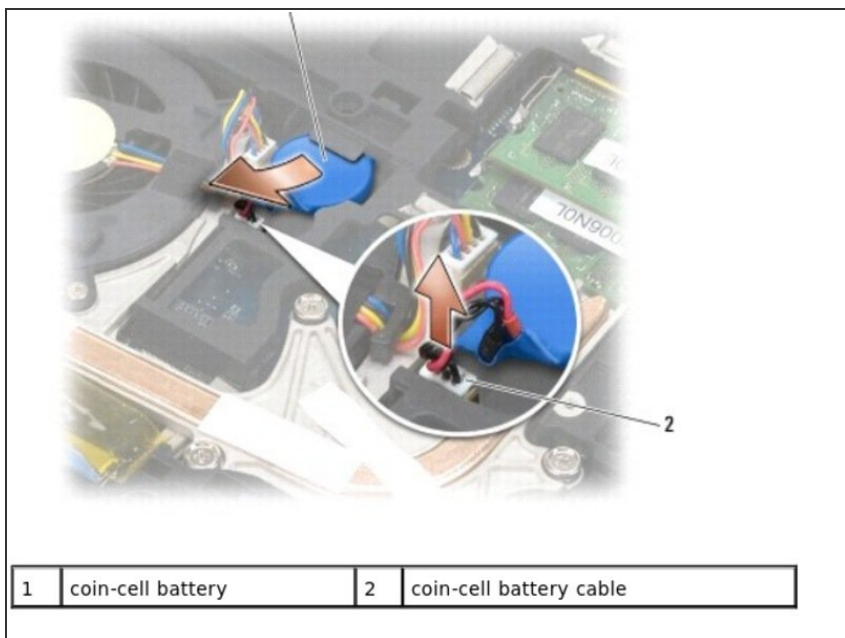

- Pry up the coin-cell battery to release the double-stick adhesive tape on the bottom of the coin-cell battery, then lift it out of the computer. Then, disconnect the coin-cell battery cable from the system board.

## Step 7 — Install new coin-cell battery

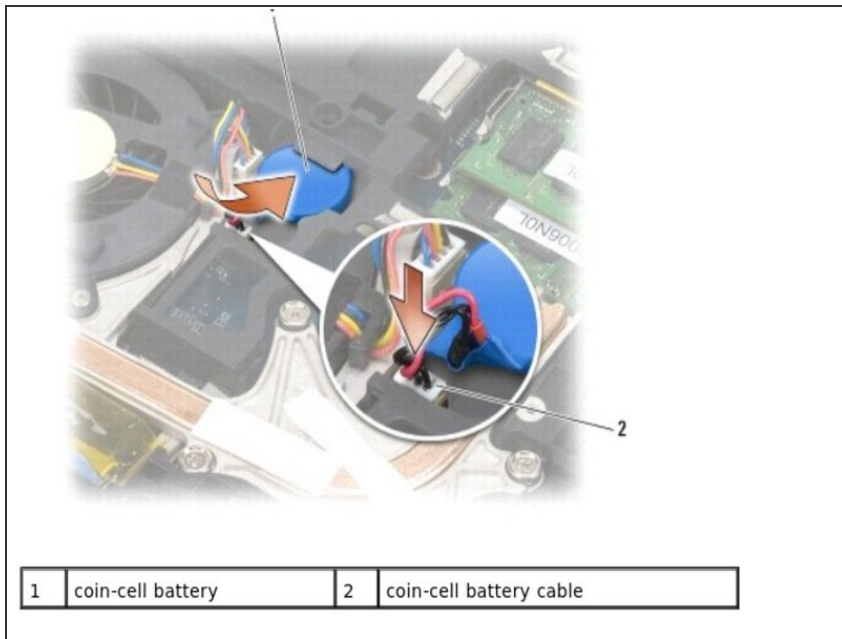

- With your replacement battery, coin-cell battery cable to the system board. Then, remove the adhesive backing paper from the coin-cell battery. Slide the battery under the tab, then press down to seal the tape on bottom.

Reassemble your device by performing the instructions above in reverse order.