



Dell Latitude E6520 CMOS/Coin Cell Battery Replacement

Written By: Aaron Thomas





TOOLS:

- [JIS #0 Screwdriver](#) (1)



PARTS:

- [Replacement CMOS Battery for Dell Latitude E6520](#) (1)

Step 1 — Bottom Cover




- Remove the ten 8.6 mm JIS #0 screws.

Step 2



- Place fingers underneath cover and pull off the cover.

Step 3 — Disconnect coin-cell battery

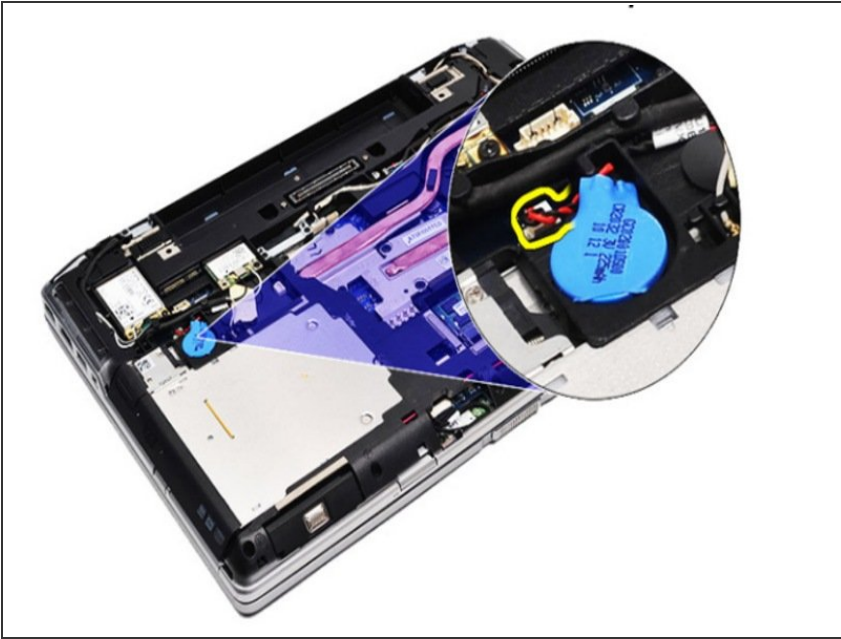

- Disconnect the coin-cell battery cable from the system board.

Step 4 — Remove coin-cell battery.



- Release and remove the coin-cell battery from the computer

With your new CMOS battery, reassemble your device by performing the instructions above in reverse order.

