


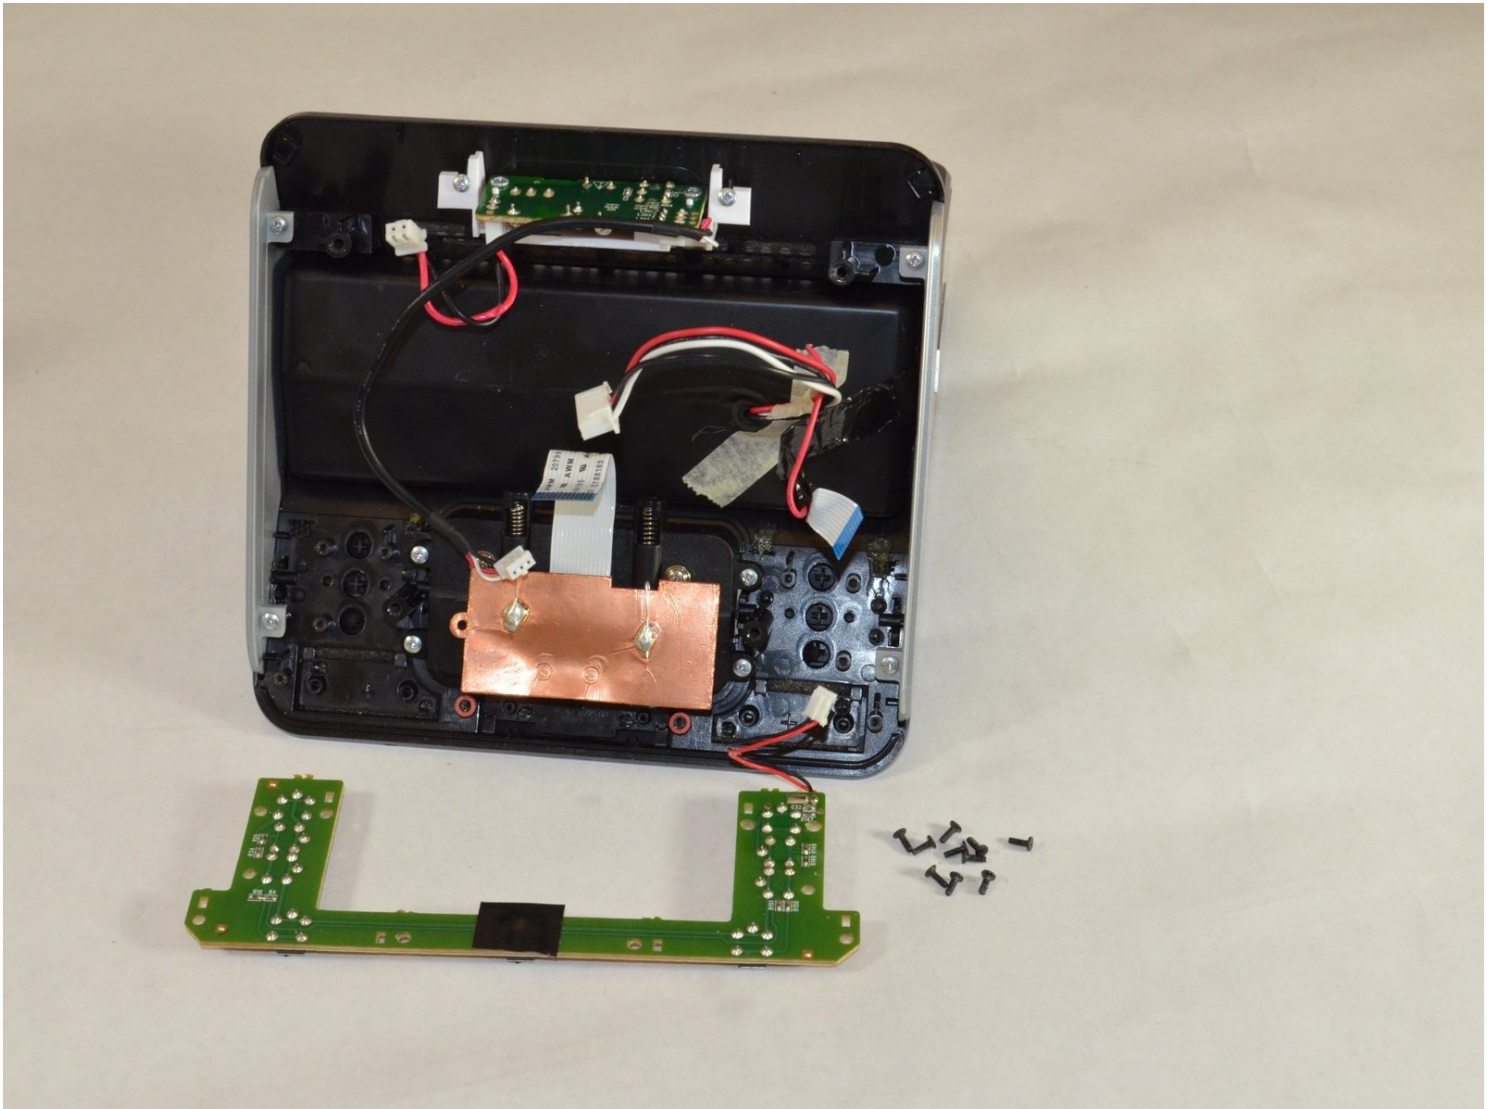

Philips DC320 37 Bottom Button Circuit Board Replacement

Follow the procedure outlined in this guide to...

Written By: Greg Lane



INTRODUCTION

Follow the procedure outlined in this guide to remove and install the circuit board for the device's bottom buttons.

TOOLS:

Phillips #00 Screwdriver (1)

Phillips #2 Screwdriver (1)

Spudger (1)

Step 1 — Docking entertainment system



- Pry off the four white feet with the pointed end of the spudger

Step 2



- Gently unscrew the four 15.5 mm Phillips #2 screws that hold the bottom panel to the dock.


Step 3



- Use the flat end of the spudger to pry the lid off from the two connectors holding it to the body of the dock.

⚠ The connectors on the panel are fragile and may break.

Step 4

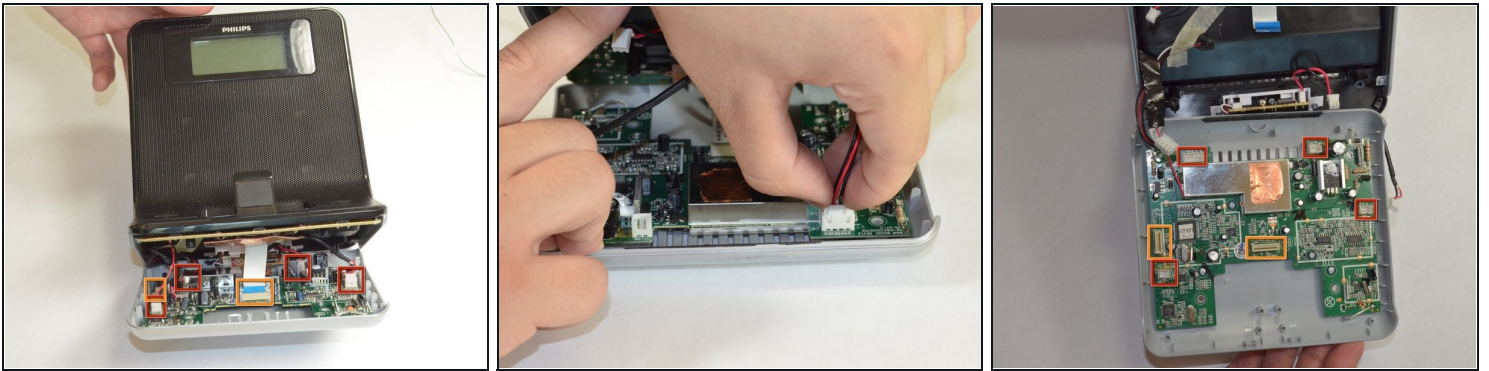

- Carefully pull up and out the four electrical connectors and two ribbon connectors that connect the bottom panel to the dock.


- Electrical Connectors

- Ribbon Connectors

⚠ The cables do not have a lot of slack in them. Be careful not to break the connectors.


⚠ One wire is soldered onto the bottom panel. Be careful not to break this bond.

Step 5 — Bottom Button Circuit Board

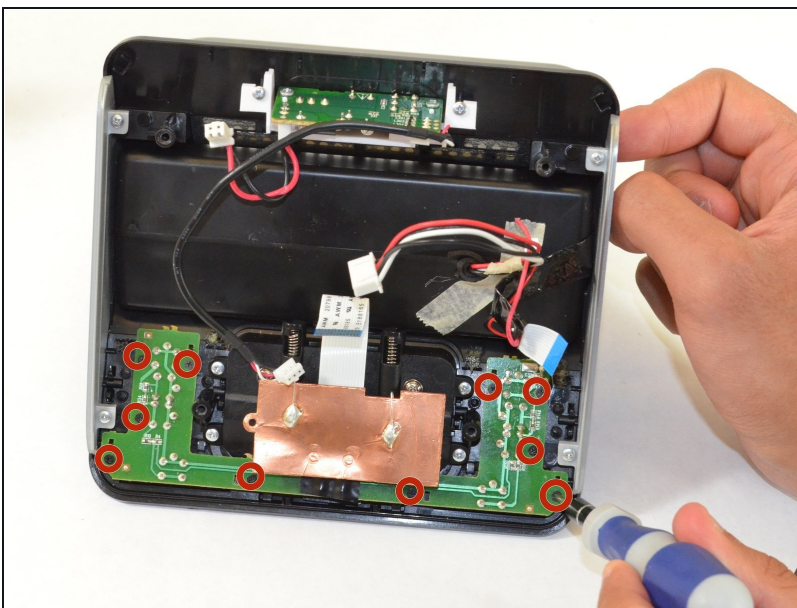

- Unscrew the ten 6 mm Phillips #00 screws holding the board in place.

Step 6

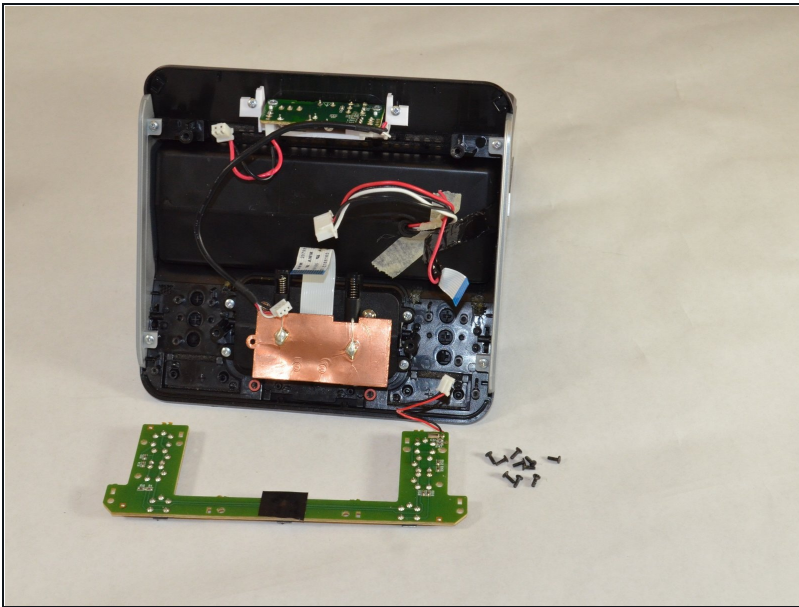

- Pull the board out from the dock

To reassemble your device, follow these instructions in reverse order.