


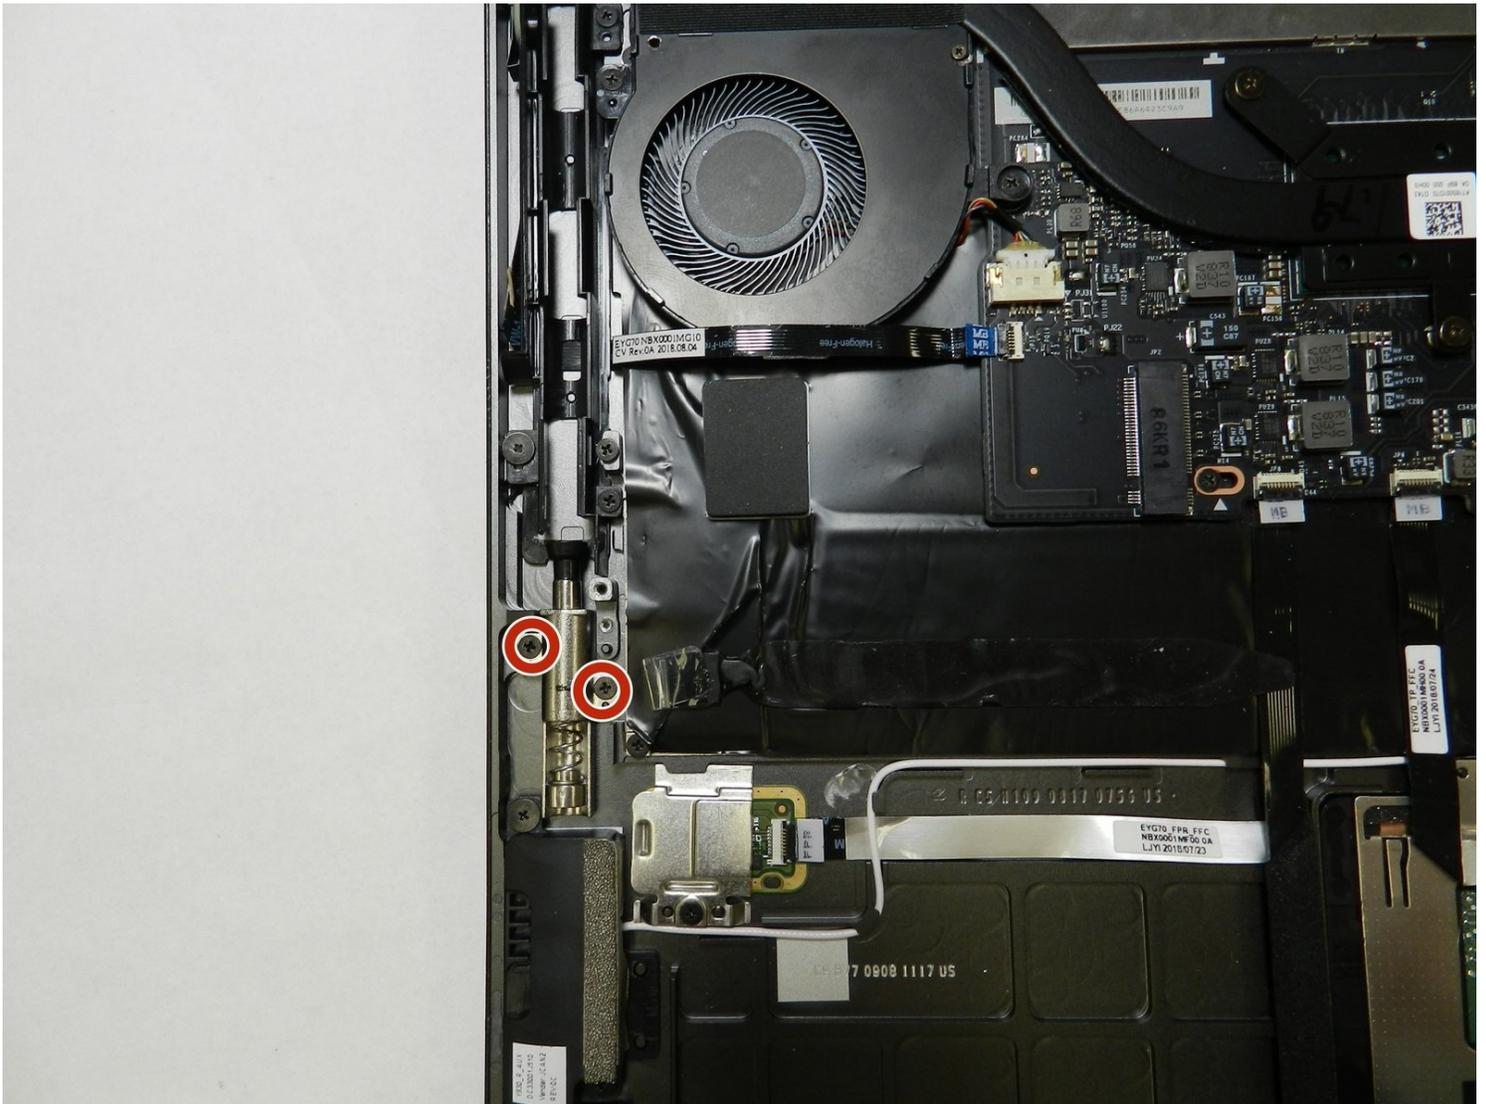

# Lenovo Yoga C930-13IKB Power Button Board Replacement

This guide includes all the steps, tools, and...

Written By: Lucas Parton



# INTRODUCTION

This guide includes all the steps, tools, and parts necessary to disassemble the Lenovo Yoga C930-13IKB to access and replace the power button board.

## TOOLS:

[Phillips #00 Screwdriver](#) (1)  
[T5 Torx Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)  
[Tweezers](#) (1)

## PARTS:

[5C50S73005 - Lenovo Yoga Laptop Power Board](#) (1)

## Step 1 — Back Cover



- Flip the device over so that the underside is facing up.
- Remove the six 3.5 mm T5 Torx screws.

## Step 2



- Pry off the back cover using the plastic opening tool.
- Loosen the back cover in multiple spots using the opening tool, then remove the whole back.
- ⓘ You may have to run the plastic tool along the edges until you find a small gap to separate the back cover from the laptop.

**⚠ Do not use a metal tool when working with your device.**

### Step 3



- Carefully lift the cover off with your hands.

### Step 4 — Battery




- Unplug the battery from the motherboard by pinching the cables with your fingers and tugging out with force.

ⓘ Use the spudger for assistance.



## Step 6

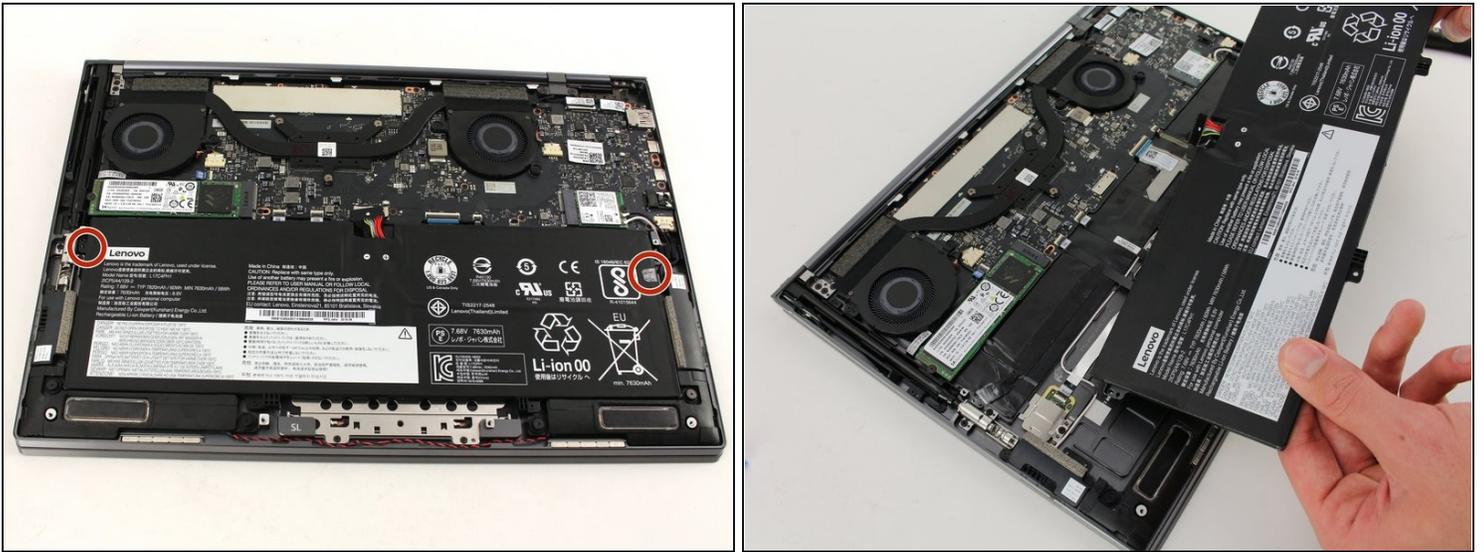

ⓘ The battery is still held in place with two stretch-release adhesive strips, [similar to ones found in an iPhone](#).

- Use your fingers to pry up the clear plastic pull-tab for one of the stretch release adhesives.
- Grasp the pull-tab and slowly pull away from the battery at a shallow angle. The adhesive strip will stretch to many times its length and slowly release from underneath the battery.
- Repeat the procedure for the second strip on the opposite side of the battery.

⚠ Be careful not to bend the battery. Breaking the battery is dangerous.

- Remove the battery with your hands.

## Step 7 — SSD




- Remove the screw ( 2 mm with a 5 mm head) that connect the SSD to the motherboard using a Phillips #00 screwdriver.

## Step 8




- Pinch the left side of the SSD card.
- Pull gently to the left, horizontal to the laptop.

## Step 9 — Power Button Board

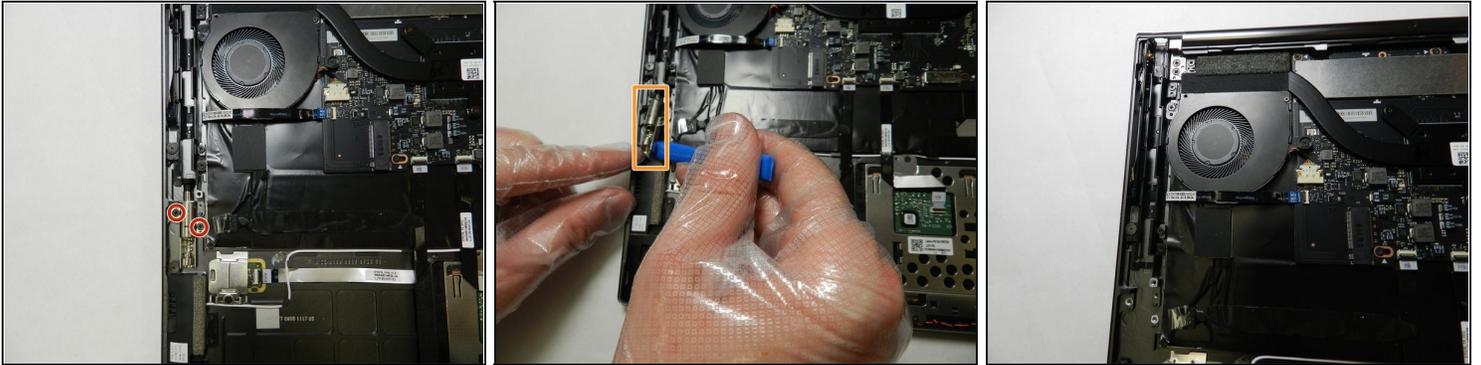


- Unscrew the two 2mm screws using a Phillips #00 screwdriver.
- Gently lift out the digital pen spring using the iFixit opening tool.

## Step 10

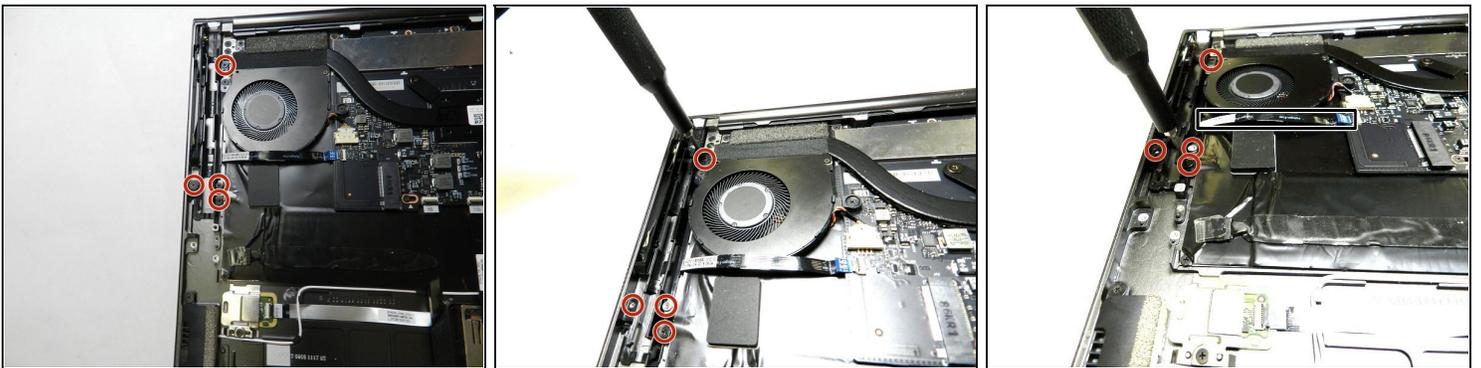


- Remove four 2 mm screws from the digital pen holder using a Phillips #00 screwdriver.
- ⓘ Do not remove the pen holder until the attached ribbon cable is uninstalled.

## Step 11

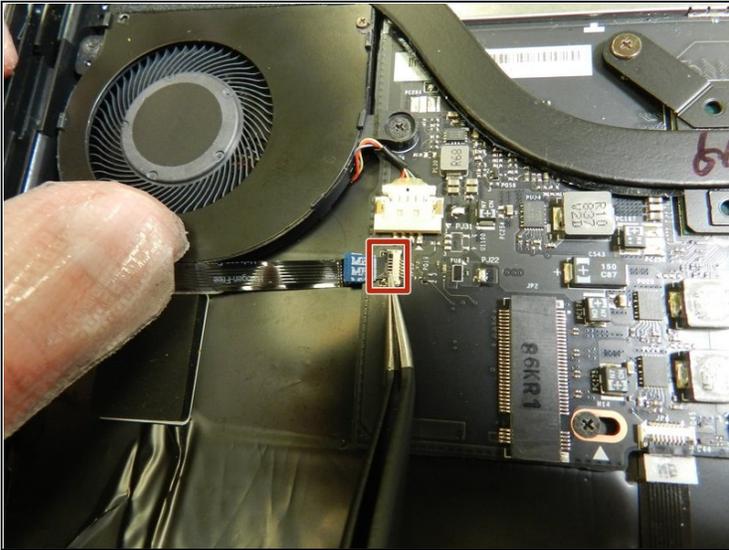


- Using the angled ESD tweezers, gently lift the black tab on top of the ZIF connector on the motherboard which connects the power button ribbon cable.
- Gently pull the cable out from the connector.

## Step 12

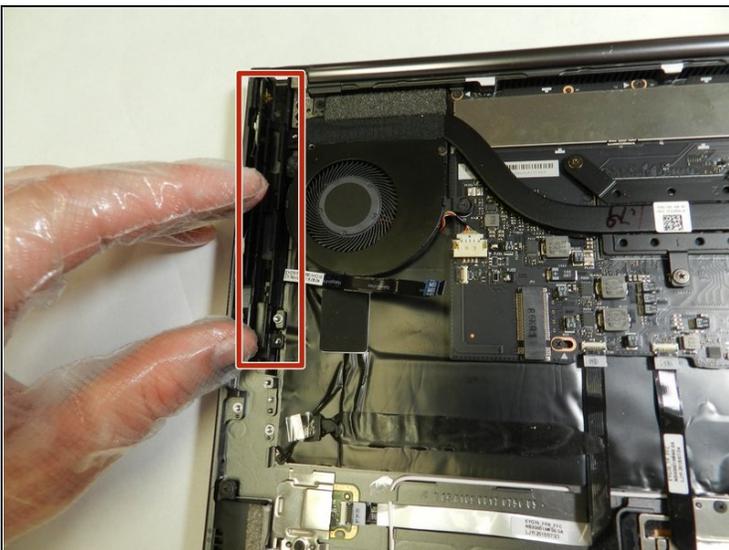

- Carefully lift out the digital pen holder with the attached power button ribbon cable.

## Step 13

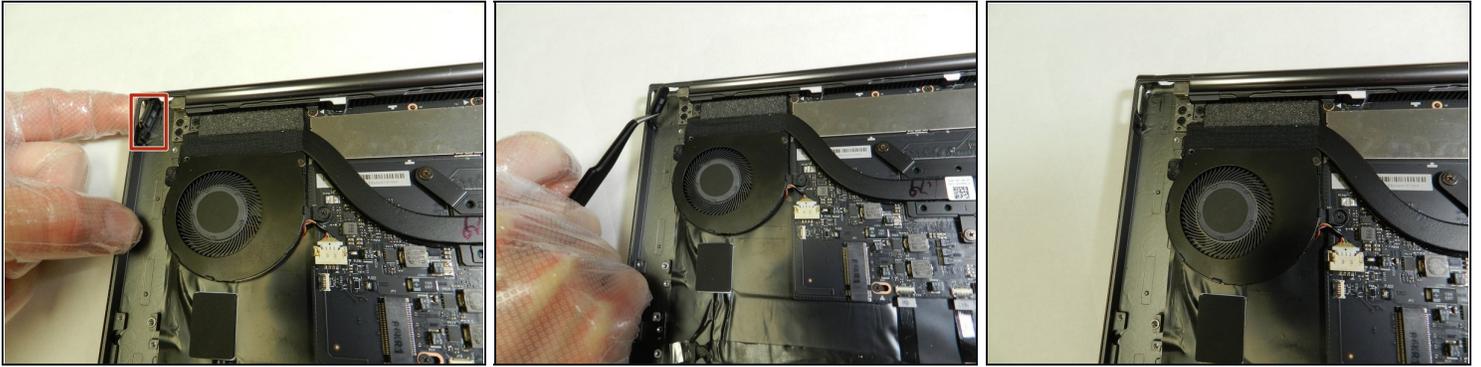

- Depress the power button, then gently pull and detach it using the angled ESD tweezers.

---

To reassemble your device, follow these instructions in reverse order.