



Lenovo Yoga C930-13IKB Fingerprint Reader Replacement

This guide includes all the steps, tools, and...

Written By: Elizabeth Miller



INTRODUCTION

This guide includes all the steps, tools, and parts necessary to disassemble the Lenovo Yoga C930-13IKB to access and replace the fingerprint reader.



TOOLS:

[T5 Torx Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)
[Phillips #00 Screwdriver](#) (1)
[Tweezers](#) (1)



PARTS:

[Lenovo Yoga C930-13IKB Fingerprint Reader](#) (1)

Step 1 — Back Cover



- Flip the device over so that the underside is facing up.
- Remove the six 3.5 mm T5 Torx screws.

Step 2



- Pry off the back cover using the plastic opening tool.
- Loosen the back cover in multiple spots using the opening tool, then remove the whole back.
- ① You may have to run the plastic tool along the edges until you find a small gap to separate the back cover from the laptop.

⚠ Do not use a metal tool when working with your device.

Step 3



- Carefully lift the cover off with your hands.


Step 4 — Battery



- Unplug the battery from the motherboard by pinching the cables with your fingers and tugging out with force.

① Use the spudger for assistance.

Step 5

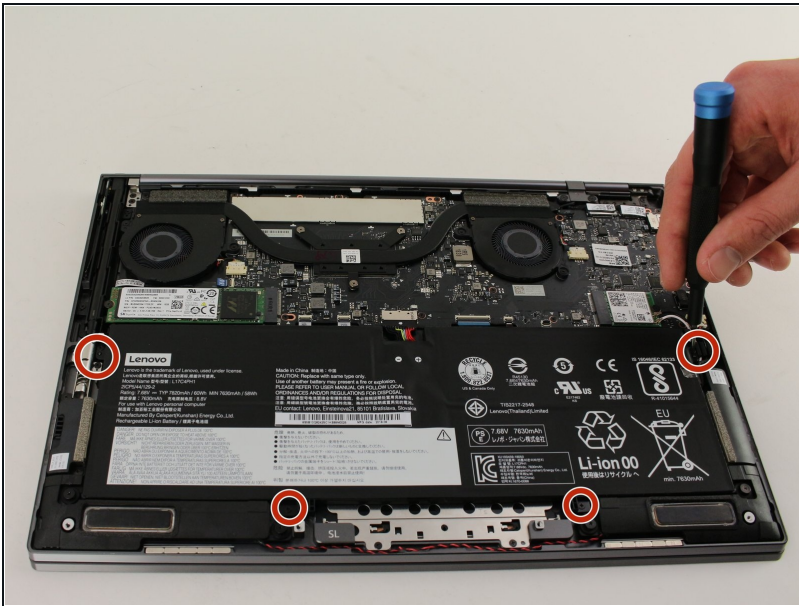


- Unscrew the four 3mm screws with a Phillips screwdriver.

Step 6



- ① The battery is still held in place with two stretch-release adhesive strips, [similar to ones found in an iPhone](#).
- Use your fingers to pry up the clear plastic pull-tab for one of the stretch release adhesives.
- Grasp the pull-tab and slowly pull away from the battery at a shallow angle. The adhesive strip will stretch to many times its length and slowly release from underneath the battery.
- Repeat the procedure for the second strip on the opposite side of the battery.
- ⚠ Be careful not to bend the battery. Breaking the battery is dangerous.
- Remove the battery with your hands.

Step 7 — Fingerprint Reader

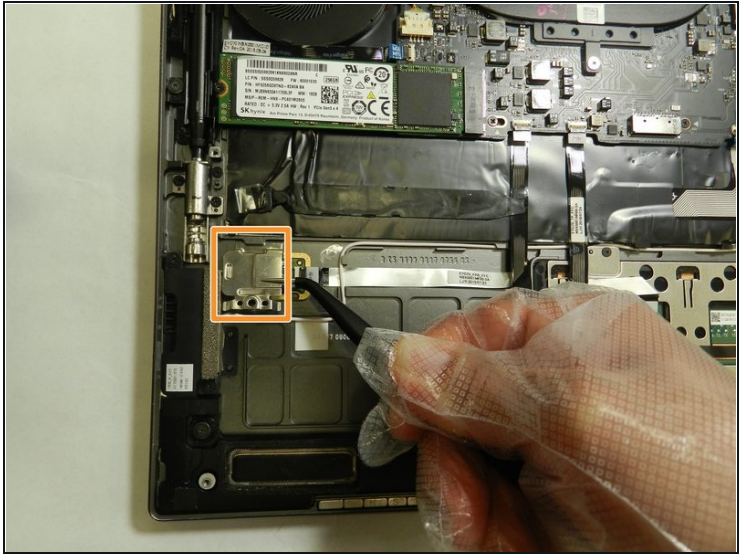

- Remove the single 2 mm screw from the fingerprint reader cover plate using the Phillips #00 screwdriver.
- Gently lift and slide out the cover plate using a pair of angled ESD [tweezers](#).

Step 8



- Using the angled ESD tweezers, gently lift the black tab on top of the ZIF connector on the fingerprint reader.
- Gently pull the ribbon cable out from the connector using the tweezers.

Step 9



- Lift and remove the fingerprint reader from the laptop using the angled ESD tweezers.

To reassemble your device, follow these instructions in reverse order.