

INTRODUCTION

If your device has a short battery life, or does not hold a charge at all, you may need to replace your battery. This guide will help you remove your old, worn battery, and replace it with a new, fresh battery in your Toshiba Satellite C655D-S5084.

Step 1 — Battery



- Turn the device bottom-side up. Make sure the batter compartment is nearest you.
- Unlock the right side of the battery.

Step 2



- Unlock the left side of the battery compartment by pushing and holding the button.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.