


Kobo Arc K107 Speaker Replacement

Replacement guide for the speakers on your Kobo Arc 7 e-reader.

Written By: Luke Maalouf

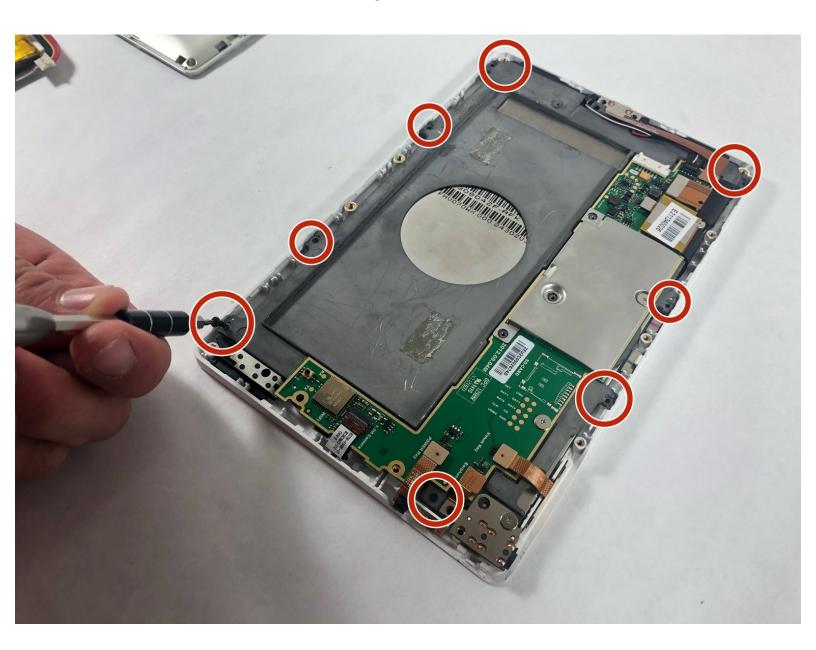

INTRODUCTION

This guide is meant for anyone attempting to replace their faulty speakers on their Kobo Arc 7, no need to worry about being tech-savvy or not.



TOOLS:

- Spudger (1)
- 64 Bit Driver Kit (1)


The star head screws and Philips head screws are the only ones used on the Kobo Arc.

Step 1 — Battery



 Peel the back cover off of the Kobo Arc by finding the lip in the cover and pulling back on it.

Step 2

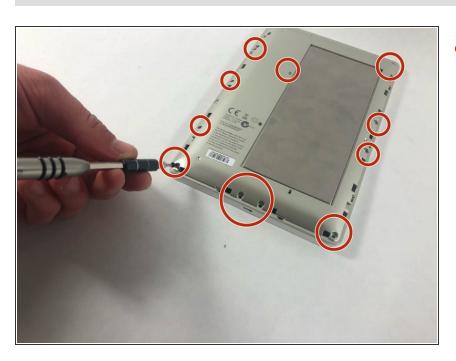

Remove the screws from the midframe.

Step 3




- Use a nylon spudger to pry up the battery from the device.
- it will give some resistance as it is glued down.
- Always use plastic or nylon prying tools around the battery. Metal tools can puncture a battery, potentially causing a fire.

Step 4



- Unplug the battery connector from the rest of the tablet.
- Remove the battery from the tablet.


Step 5 — Speaker

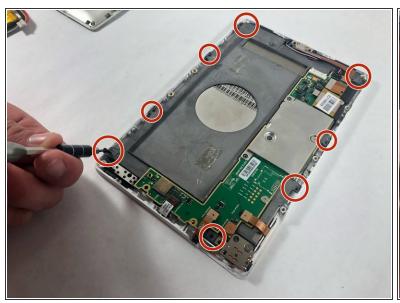



- Remove the screws that are attached to the grey plastic layer.
- Remove the gray plastic layer.

Step 6

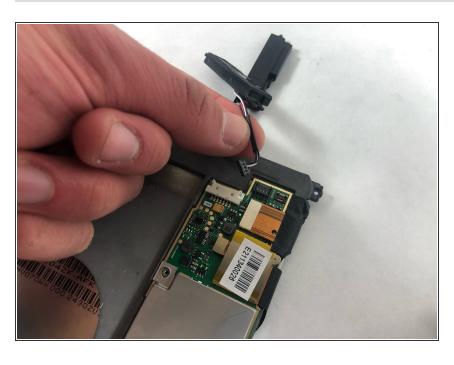

 Disconnect the speakers from the tablet. To reassemble your device, follow these instructions in reverse order.