



iPhone 5 Volume Controls Replacement

prereq only, for audio cable

Written By: Andrew Optimus Goldheart






TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Volume Controls

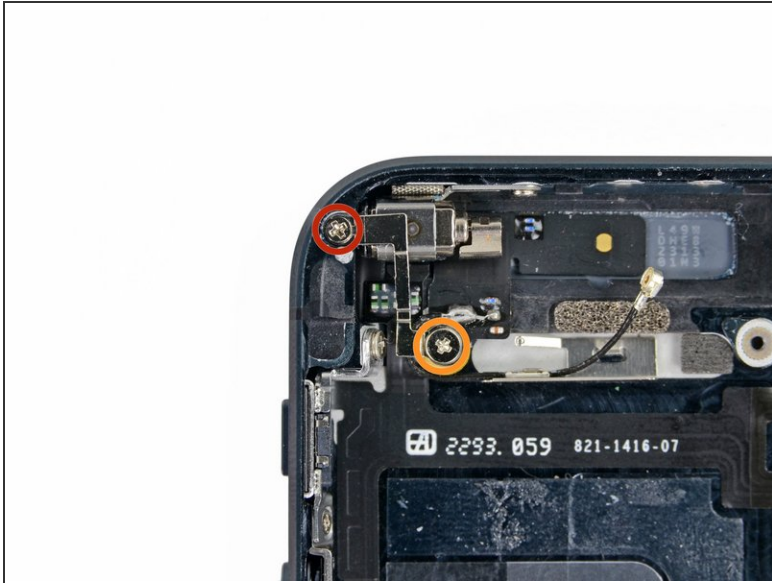


- Remove three screws securing the vibrator and vibrator bracket to the rear case:
 - One 2.3 mm Phillips screw
 - One 1.7 mm Phillips screw
 - One 1.6 mm Phillips screw securing the vibrator to the top inside of the rear case.

Step 2

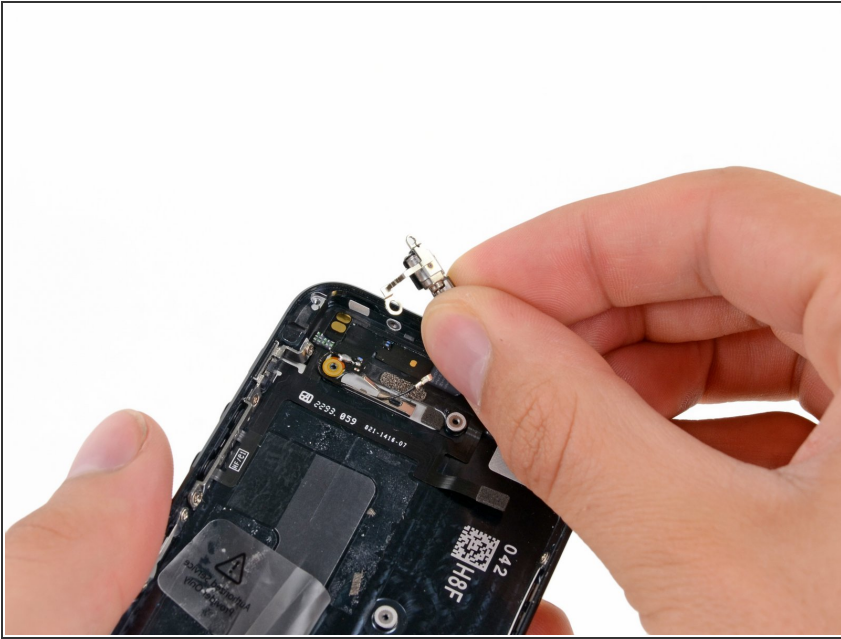



- Remove the vibrator and vibrator bracket from the rear case.

Step 3

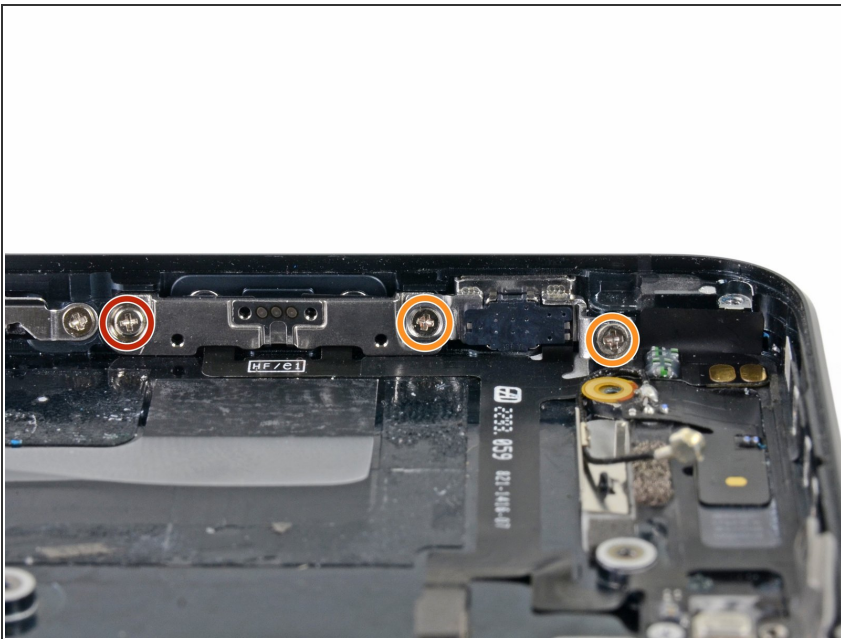


- Remove the following screws securing the volume button and ringer switch brackets to the side of the rear case:
 - One 1.5 mm Phillips screw
 - Two 1.8 mm Phillips screws

Step 4

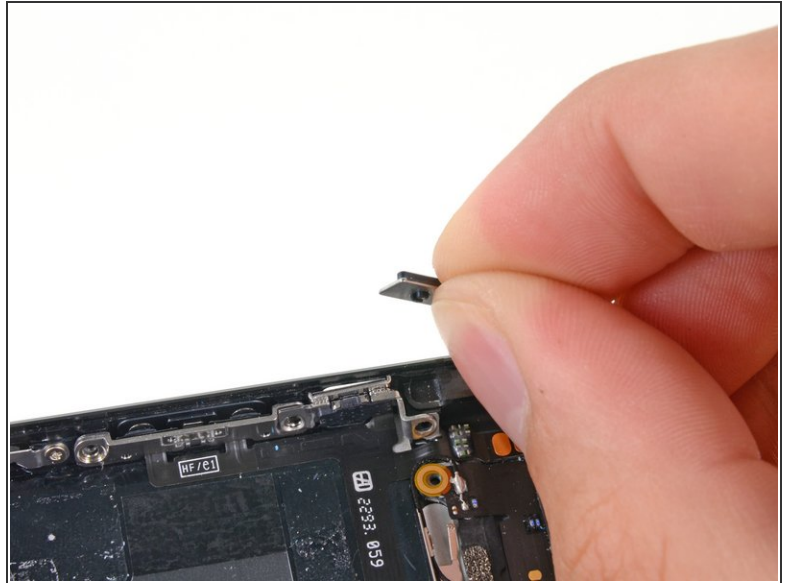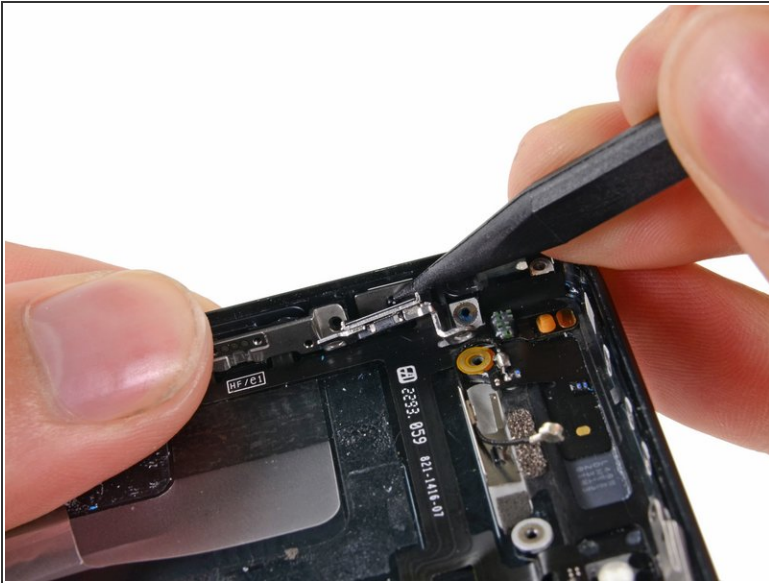

- Use the tip of a spudger to pry the ringer switch bracket from the side of the rear case.
- Remove the ringer switch.

Step 5

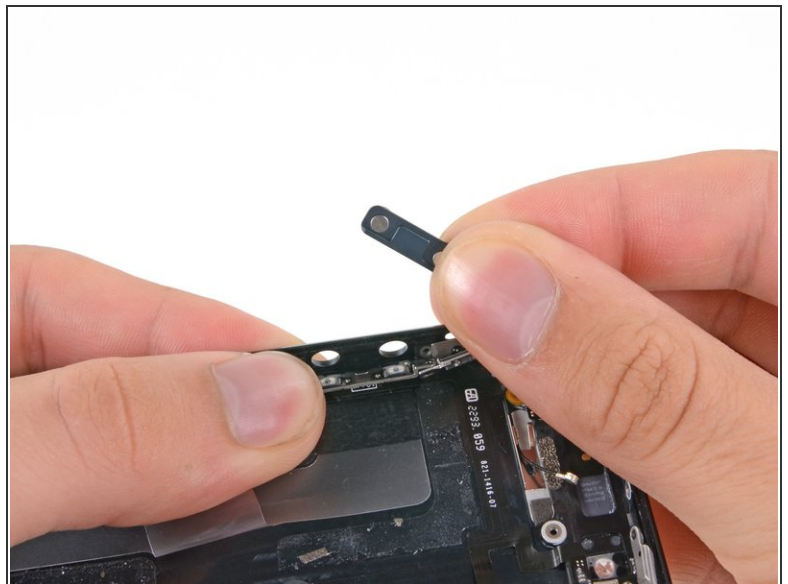

- Use a spudger to pry the volume button bracket from the side of the rear case.
- Remove the volume buttons.

To reassemble your device, follow these instructions in reverse order.