



# Packard Bell 4X4 Desktop Top Cover Removal

Removing the top cover on a Packard Bell 4X4 desktop.

Written By: Brandon S



---

## INTRODUCTION

This guide will show you how to remove the top cover from a Packard Bell 4X4 desktop computer.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top Cover



- Using a Phillips screwdriver, remove the three Phillips head screws (circled in red) from the back of the computer.

## Step 2



- With both hands on each side of the case, slide the top cover toward you. Lift it off the computer.



## Step 3



- The top cover is removed.

To reassemble your device, follow these instructions in reverse order.