



Acer Chromebook C710-2847 Wireless Card Replacement

This guide will show you how to replace the wireless card.

Written By: Bradley Pavy



INTRODUCTION

The wireless card is responsible for connecting the Chromebook to Wi-Fi networks and Bluetooth devices.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [Acer Chromebook C710 Atheros Wireless WIFI WLAN Card](#) (1)

Step 1 — Battery



- Place the laptop on a flat surface with the bottom side facing up.
- Place the tip of a spudger or finger into the hole on the battery release slider.


Step 2



- Use the spudger to move the slider to the right and hold it there.
- With the slider held, use your other hand to pull the battery back away from the laptop.

Step 3 — Acer Chromebook C710-2847 Back Cover Replacement



 This step will void your device warranty.

- Use the screwdriver to pierce the warranty sticker.
- Unscrew and remove the #0 6mm Phillips screw and set it aside.

Step 4



- Slide the back panel towards you. The best spots to place your fingers are on the bumpers.
- Lift on the front edge to remove the panel.

Step 5 — Wireless Card



- Use a spudger or your fingernails to lift up and unclip the two gold connectors on the top of the wireless card.

Step 6



- Unscrew the black #0 3mm Phillips screw at the top right of the wireless card.

Step 7



- The wireless card will spring up.
- Pull the wireless card up and out to remove it.

To reassemble your device, follow these instructions in reverse order.