



# Nikon D70 Front Cover Replacement

Written By: Andrew Bookholt



# INTRODUCTION

This is an internal prerequisite that should remain unpublished.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Front Cover



- Use a plastic opening tool to carefully pry up the flash unit at the point shown in the picture.

## Step 2



- Remove the two 4.3 mm Phillips screws securing the top edge of the front cover to the top cover.

### Step 3




- Remove the two 4.3 mm Phillips screws on the face of the front cover.

### Step 4



- Use the sharp end of a metal spudger or a razor blade to peel the sticker out of the center of the automatic/manual focus switch.

## Step 5

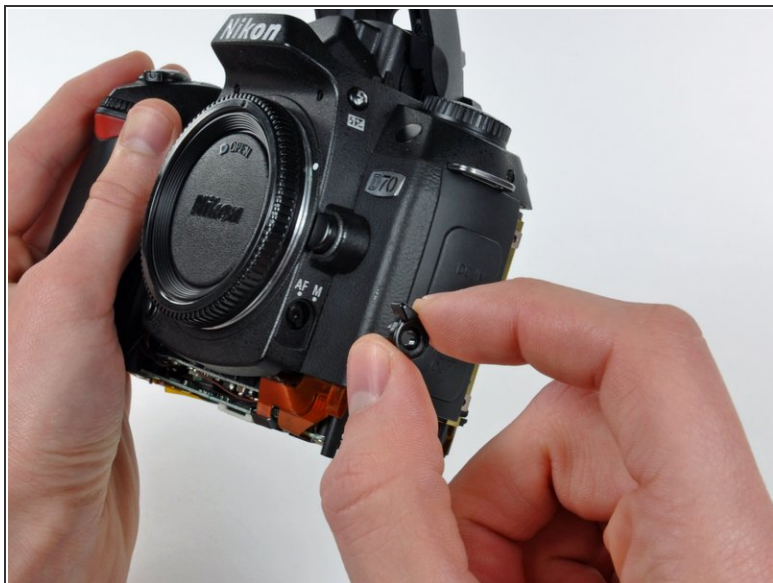

- Remove the 6.3 mm shouldered Phillips screw from the center of the automatic/manual focus switch.
- Pull the automatic/manual focus switch away from the front cover.

## Step 6



- ⓘ If present, remove the plastic cover from the lens mount.

## Step 7



- Pull the front cover away from the D70.