

Dell Latitude D610 Keyboard Replacement

Replacing a broken or damaged keyboard in a Dell Latitude D610.

Written By: Jordan Barham



INTRODUCTION

Replacing a defective keyboard is a fairly simple and easy task, requiring little tools and prior knowledge.



TOOLS:

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)



PARTS:

Keyboard (1)

Step 1 — Battery





• Remove the 3.9 mm Phillips #1 screw from the battery compartment.

Step 2








- Locate the laptop battery release button lock
- Push the battery release in the direction of the arrow, and pull upward.

Step 3

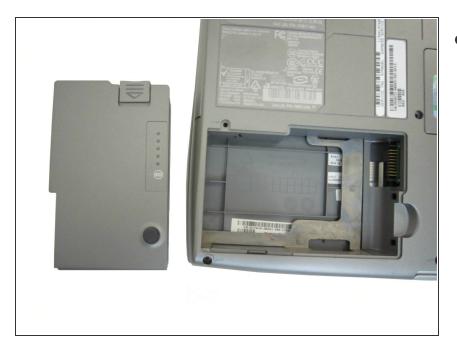

Remove the battery from its compartment.

Step 4 — Keyboard



Use an opening tool or flat tool to remove the plastic cover above the keyboard.

Step 5





Remove the two 3.9mm Philips #1 screws that are holding the keyboard in place.

Step 6





Using an opening tool, carefully release the keyboard from the case.

Making sure not to tear or damage the wires still connecting it to the laptop.

Step 7



- Carfully lift the key board.
- ↑ Lift only about 3 4 inches so that the wires holding the keyboard do not get damaged.
- Pull on the blue tab to unplug the keyboard.

To reassemble your device, follow these instructions in reverse order.