



Crosley CR42 Bushings Replacement

We will be demonstrating how to replace the bushings inside the turntable.

Written By: Roberto Rosila



INTRODUCTION

 
 
Bushings are the rubber components in record players. Worn or loose bushings need to be replaced. This guide shows how to replace the bushings in the Crosley CR42 Player.



TOOLS:




- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Bushings

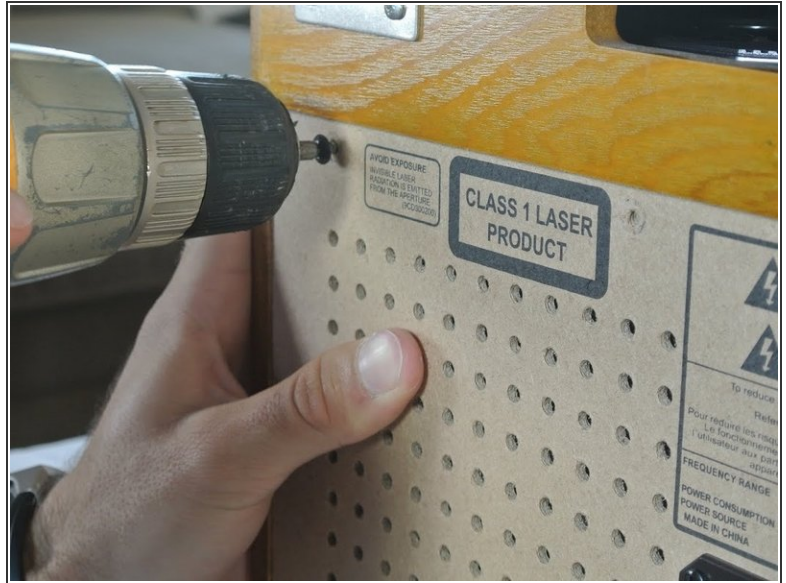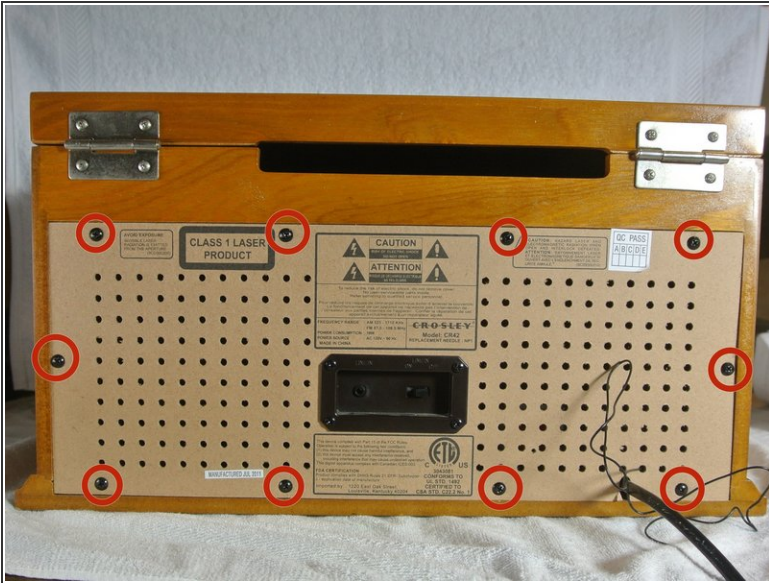


- Turn the device around so the line out port faces you.
- Remove the ten 12 mm screws with the Phillips screwdriver.

   Step 2

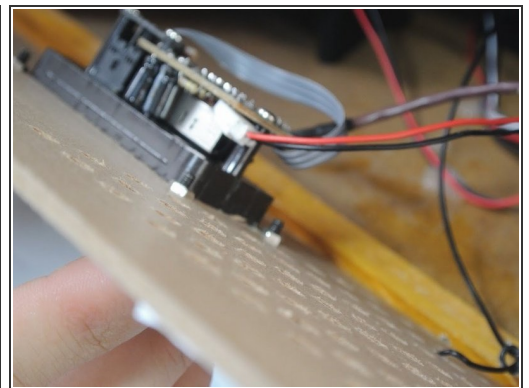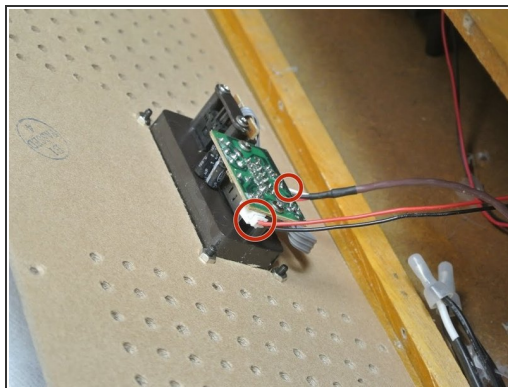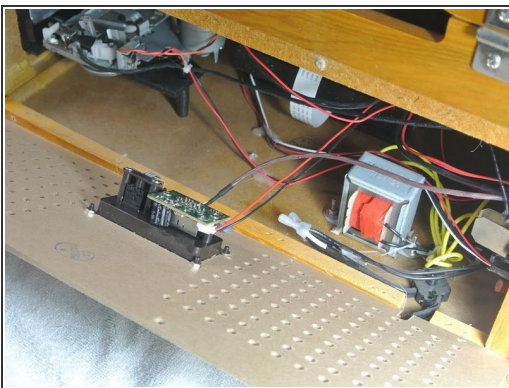


- Pull the line out port toward you so you can view the inside of the Crosley.
- Locate the wires that connect the line out port to the inside of the device.

 Step 3

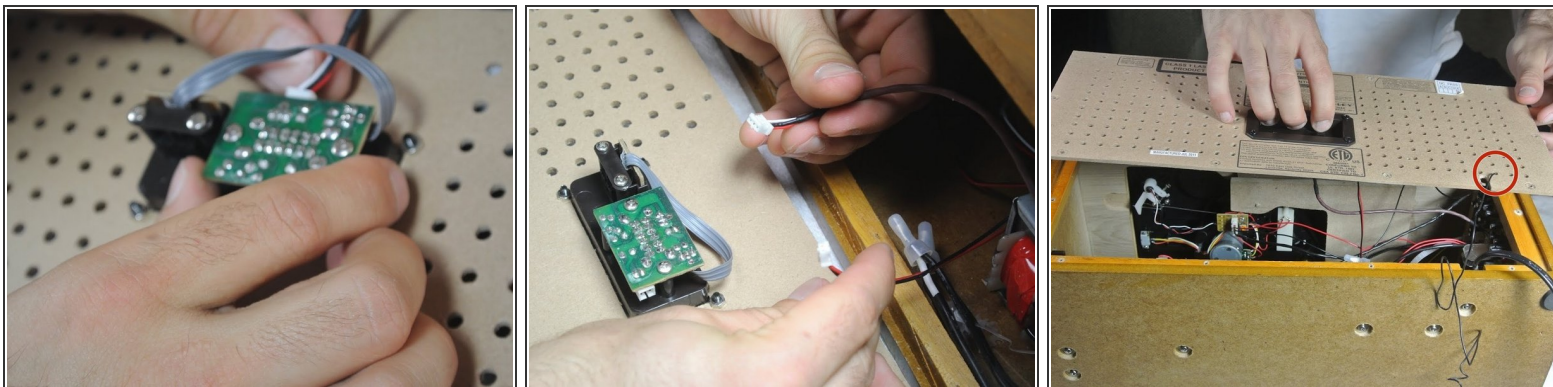

- Pull on the two connections to remove them from the back of the line out port.
- Remove the antenna wire from the line out port, then remove the line out port and set it aside.

 Step 4

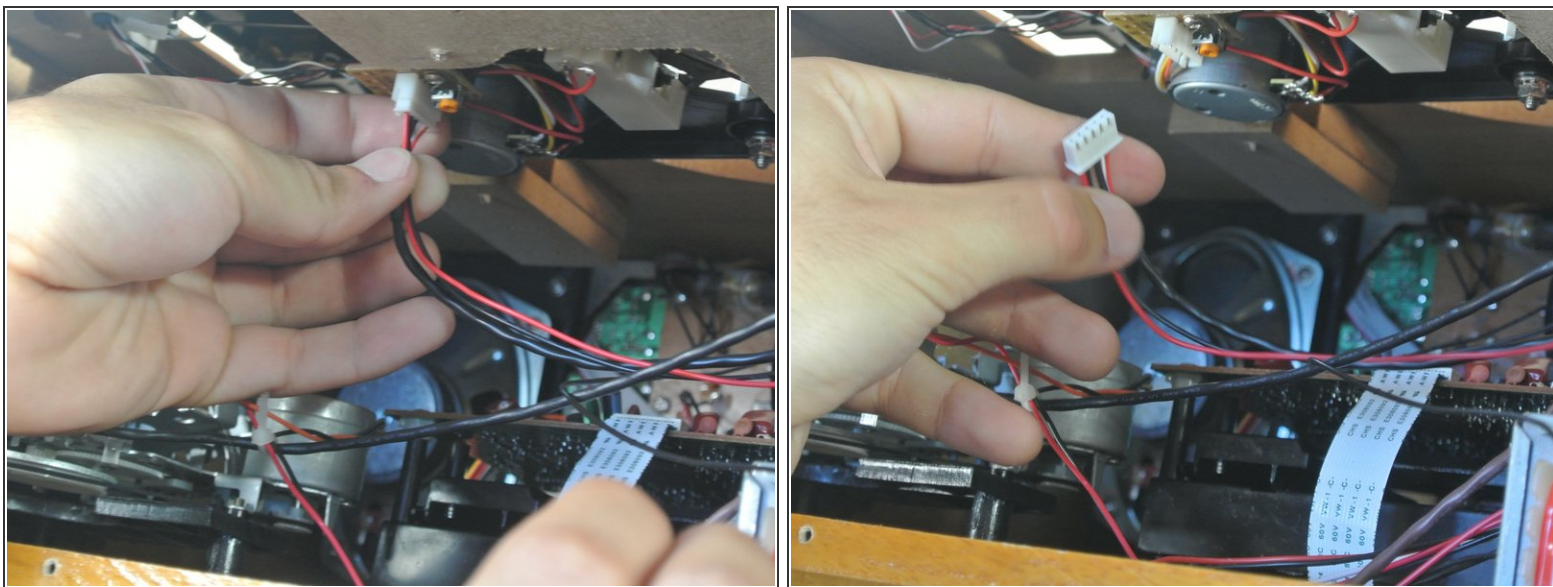




- Remove the red and black connection underneath the turntable.

Step 5



- Position yourself in front of the turntable to unscrew the three bushing bolts.

   Step 6

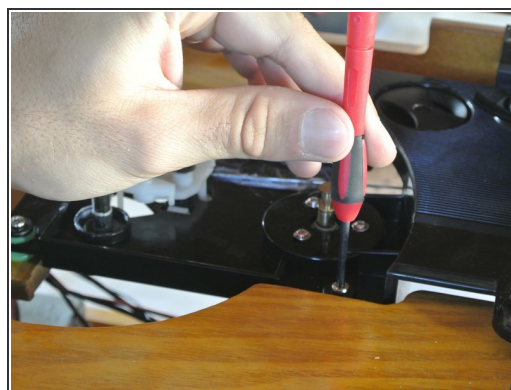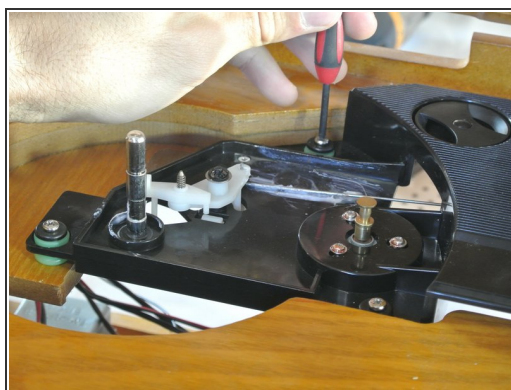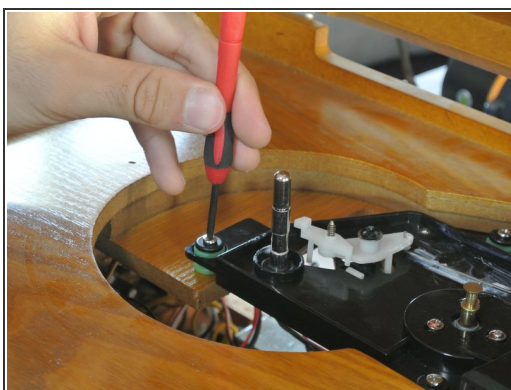




- Unscrew the three bushing bolts with the Phillips screw driver.

Step 7



- Pull the turntable out from the casing.
- Remove the three bushing bolts.

   Step 8

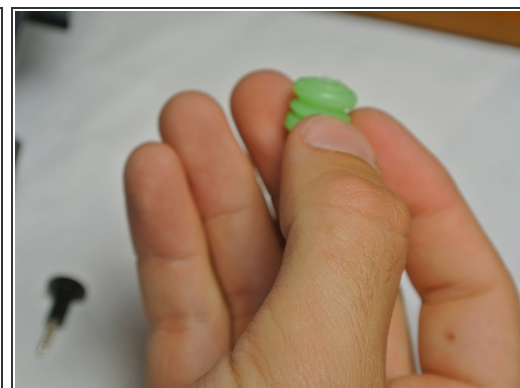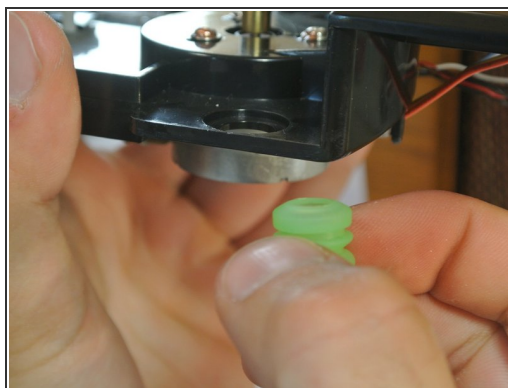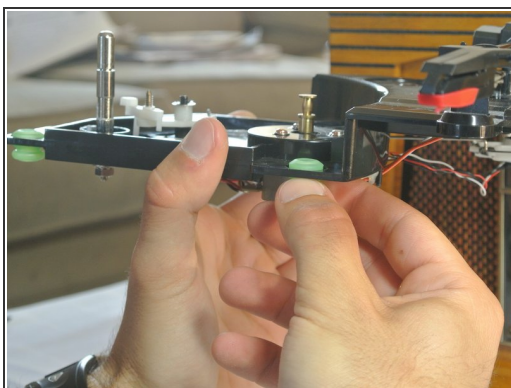

- Pinch the rubber bushing at the bottom, then pull downwards to remove it.
- Repeat the previous step for the other two bushings.

To reassemble your device, follow these instructions in reverse order.