

## **Sega Game Gear Battery Replacement**

How to replace batteries

Written By: Chan Leong



## **INTRODUCTION**

How to replace batteries

PARTS:

AA Battery (6)

## Step 1 — Battery



 Place your device upside down and locate the two battery compartments.

## Step 2



- Press on the tabs at the bottom of the battery covers then lift up to remove.
- Remove batteries if they are present.