


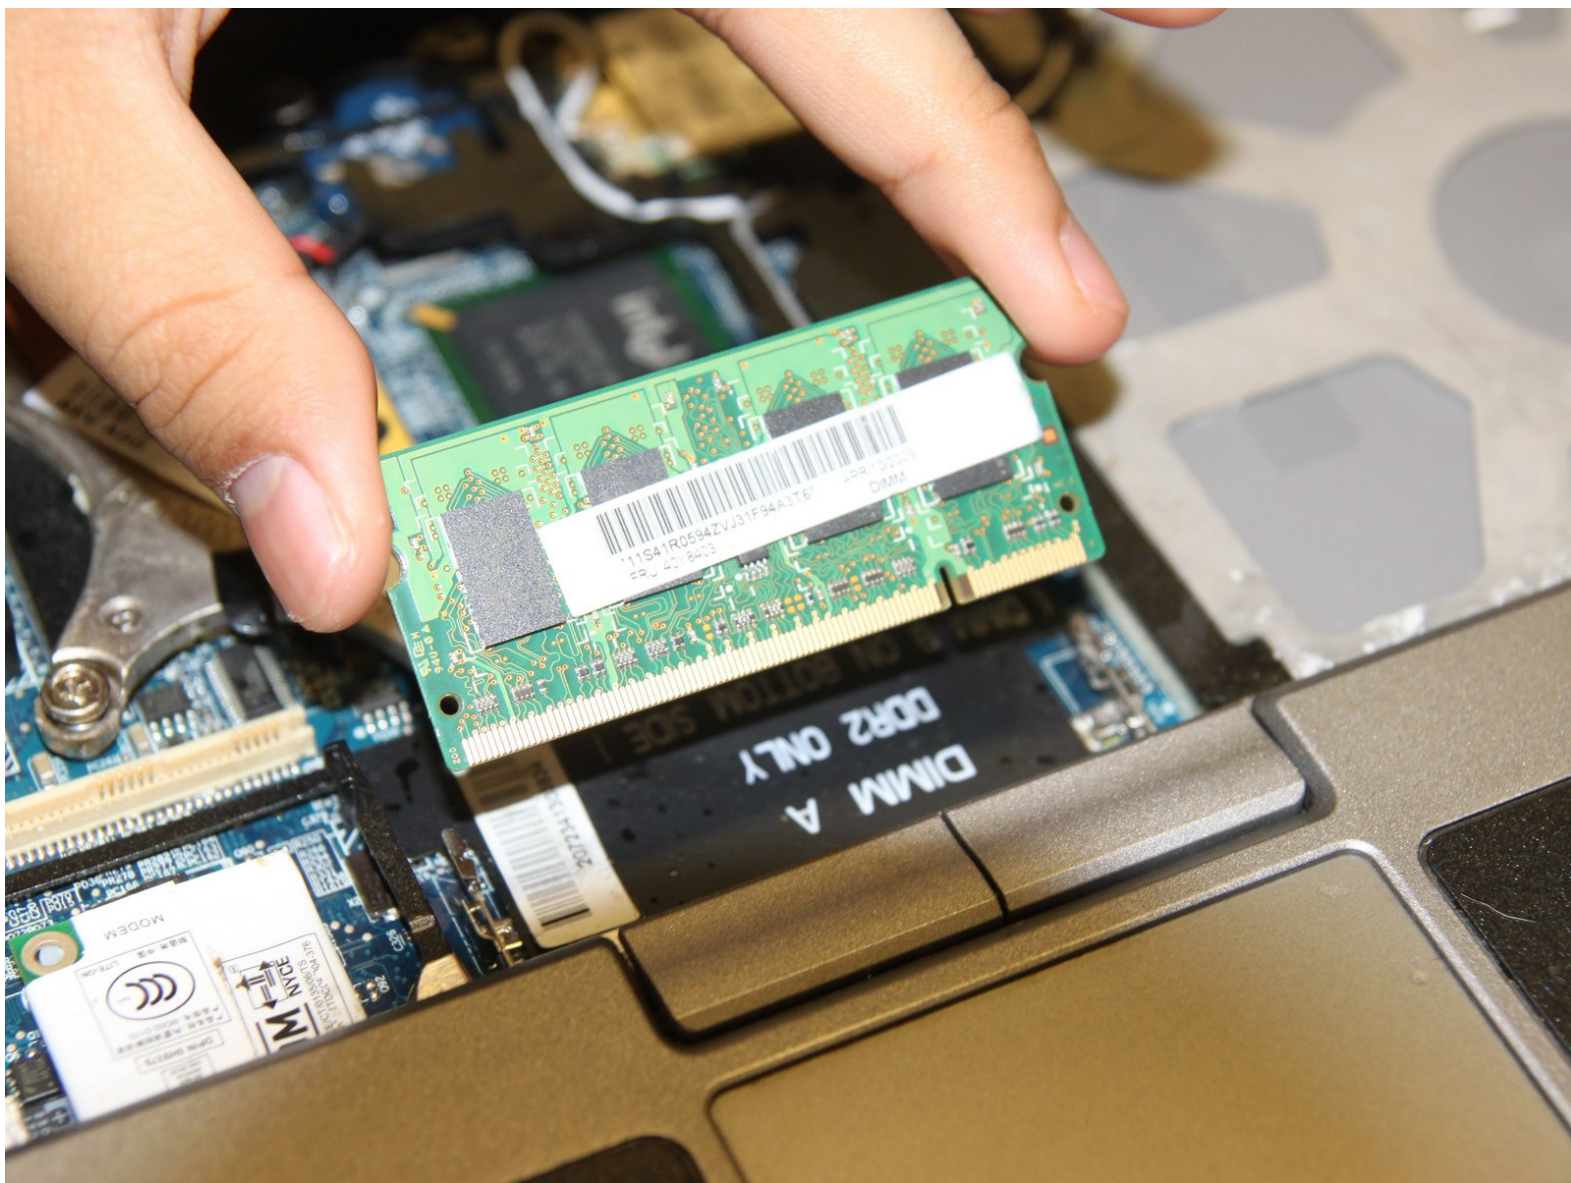

Dell Latitude D620 RAM Replacement

Written By: Miguel Wong



INTRODUCTION

Guide to installing new RAM modules for the Dell Latitude D620.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Keyboard



⚠ Power down the laptop and remove the battery.


- Open the laptop cover all of the way.

Step 2



- Locate the notch under the cover at the top of the keyboard
- Using the spudger as a lever, lift the plastic covering
- Carefully remove the rest of the covering from right to left

Step 3

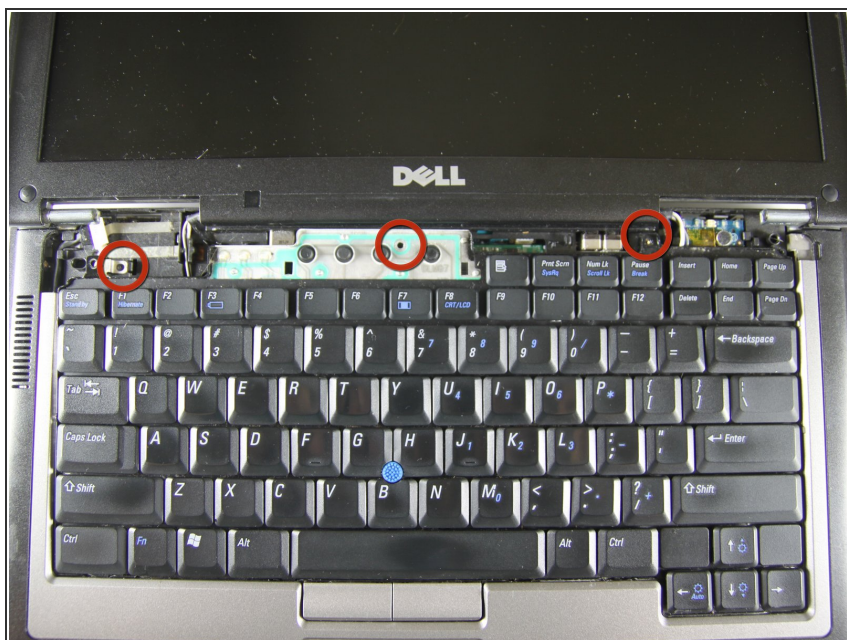

- Unscrew the top portion of the keyboard using a #00 screwdriver

Step 4





- Hold keyboard from the top and gently pull towards the LCD screen to remove the keyboard from the case
- ⚠ Don't pull on the keyboard too forcefully because it is attached to the motherboard with a short, thin ribbon cable

Step 5



- Once keyboard is out of the case, lay it face-down on the track pad

Step 6

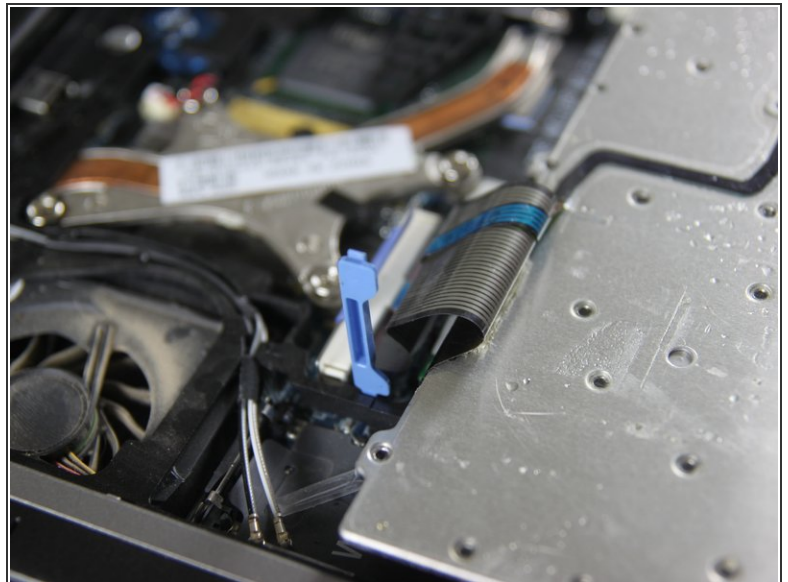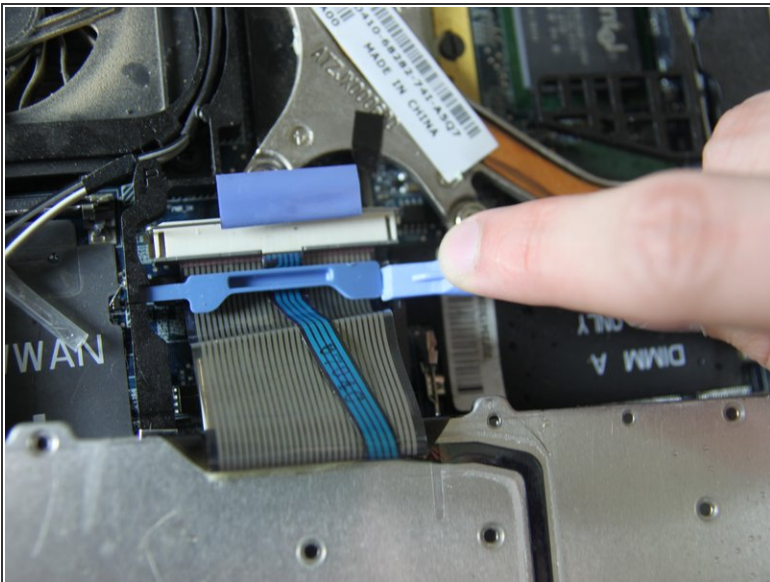



- Using a small spudger, pull back on the black bar to release the blue lever

Step 7



- Pull up on the metal bar connected to the socket to detach the ribbon cable

Step 8 — RAM

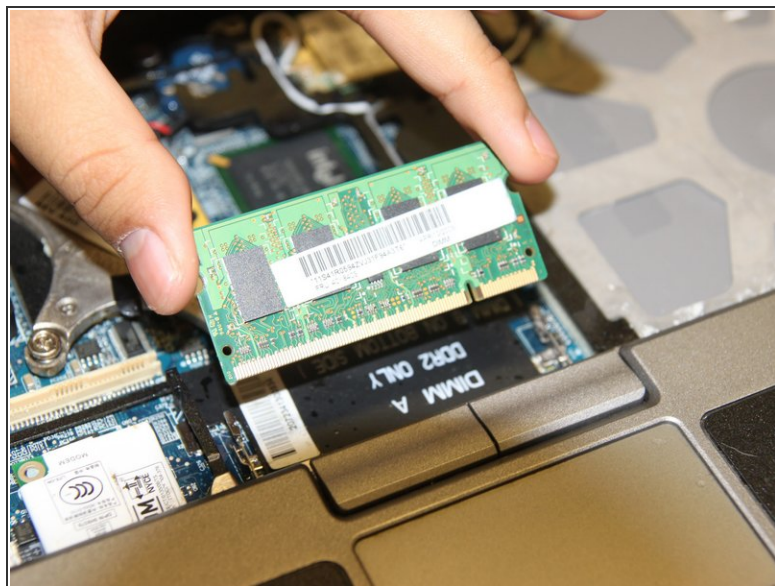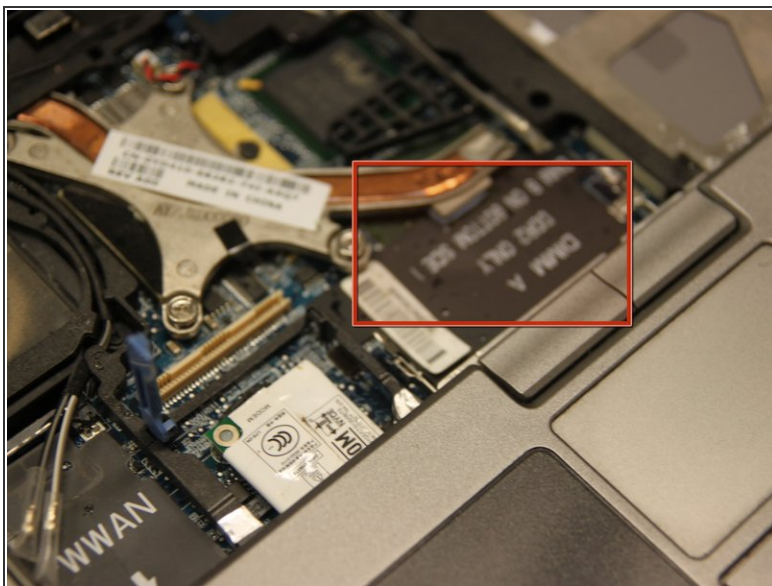

- With the keyboard removed, you should be able to see ram slot A.
- Place new ram into the slot making sure it is aligned

Step 9




- Replace the keyboard by following the previous steps in reverse
- Close the laptop, and flip it over onto its backside

Step 10



- Loosen the screw that holds the RAM cover in place.
- ⓘ The screw cannot be fully removed since it is attached to the RAM cover.

Step 11

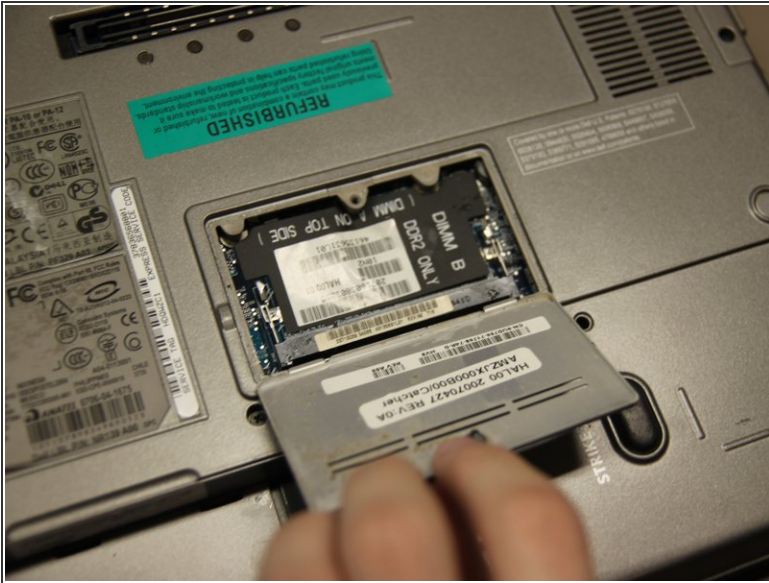

- Insert new ram into slot B

To reassemble your device, follow these instructions in reverse order.