



Dell Inspiron 1750 Battery Replacement

This is a guide for the replacement of the Dell Inspiron 1750 battery.

Written By: Jordan Nedbailo



INTRODUCTION


This guide will help you replace the battery of your Dell Inspiron 1750. You may need to perform this replacement if your battery leaks or does not charge anymore.



PARTS:

- [Dell Inspiron 1440, 1750 Replacement Battery \(312-0940\)](#) (1)
-

Step 1 — Battery

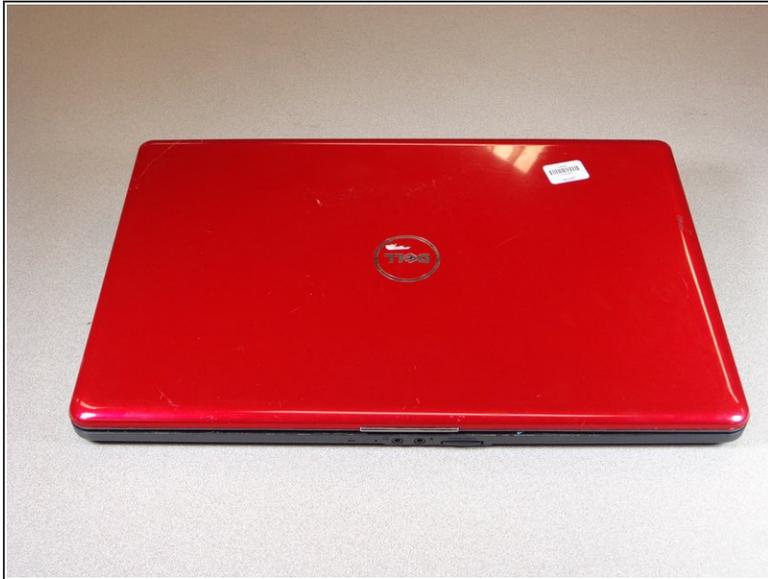

 Unplug the laptop before changing the battery to avoid electric shock.

- Place the laptop on a flat stable surface.
- Flip the laptop over so the underside is visible.

Step 2



- Locate the battery lock switch.
- Slide the lock switch to the left (away from the lock symbol).
- Slide the battery out away from the laptop.

To reassemble your device, follow these instructions in reverse order.