




Motorola V276 Main LCD Screen Replacement

Written By: Cecilia

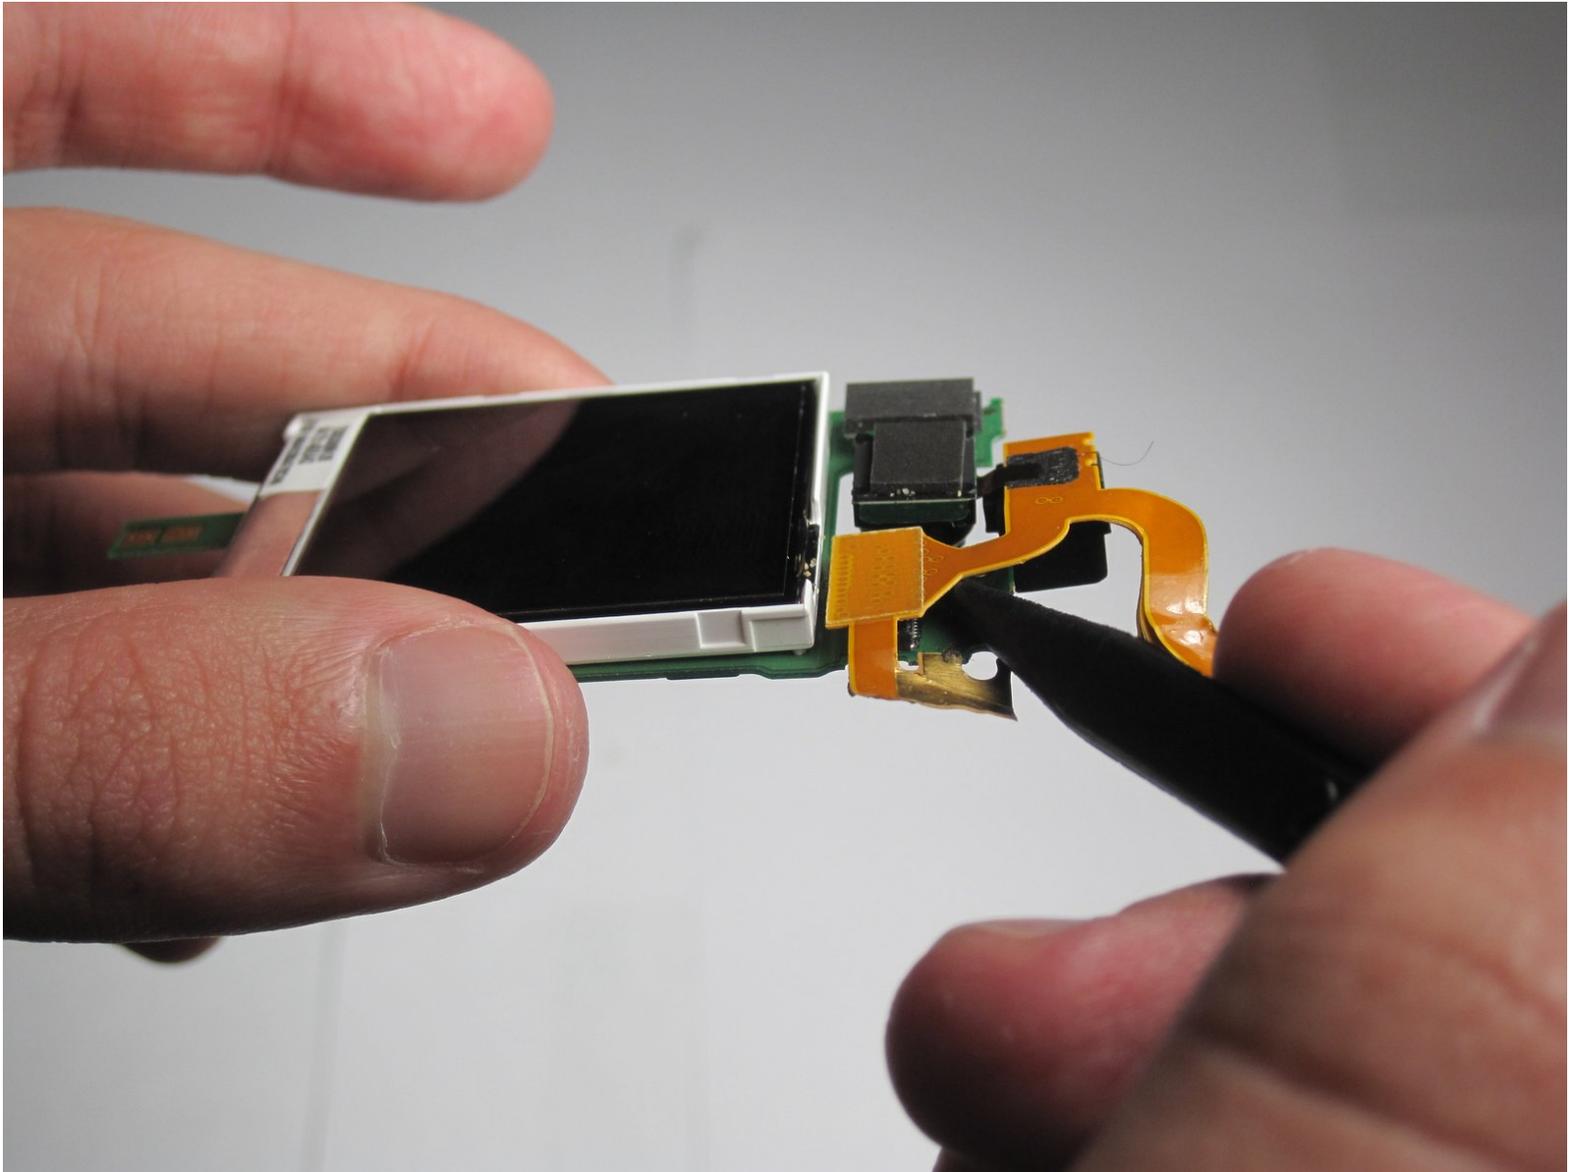

INTRODUCTION

Replacing a cracked or malfunctioning main LCD screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front panel/ Screen Logic Board



- Using the plastic opening tool, pry off the top faceplate.
- Place the tool in the small crack that runs along the side of the phone and pry.

Step 2




- Using the T6 Torx Screwdriver remove all 4 small screws.

Step 3




- Remove silver plate from phone.

Step 4

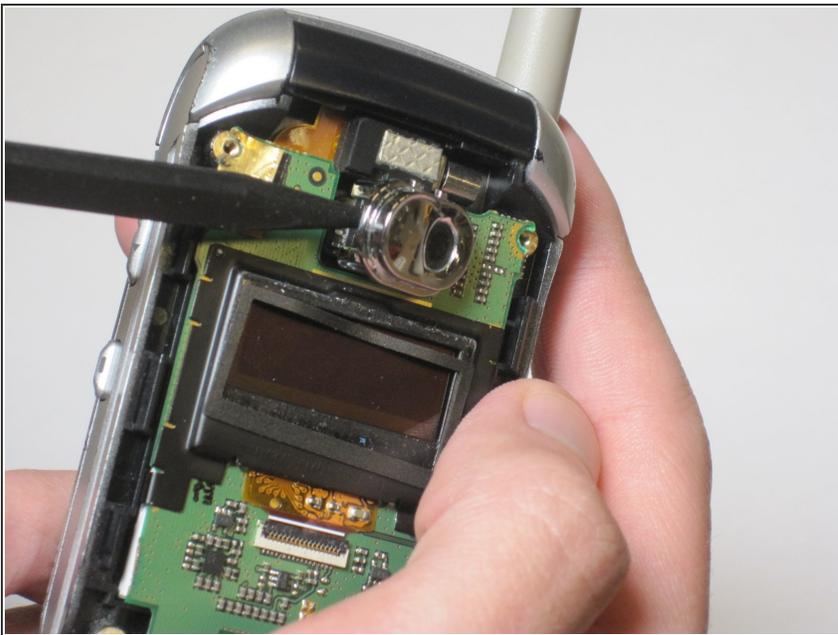

- Using the spudger remove the plastic camera casing

Step 5

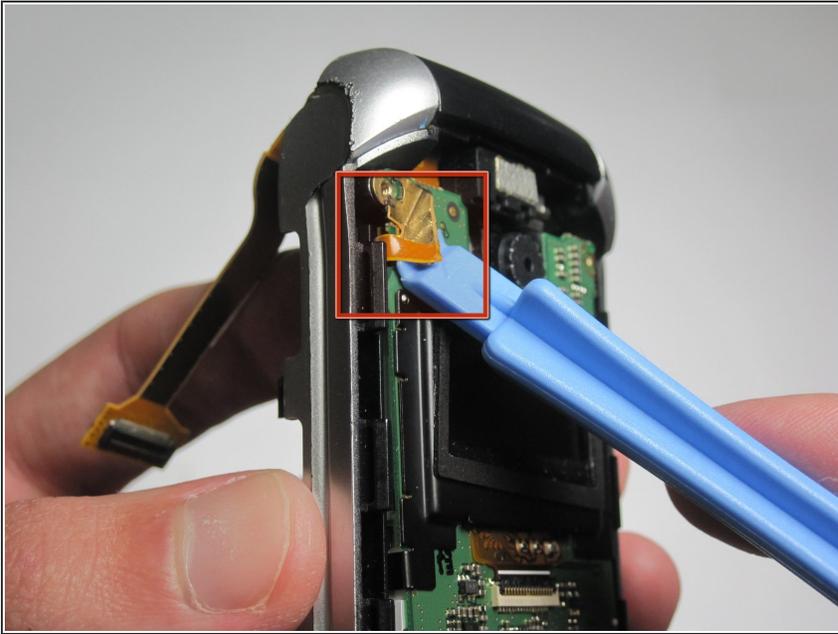



- Using the iPod Opening Tool remove the yellow flex cable from the green logic board.

Step 6



- Use Spudger or hands to detach flex cable from front screen logic board

Step 7 — Main LCD Screen

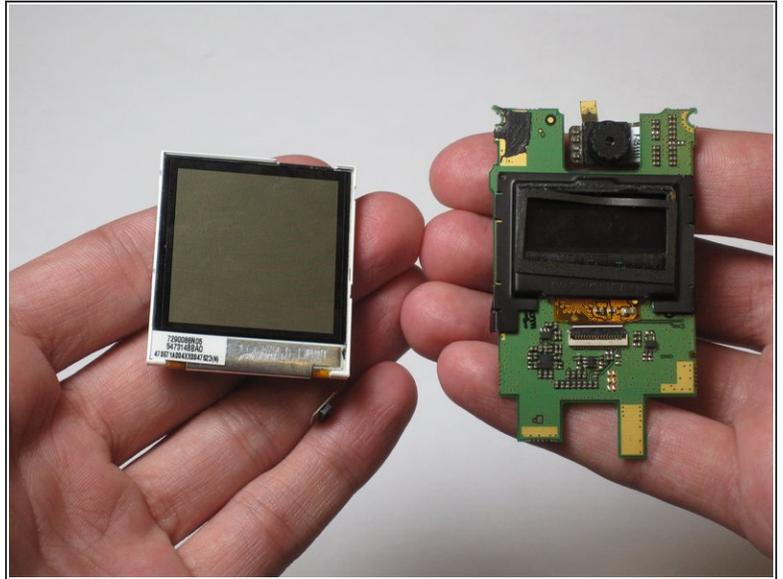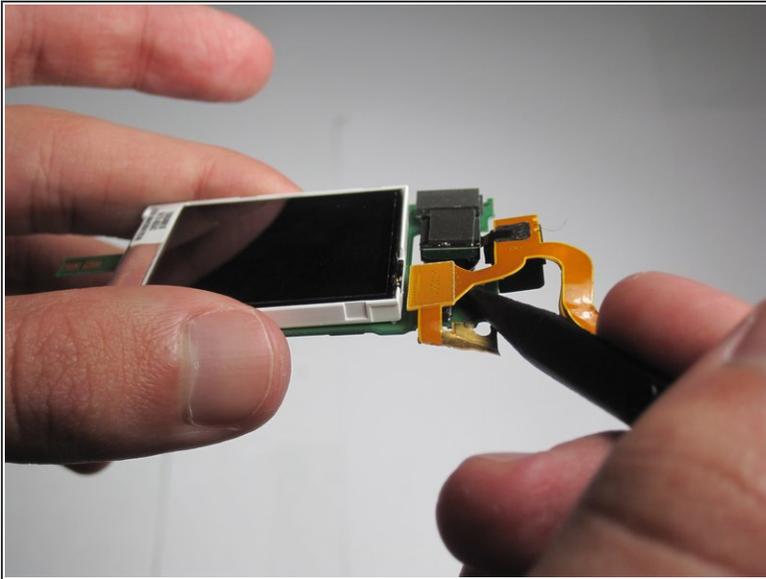

- Using spudger remove the LCD screen from the green logic board.

To reassemble your device, follow these instructions in reverse order.