




# Nokia 3300B SD Card Replacement

This guide describes how to replace the SD card...

Written By: George

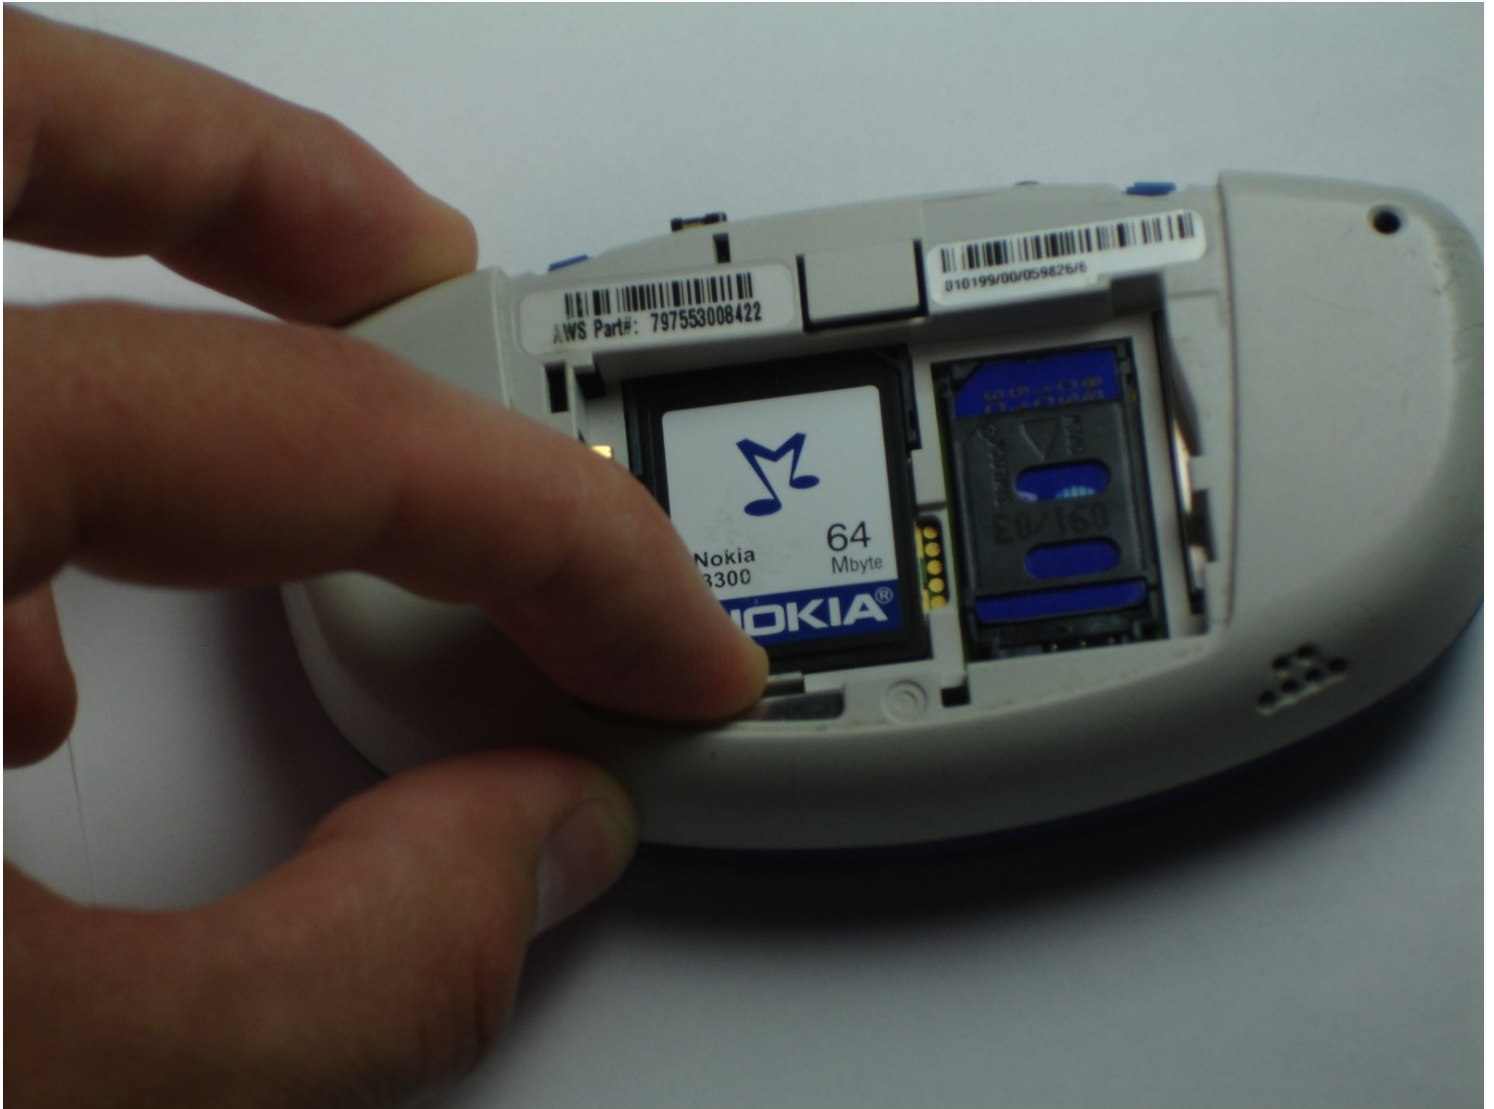

# INTRODUCTION


This guide describes how to replace the SD card of the Nokia 3300B.

## Step 1 — Battery



- Flip the Nokia 3300B over with the back-side facing towards you.
- Gently press the button on the back of the battery cover to release the cover and slide up.

## Step 2

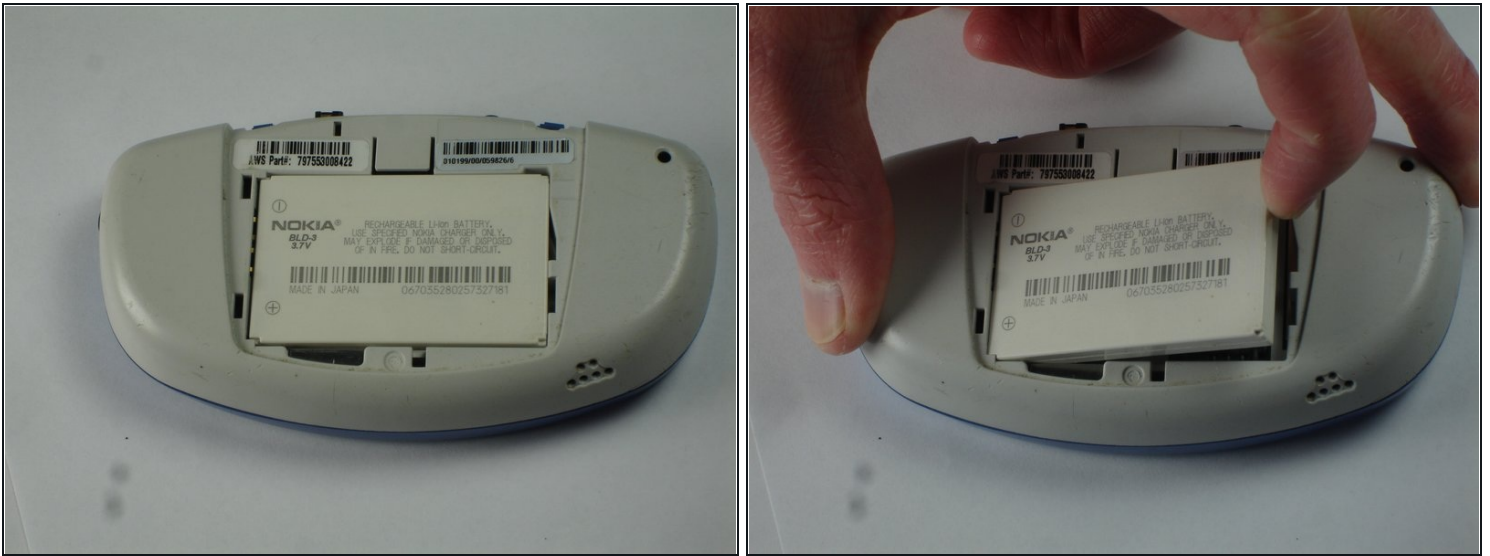

- Lift the battery out of the back of the phone.
- i** It is easiest to lift the battery out of the phone from the right-hand side, as seen in the picture.

## Step 3 — SD Card



- Using your finger, or a pair of [tweezers](#), press down on the tab below the SD card.
  - The card will pop out of its case. Remove the card.
- ☒ When placing the new SD card in the slot, it should "pop" in.

---

To reassemble your device, follow these instructions in reverse order.