



Sanyo VPC-T850 LCD Display Replacement

Written By: Jonathan Yau



INTRODUCTION

 
 
Instructions on how remove the LCD display.




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disconnect the Ribbon

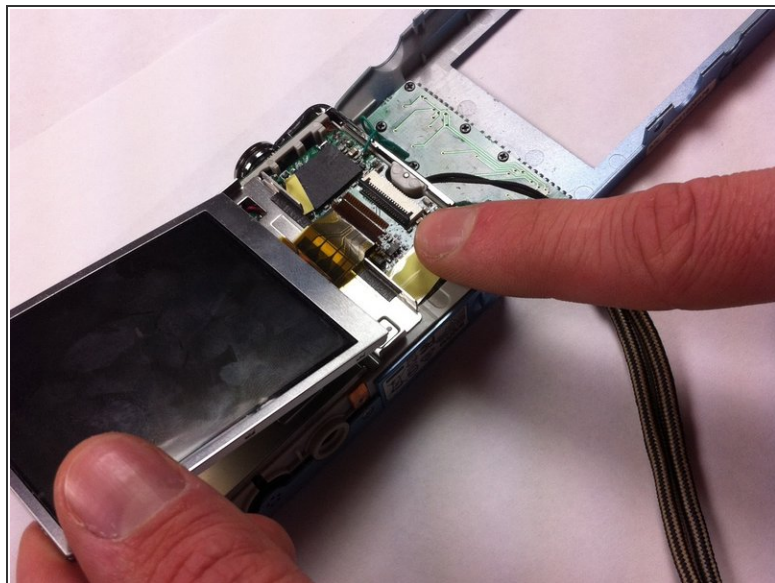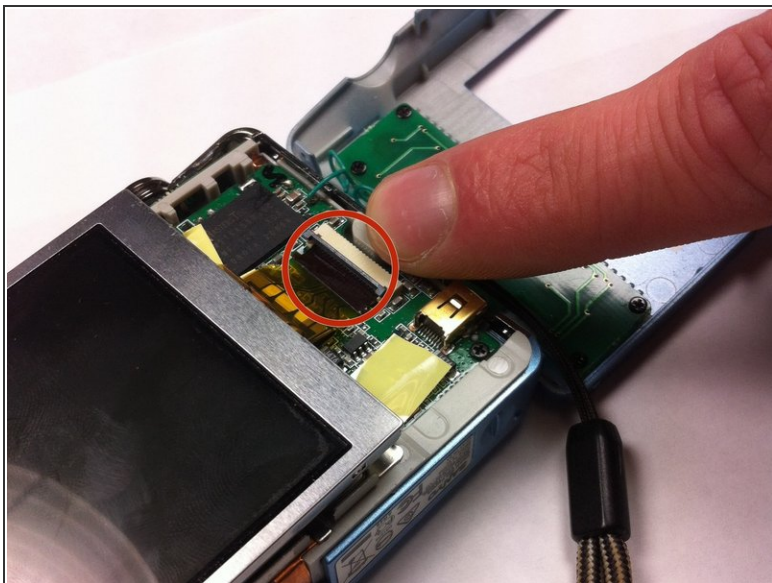

 Use caution not to damage ribbon when disconnecting.

- The yellow ribbon is attached to the right side of the screen and goes to a black connector piece.
- Gently flip the black connector away from the LCD screen to unlock the yellow ribbon.
- Carefully pull the yellow ribbon towards the LCD screen to disconnect it.

Step 2 — Remove LCD Screen



- The LCD screen should now be disconnected from the rest of the camera and a pry tool can be used to lift it out of its casing.

To reassemble your device, follow these instructions in reverse order.