

Disassembling Nokia 3395 Logic Board

We will now remove the logic board from the phone.

Written By: Nico Lee



INTRODUCTION

We will now remove the logic board from the phone.

√ TOOLS:

Spudger (1)
T6 Torx Screwdriver (1)

Step 1 — Back Case








- Turn the phone off.
- Hold the phone, and gently press the white button located at the bottom of the phone.
- While pressing the button, slide the back plate upwards, opening the plate.

Step 2 — Battery

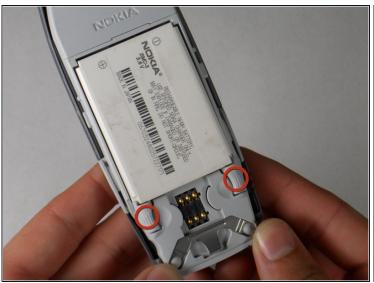



- Locate grey buttons beneath battery (shown).
- Spread buttons simultaneously away from each other and the battery will pop out.
- Remove battery from phone.

Step 3 — Front Case





- Push the two black buttons on the side with your thumbs forward. This will release the front faceplate.
- Flip over the device, and pry the faceplate away.


Step 4 — Screen






Remove six T6 screws.

Step 5

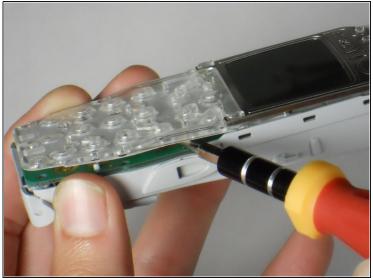


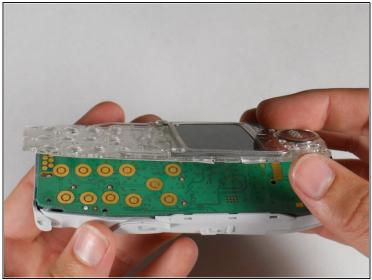

• Insert spudger between screen assembly and phone body.

⚠ Spread apart as shown. Avoid damaging the screen assembly by removing the screen slowly.

Step 6 — Logic Board

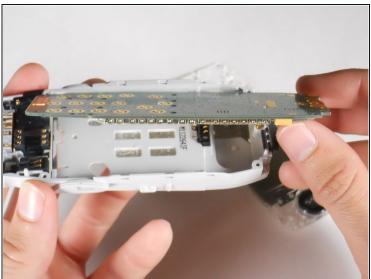



Remove logic board as shown.

To reassemble your device, follow these instructions in reverse order.