




Olympus D590 LCD Screen Replacement

Step-by-step Instructions Guide Olympus D590...

Written By: Sara

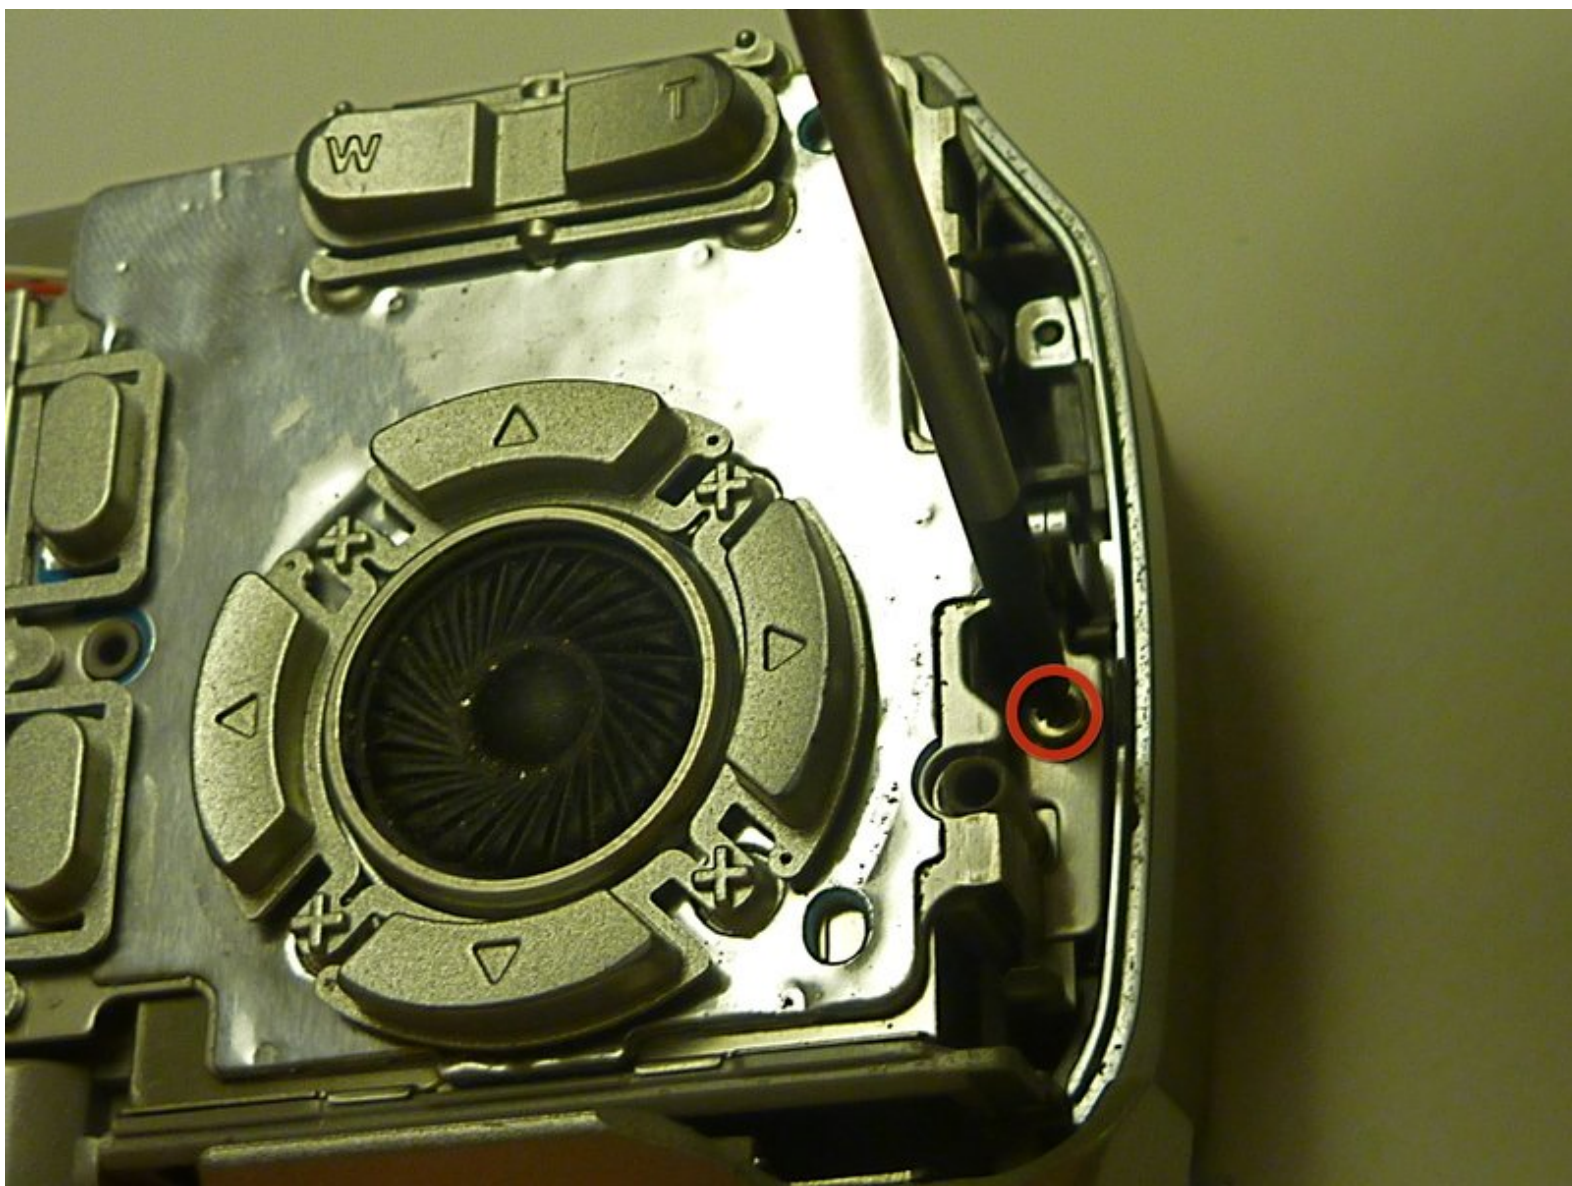

INTRODUCTION

Step-by-step Instructions Guide

Olympus D590 Camera LCD Screen Replacement



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Face Plate




- Remove five baseplate screws using a Phillips #00 screwdriver.

Step 2




- Press and slide the battery cover retainer clip to the left. Use tweezers to lift the battery cover away.

Step 3

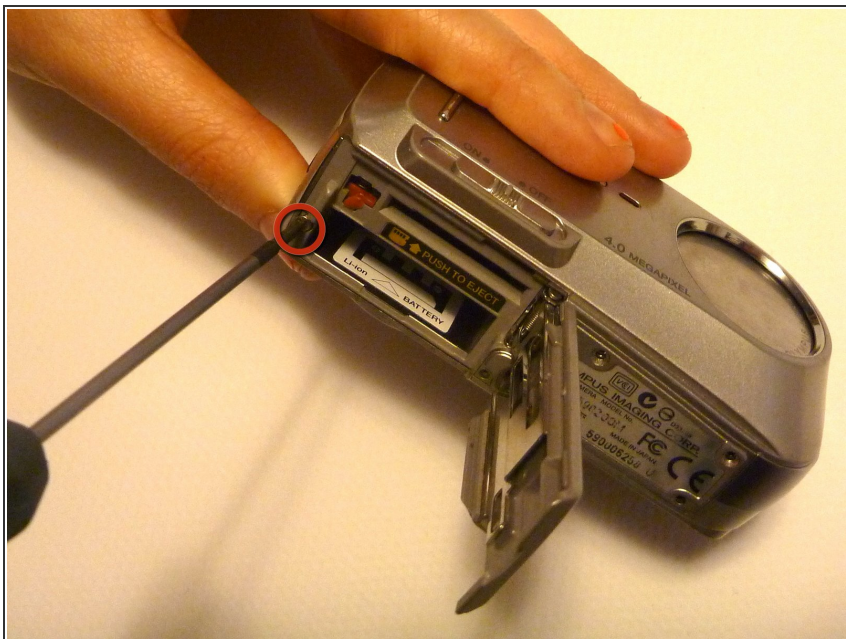


- Remove the single screw from the battery housing using a Phillips #00 screwdriver.

Step 4

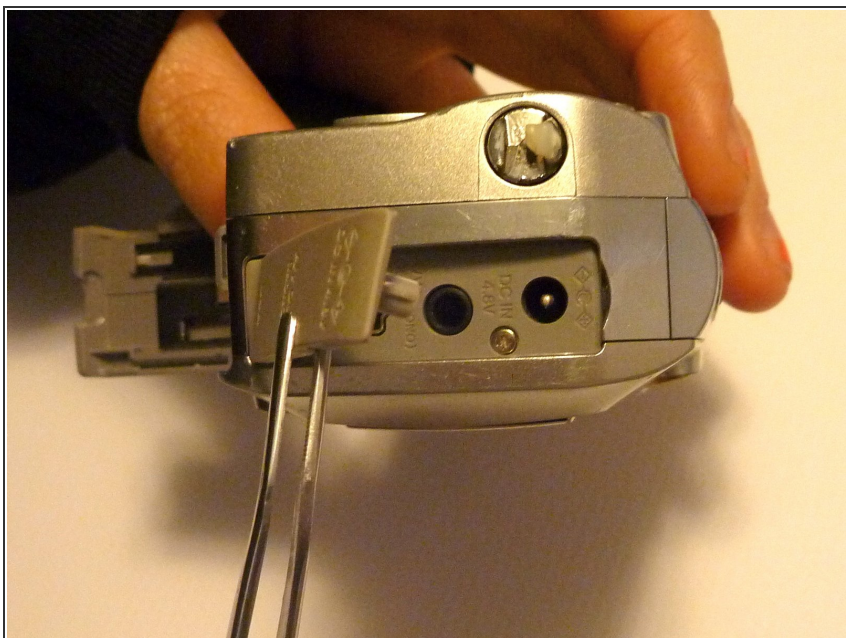


- Using tweezers, lift the rubber plate to expose the ports.

Step 5

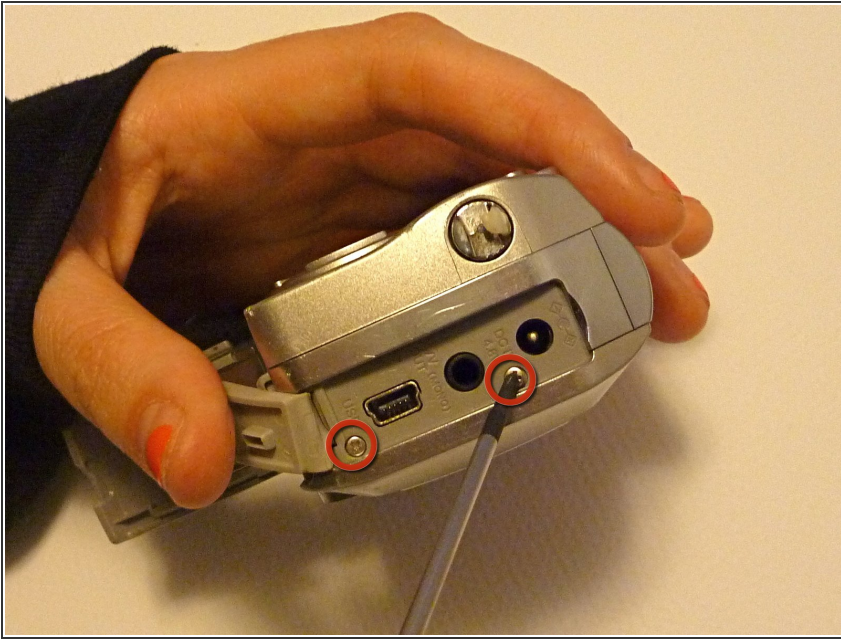

- Remove two screws from the ports using a Phillips #00 screwdriver.

Step 6

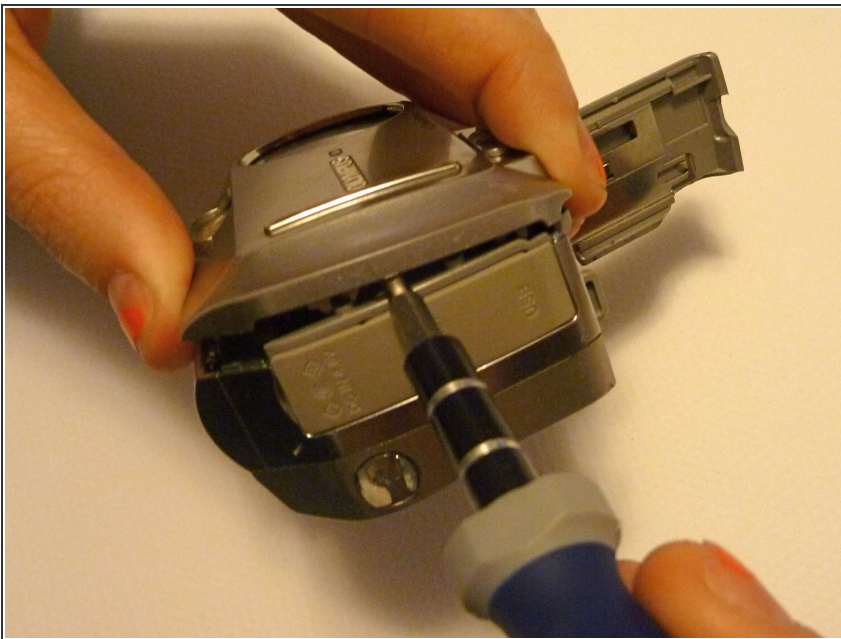

- Use a spudger to pry the faceplate away from the rest of the camera.

Step 7



- To avoid disconnection of the connector line to the motherboard, use caution when pulling faceplate away from camera case.


⚠ Damage to the connector line will prevent the on/off power switch's operational function.

Step 8 — Backplate



- Using a Phillips #00 screwdriver, remove three screws fastened to the camera backplate edge.

Step 9

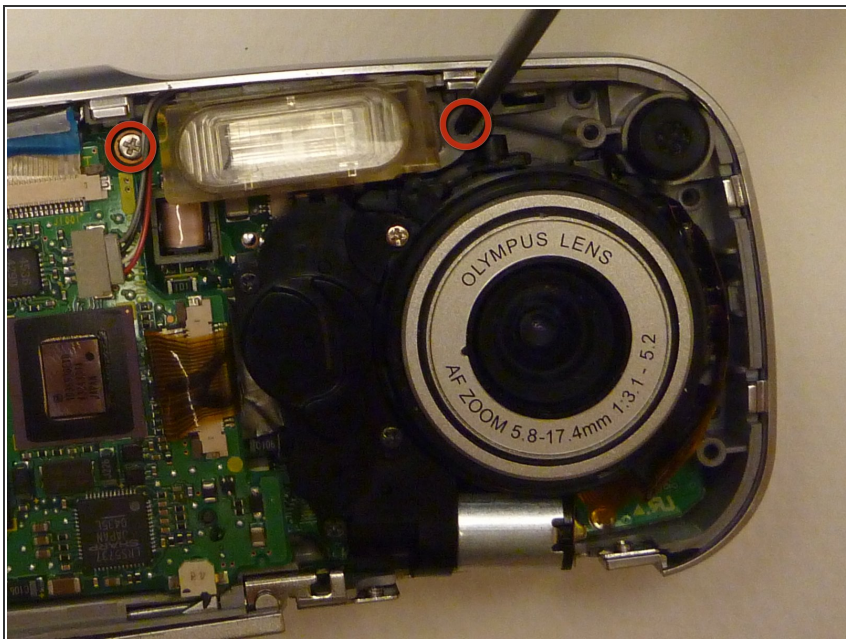

- Using a Phillips #00 screwdriver, remove the two camera flash screws secured to either side of bulb housing component.

Step 10




- Using an iFixit opening tool, pry the backplate from the camera internal housing component.

Step 11




- Pull the backplate away from the camera internal housing component.

Step 12 — LCD Screen

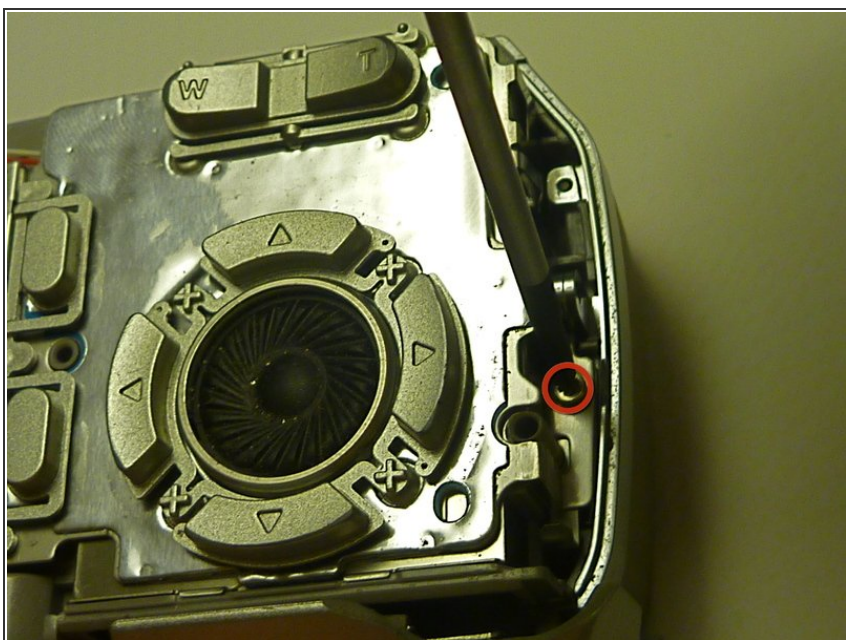



- Remove one screw Phillips #00 from the right side of the LCD screen camera internal housing component.

Step 13

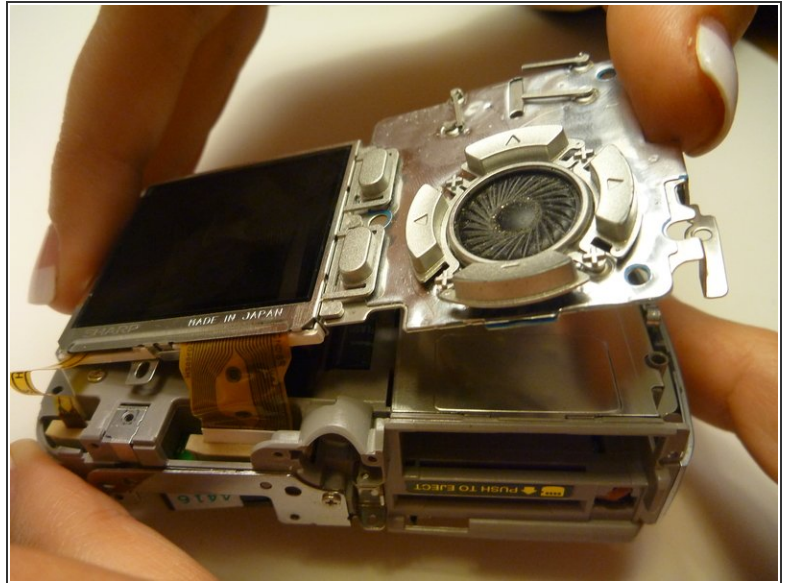

- To check that all screws are removed from the exterior side panel, gradually slide and lift no more than 3cm away from the camera internal component body.


Step 14

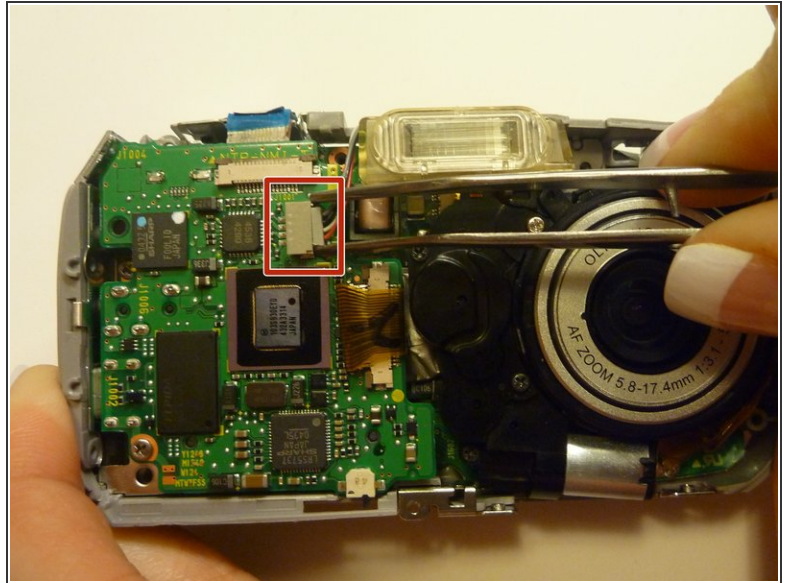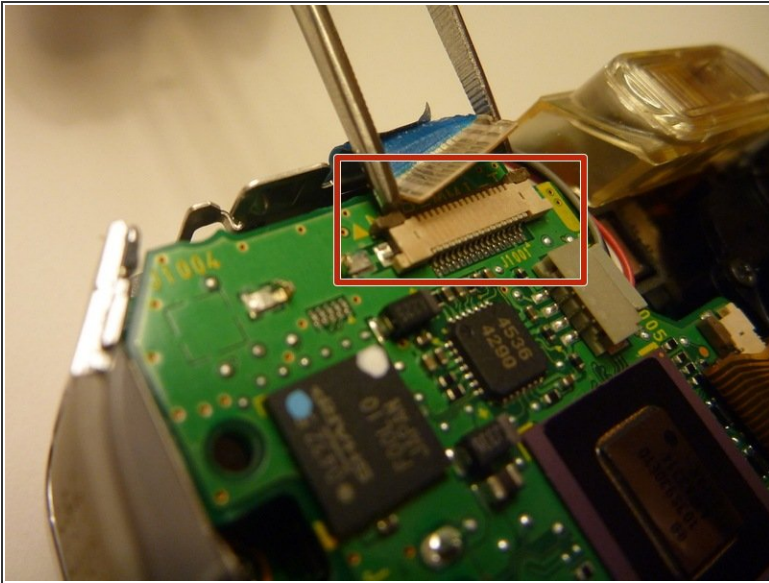

- View the front of the camera internal housing component.
- Using tweezers, detach the gray connector and blue wiring tape.


⚠ Be cautious to gently wiggle and pull blue wiring tape and gray wire connector during detachment.

Step 15

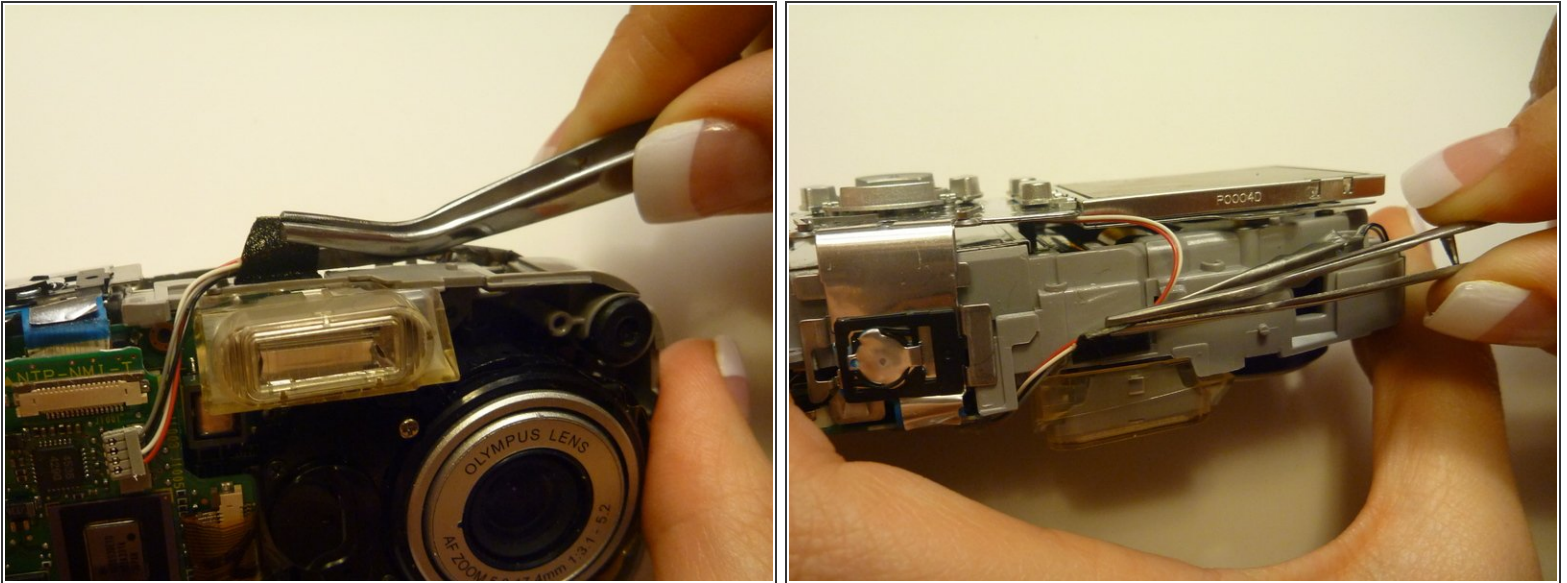


- View the top of the camera internal housing component.
- Using tweezers, gently lift the black tape exposing all connector wires.

Step 16

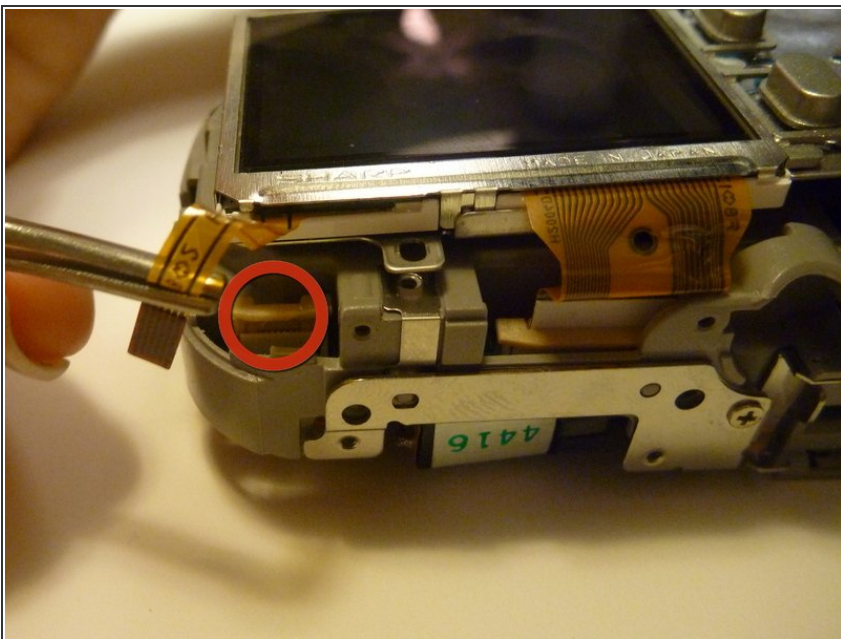


- View the bottom of the camera internal housing component.
- ⚠ Caution: Keep yellow taped wire attached to the LCD screen.
- Use tweezers to gently wiggle, pull, and detach tape from the surface of the camera internal housing component.

Step 17

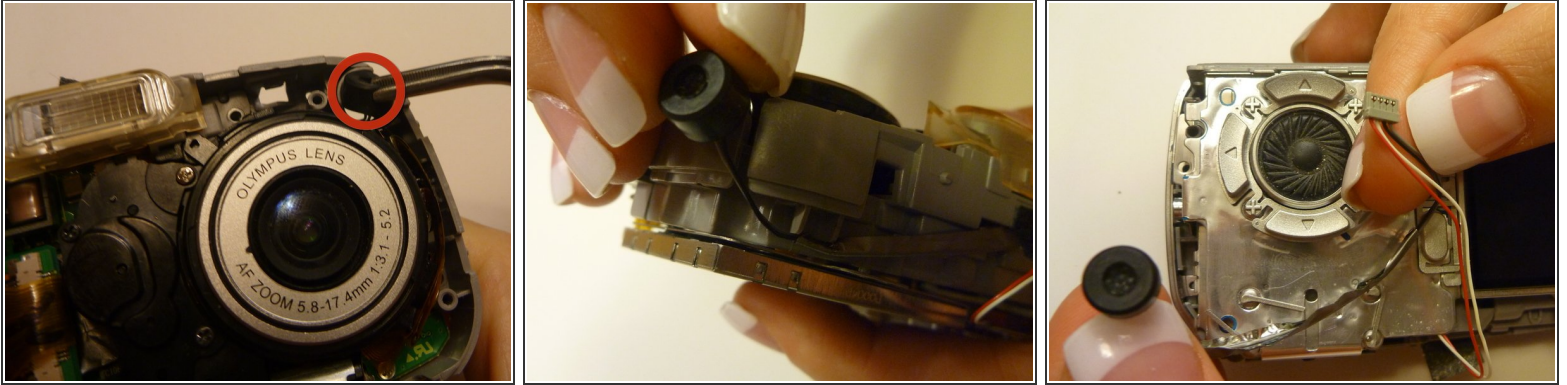

- View the front of the camera internal housing component.
- Using tweezers, gently lift the speaker, cautiously maneuvering the wire away from the side of the internal housing component toward the front of the camera internal housing component.

Step 18

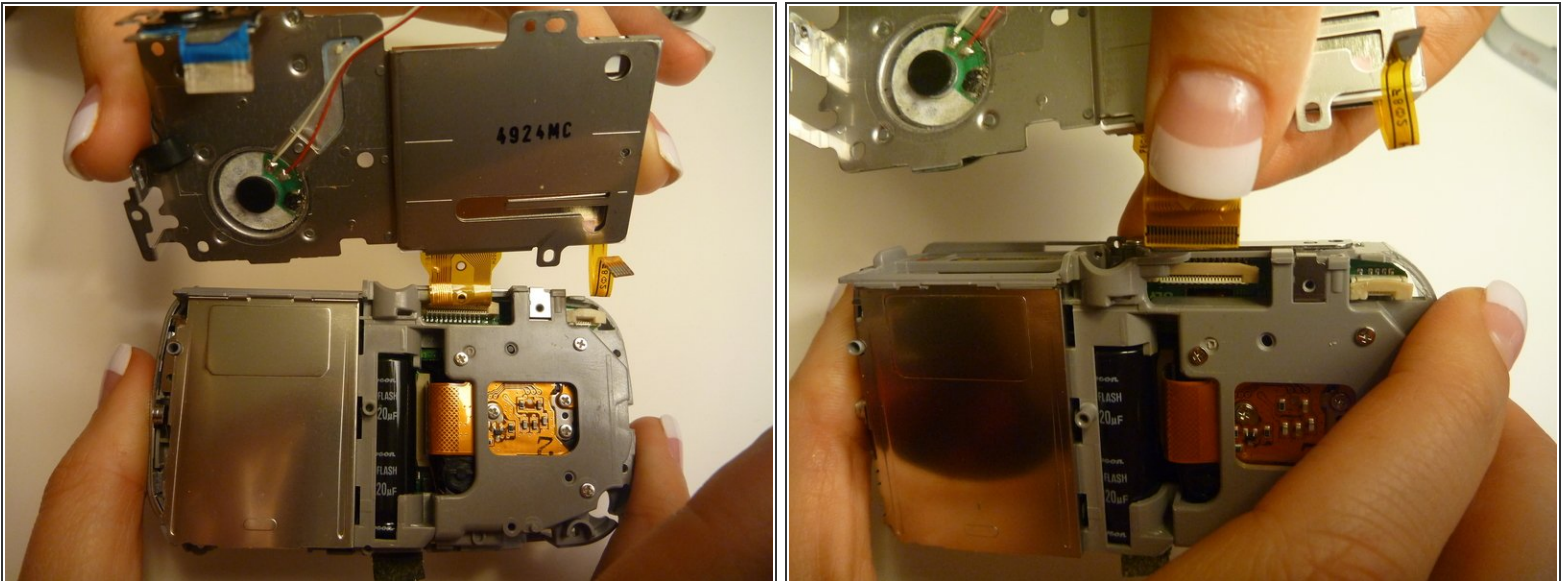

- Gently lift the LCD screen away from the camera internal housing component hinging the thick yellow wiring tape attached to the camera internal housing component.
- Use a forefinger and thumb to gently pull the thick yellow wiring tape out of the camera internal housing component.

To reassemble your device, follow these instructions in reverse order.