


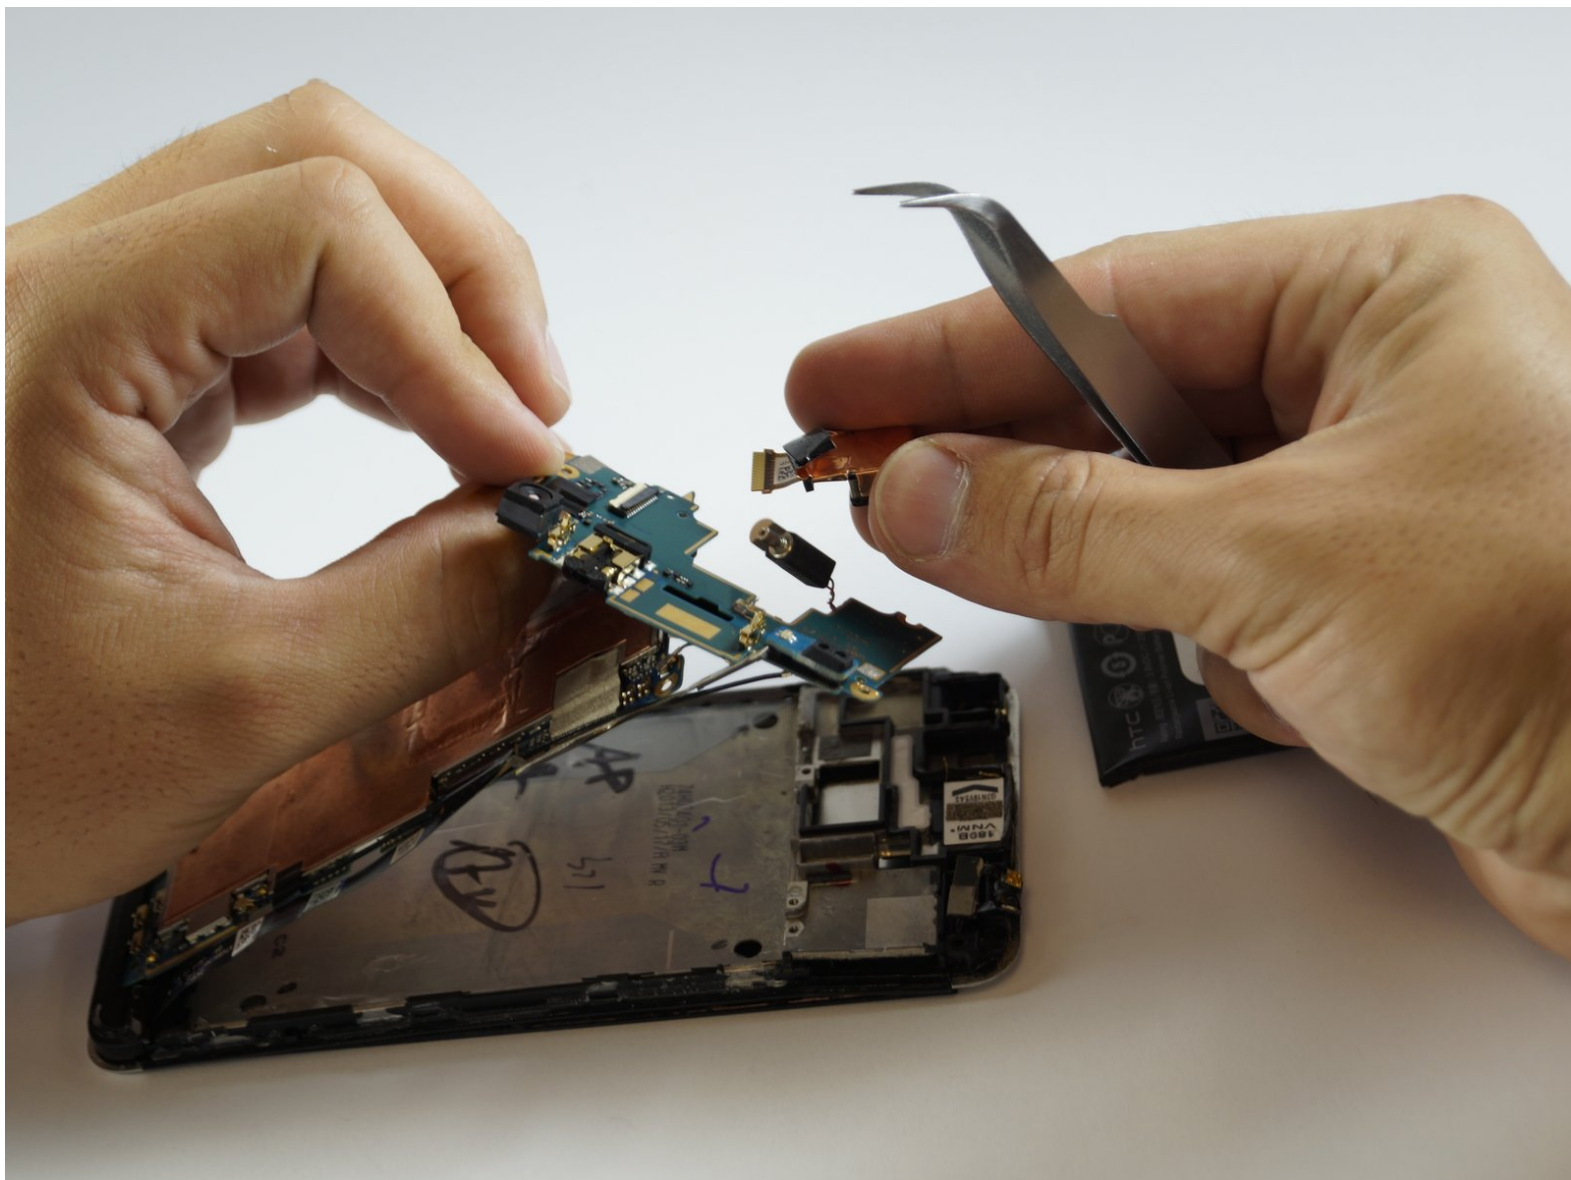

# HTC One Speaker Replacement

Replace the speaker.

Written By: Alex



---

## INTRODUCTION

If you have an issue with your speaker as stated in our troubleshooting page ( [HTC One M7 Troubleshooting](#) ) then this guide is for you.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Speaker




- Gently remove the volume button. Using a plastic opening tool or guitar pick, loosen the back panel of the phone. Work around the phone, following the crease of the back panel.

## Step 2

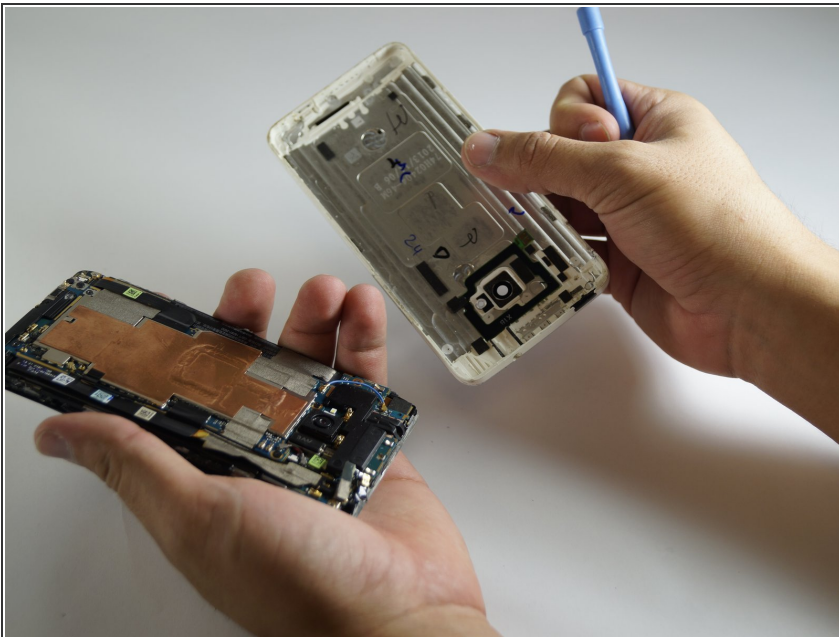


- Pry the back loose and lift. The back panel will come off with time.

## Step 3

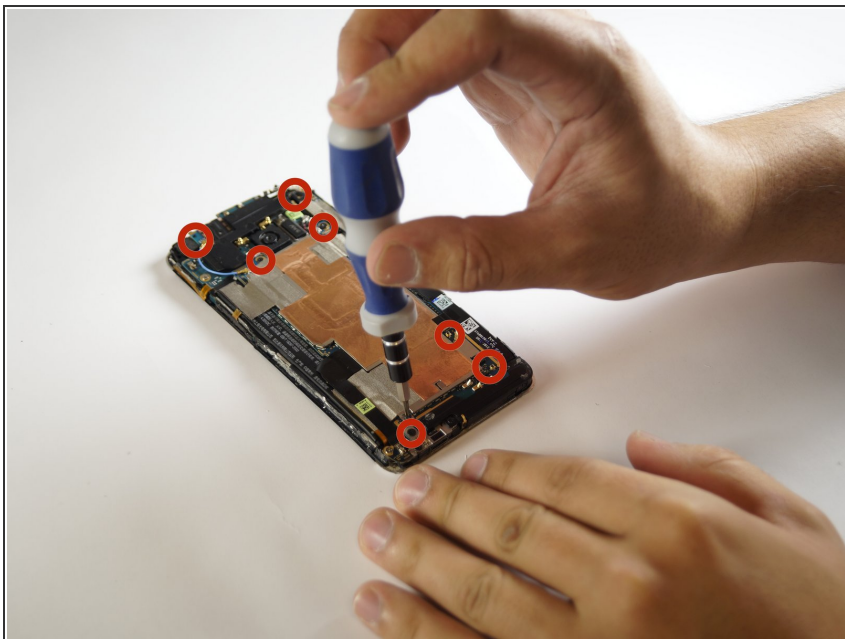

- Remove all of the screw which are located on the backside of the phone with a #000 Phillip screw driver.
- ⓘ Remove the tape gently to find some hidden screws underneath.


## Step 4

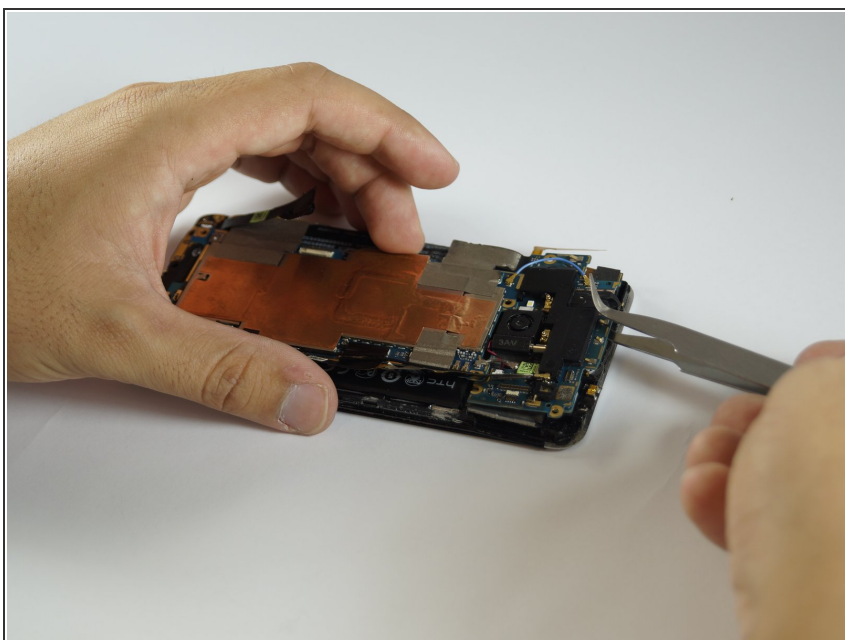

- Use tweezers to get underneath the motherboard to lift.
- ⚠ Lift gently because the motherboard is not completely disconnected.




## Step 5

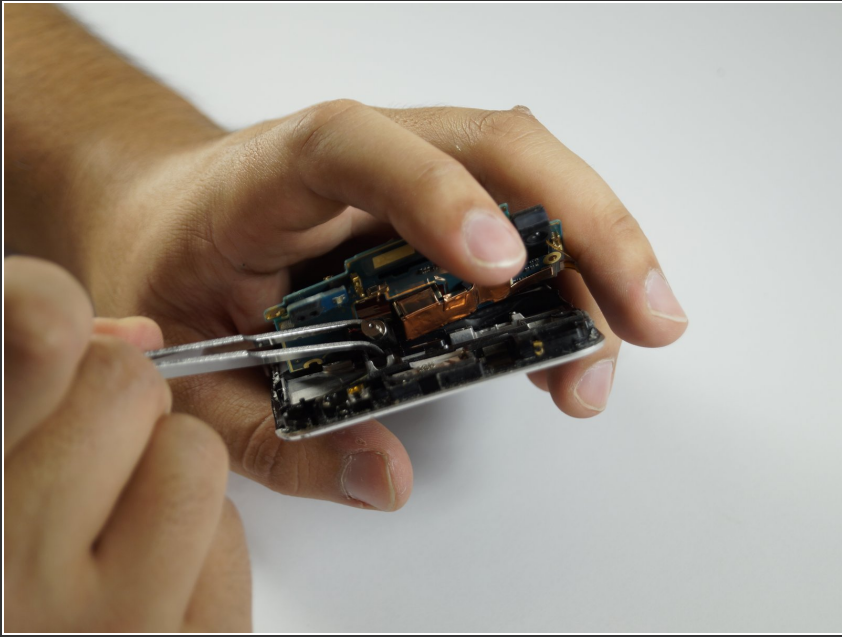


- Remove the Camera by detaching the box from the frame (you will have to rotate the metal piece on the box to remove it)
- Lift the camera from the bottom of the motherboard.



## Step 6

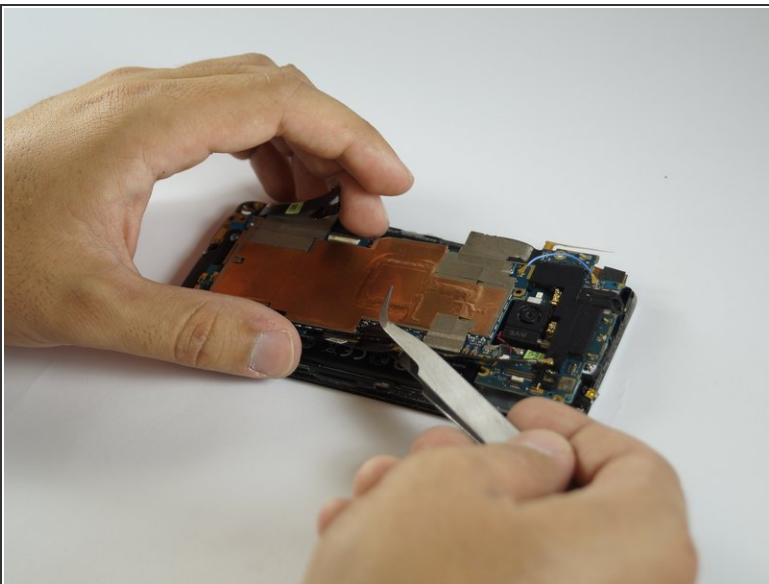

- Remove the motherboard completely out of the phone.




 May stay attached from one end by tape.

## Step 7

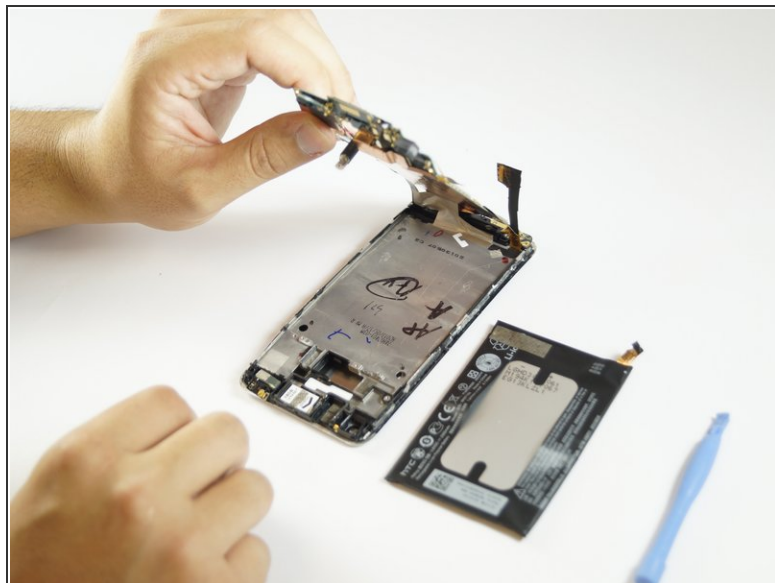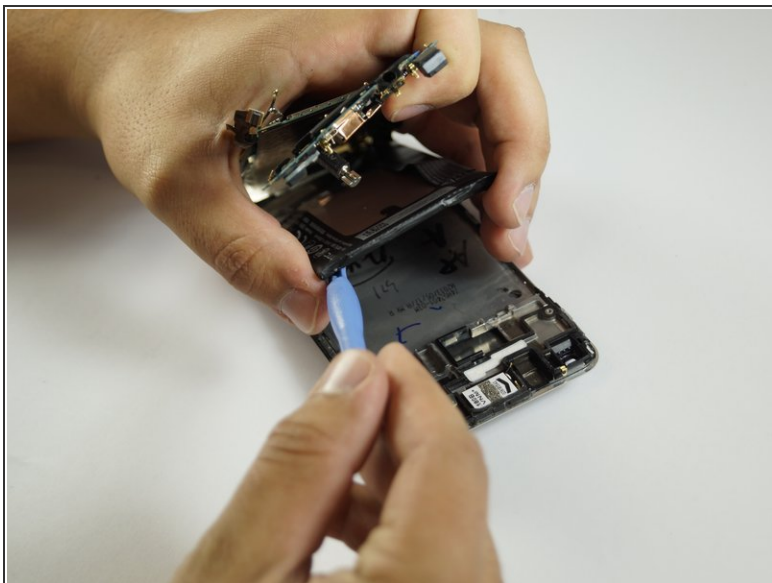

- Use the blue opening tool to pry the battery from the frame.
- ⓘ Some force will be needed since the battery is glued to the frame.
- ⚠ Be careful to not break the battery upon removal.

## Step 8

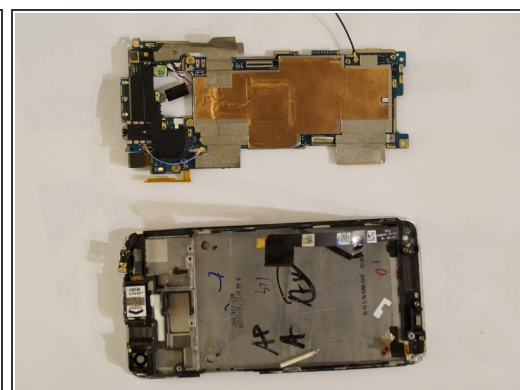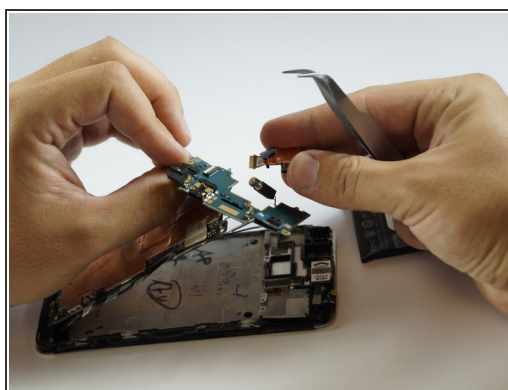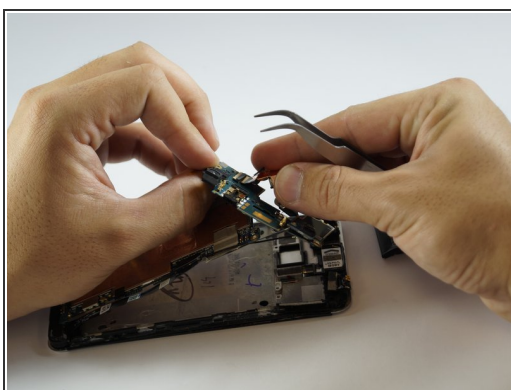

- Completely remove the motherboard.

## Step 9



- Remove the #000 screws around the speaker that are located at the bottom of the frame.
- Lift the speaker out of the frame.

To reassemble your device, follow these instructions in reverse order.