


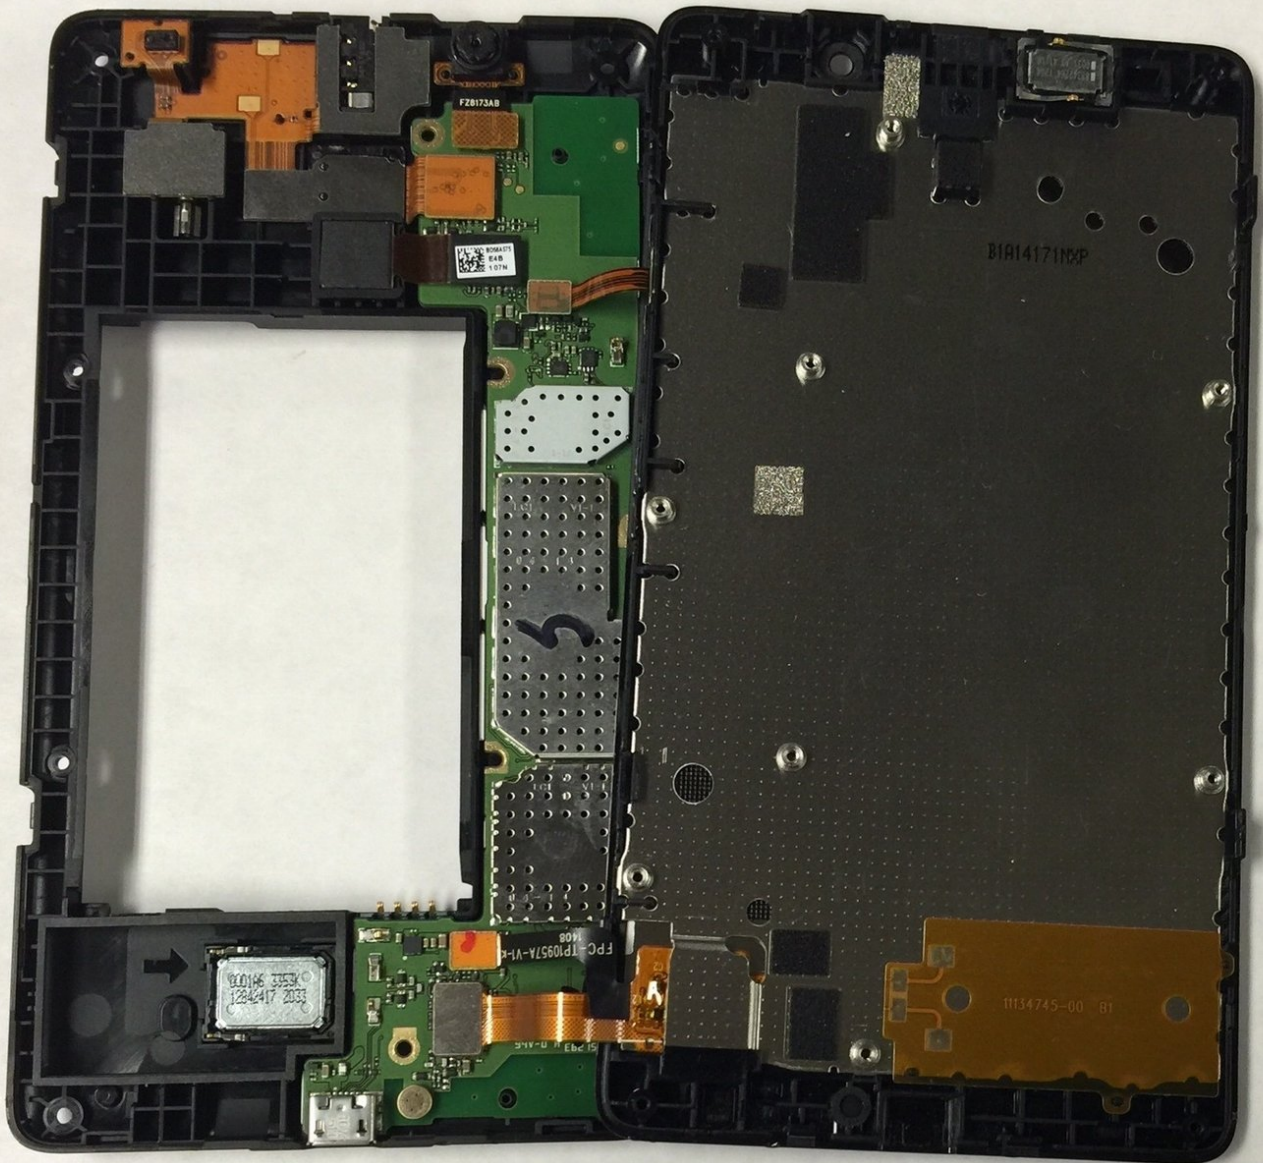

Nokia XL Dual SIM Disassembly

This is a guide to disassemble your Nokia XL Dual SIM.

Written By: Shadeed Bilal



INTRODUCTION

Use this guide to repair your Nokia XL Dual Sim all on your own.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Cover Removal




- You will first need to separate the back cover from the device.
- Gently pry open each side of the device at the indicated locations. It is best to use a plastic opening tool or similar tool.

Step 2 — Battery Removal




- Remove the back cover.
- Use a plastic opening tool to lift the battery. Then, remove it.

Step 3 — Screen Separation part 1

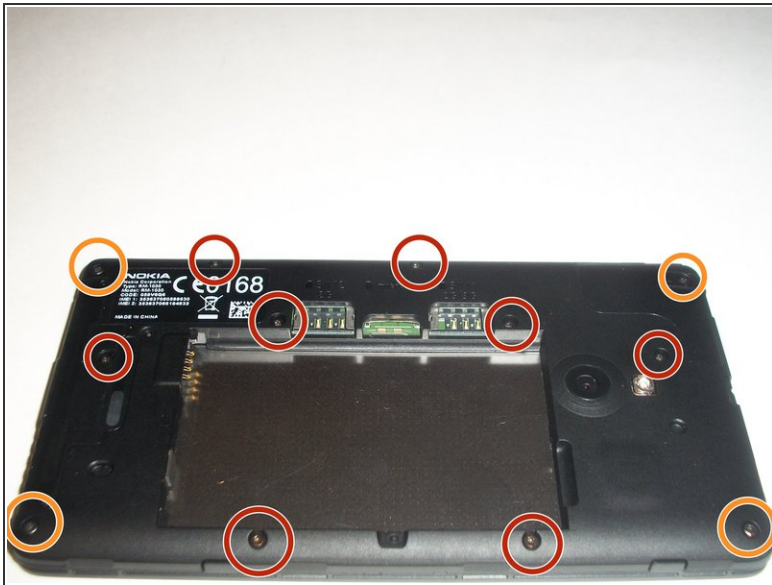


- To access the inner components of the device, remove the various screws. Keep them separate, and organize them by size.
- ⓘ You will need a T5 Precision Torx screw driver to remove the screws.
- The locations of the T5x3.4mm screws are indicated in the picture.
- The locations of the T5x4.1mm screws are indicated in the picture.


Step 4 — Screen Separation part 2

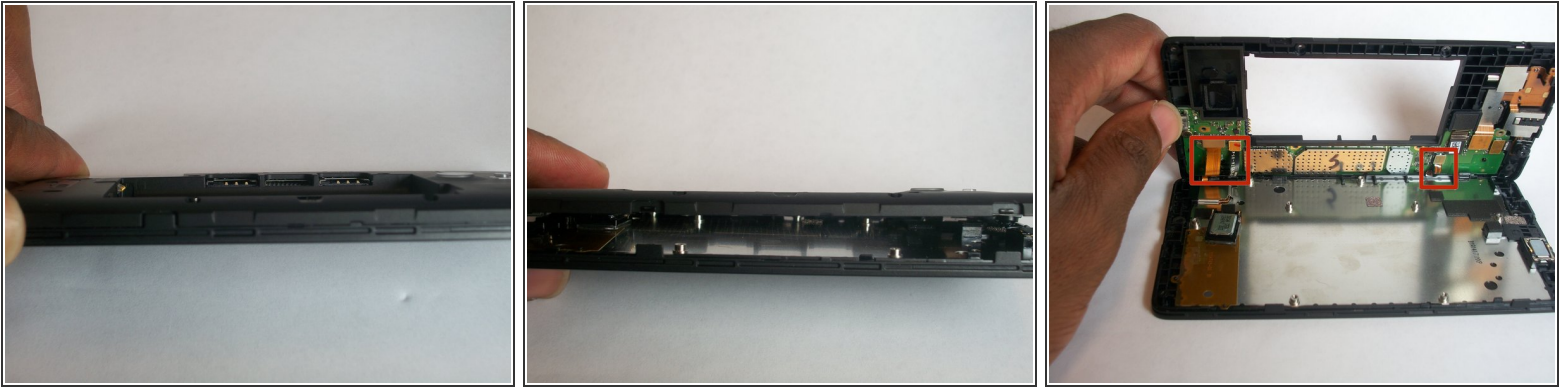

- Use the plastic opening tool to gently pry the device apart.
- There are flaps on both sides of the phone as indicated in the picture. This is what you will need to pry apart.

 **Please be cautious when opening the device.** There are various connectors inside the device that must be handled with care.

Step 5 — System components

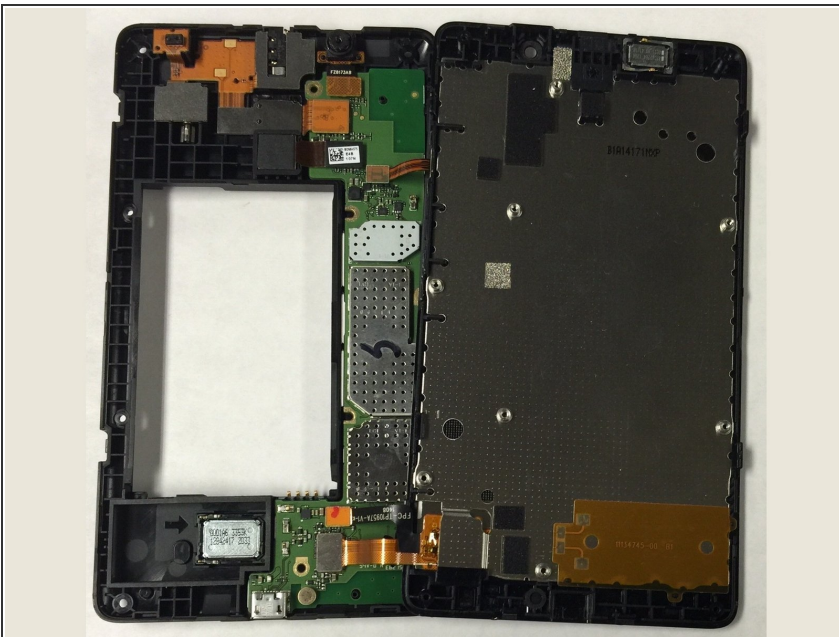

- Once the device is open, take note of all the components.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 03:36:59 AM (MST).

