




# Xbox 360 Motherboard Replacement

Written By: Walter Galan

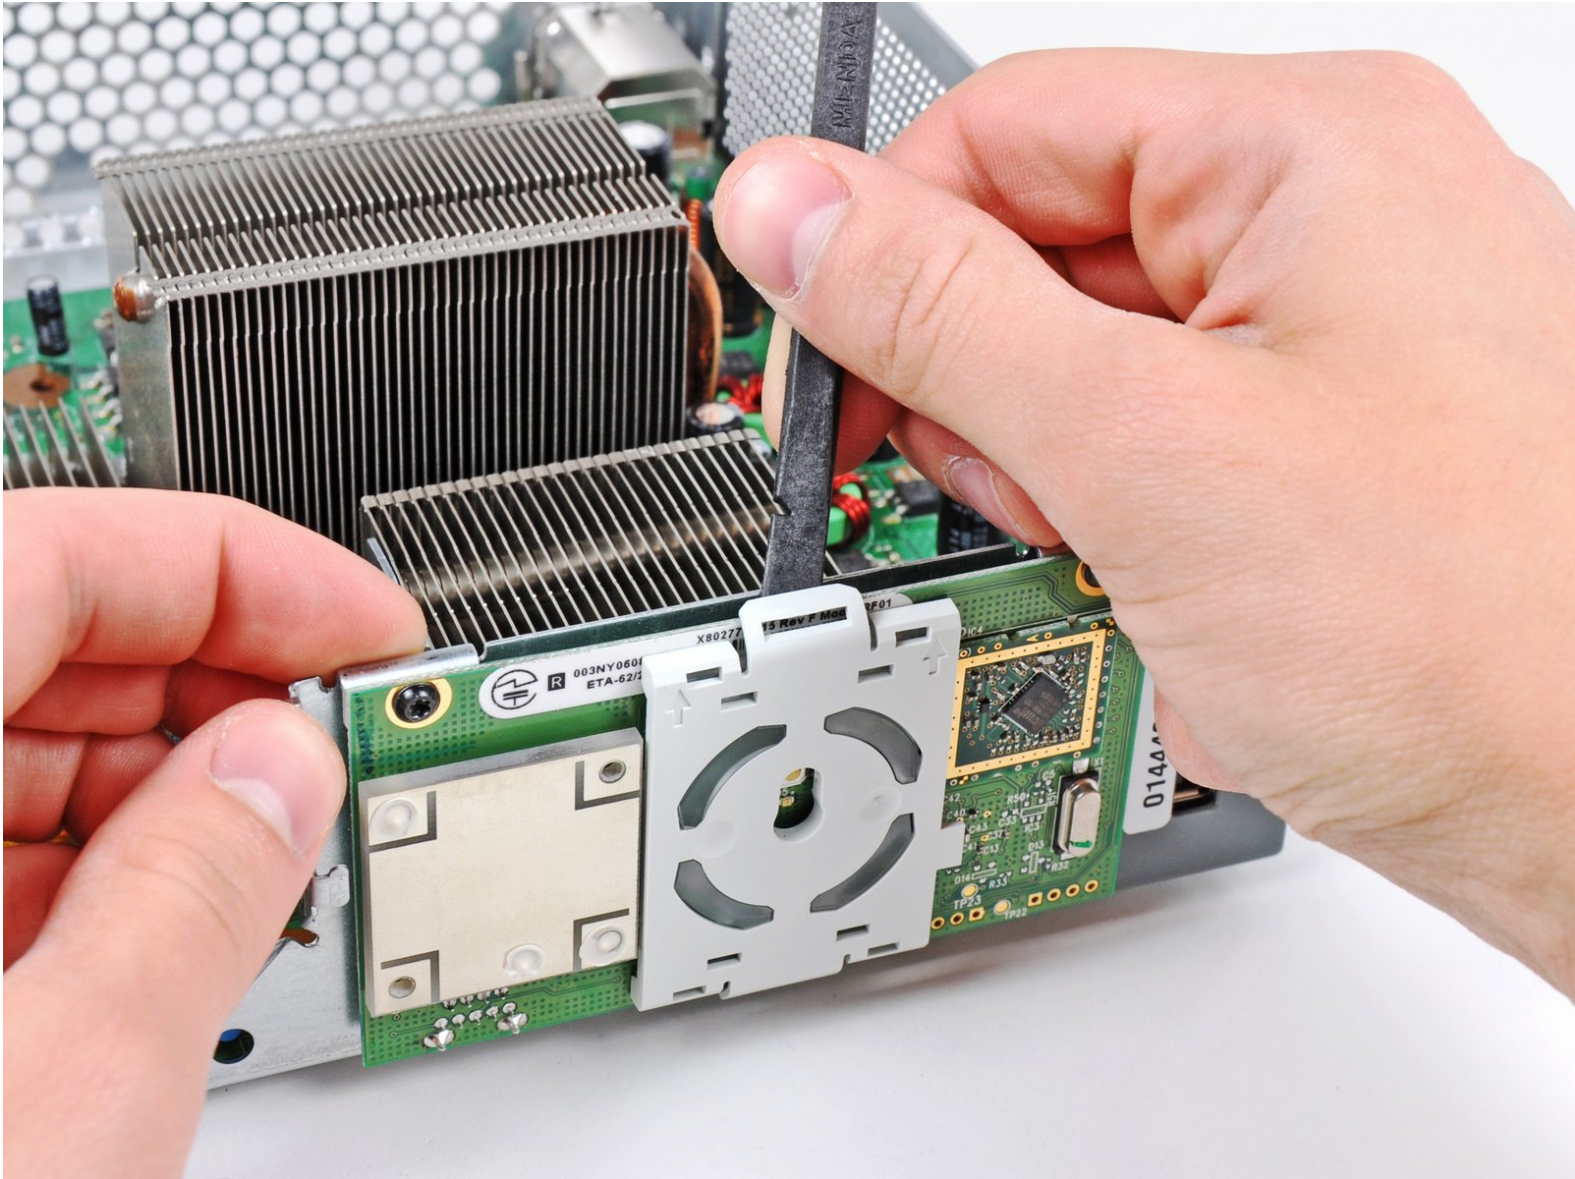

---

# INTRODUCTION


This guide is an internal prereq.



## TOOLS:


- [T8 Torx Screwdriver](#) (1)
  - [T10 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Motherboard

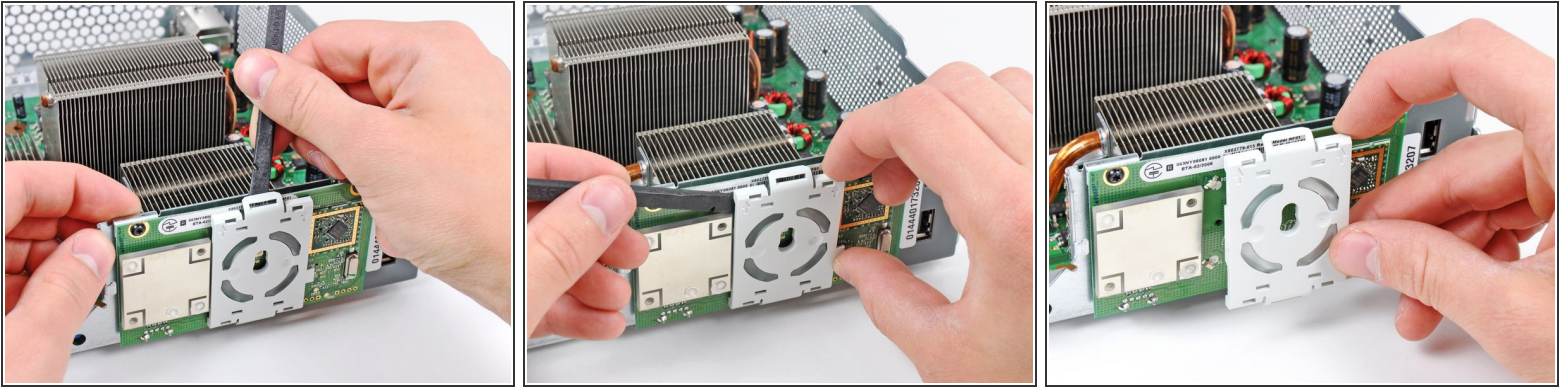

- Use the flat end of a spudger to release the clips securing the RF module shield along the top and the left edge of the RF module.
- ⓘ It may be easier to use your fingernail to release the clips from the RF module.
- Remove the RF module shield from the console.

## Step 2

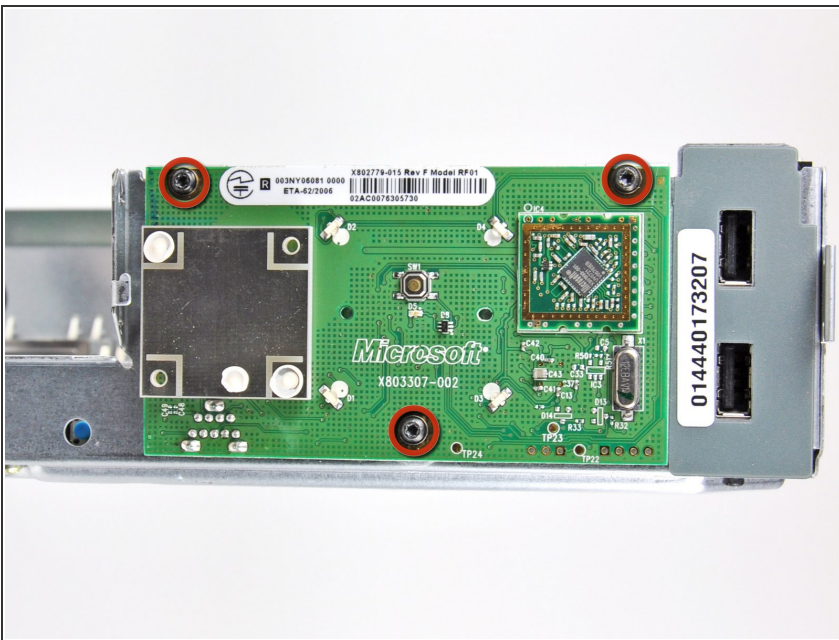

- Remove three 5.6 mm T8 Torx screws securing the RF module to the metal chassis.




### Step 3



- Grasp the RF module and lift it straight up to disconnect it from its socket on the motherboard.
- Remove the RF module from the console.

### Step 4

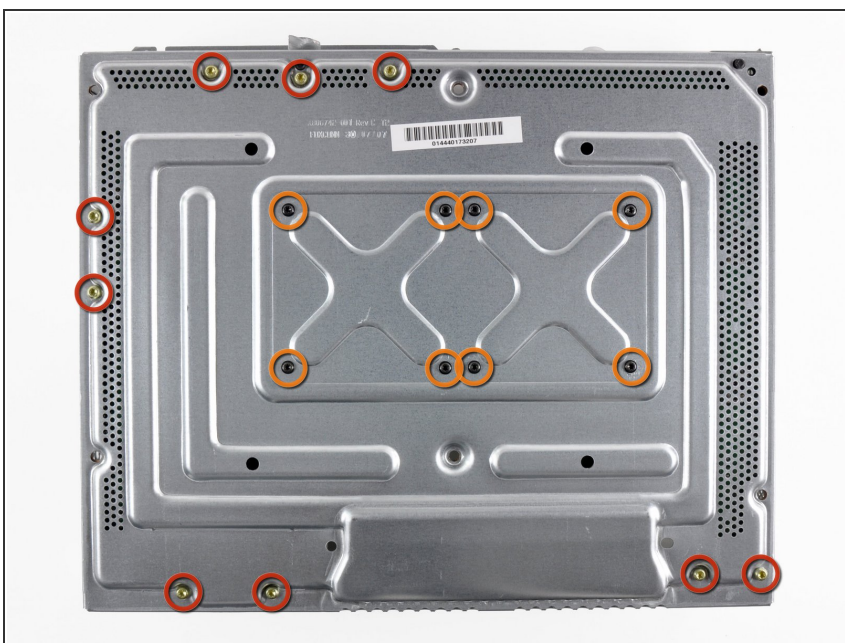



- Remove the following screws securing the motherboard to the metal casing:
  - Nine gold 11 mm T10 Torx screws.
  - Eight black 5.6 mm T8 Torx screws.



If you are reassembling your Xbox 360 after installing the Red Ring of Death Fix Kit, the eight T8 Torx

screws circled in orange are not reused.

## Step 5

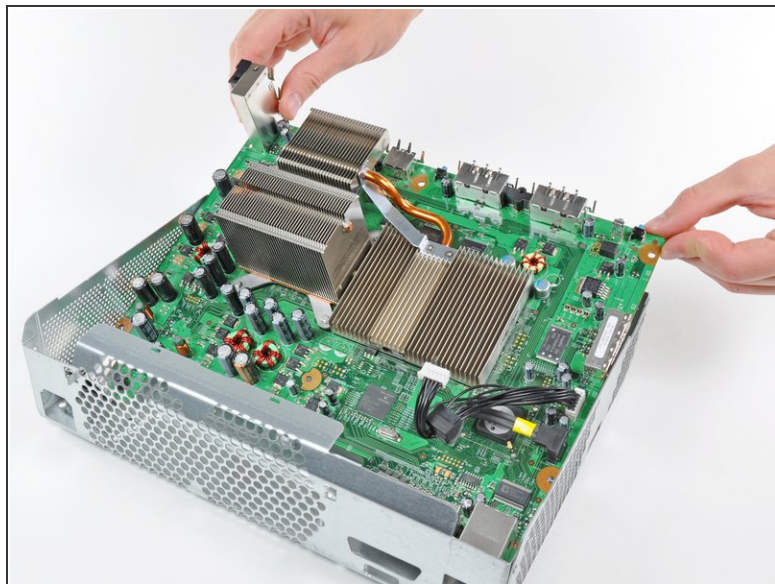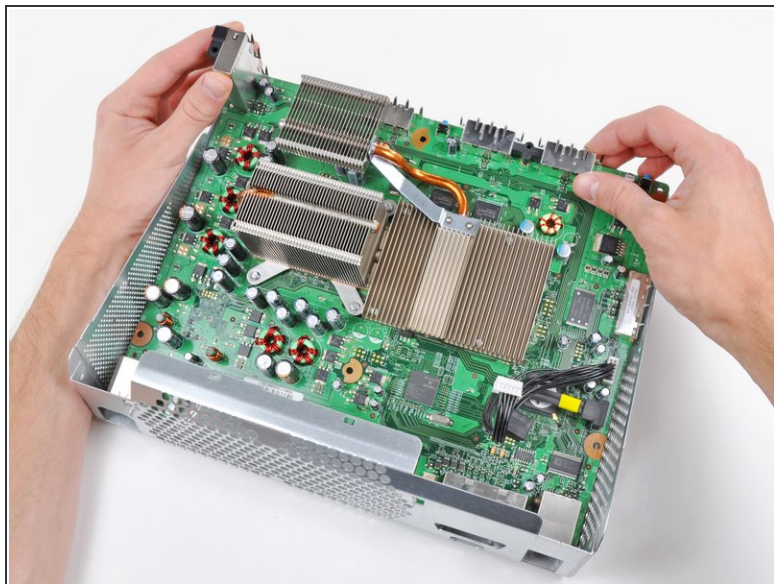

- ⓘ Turn the Xbox over, being careful not to let the motherboard fall out of the chassis.
  - Lift the motherboard assembly from its front edge.
- ⚠ Be careful not to damage the sockets as you rotate the motherboard away from the metal casing.
  - Remove the motherboard assembly from the metal casing.

To reassemble your device, follow these instructions in reverse order.