




Kodak EasyShare LS743 Top and Menu Button Replacement

Replace top button of your Kodak EasyShare LS743.

Written By: Michael

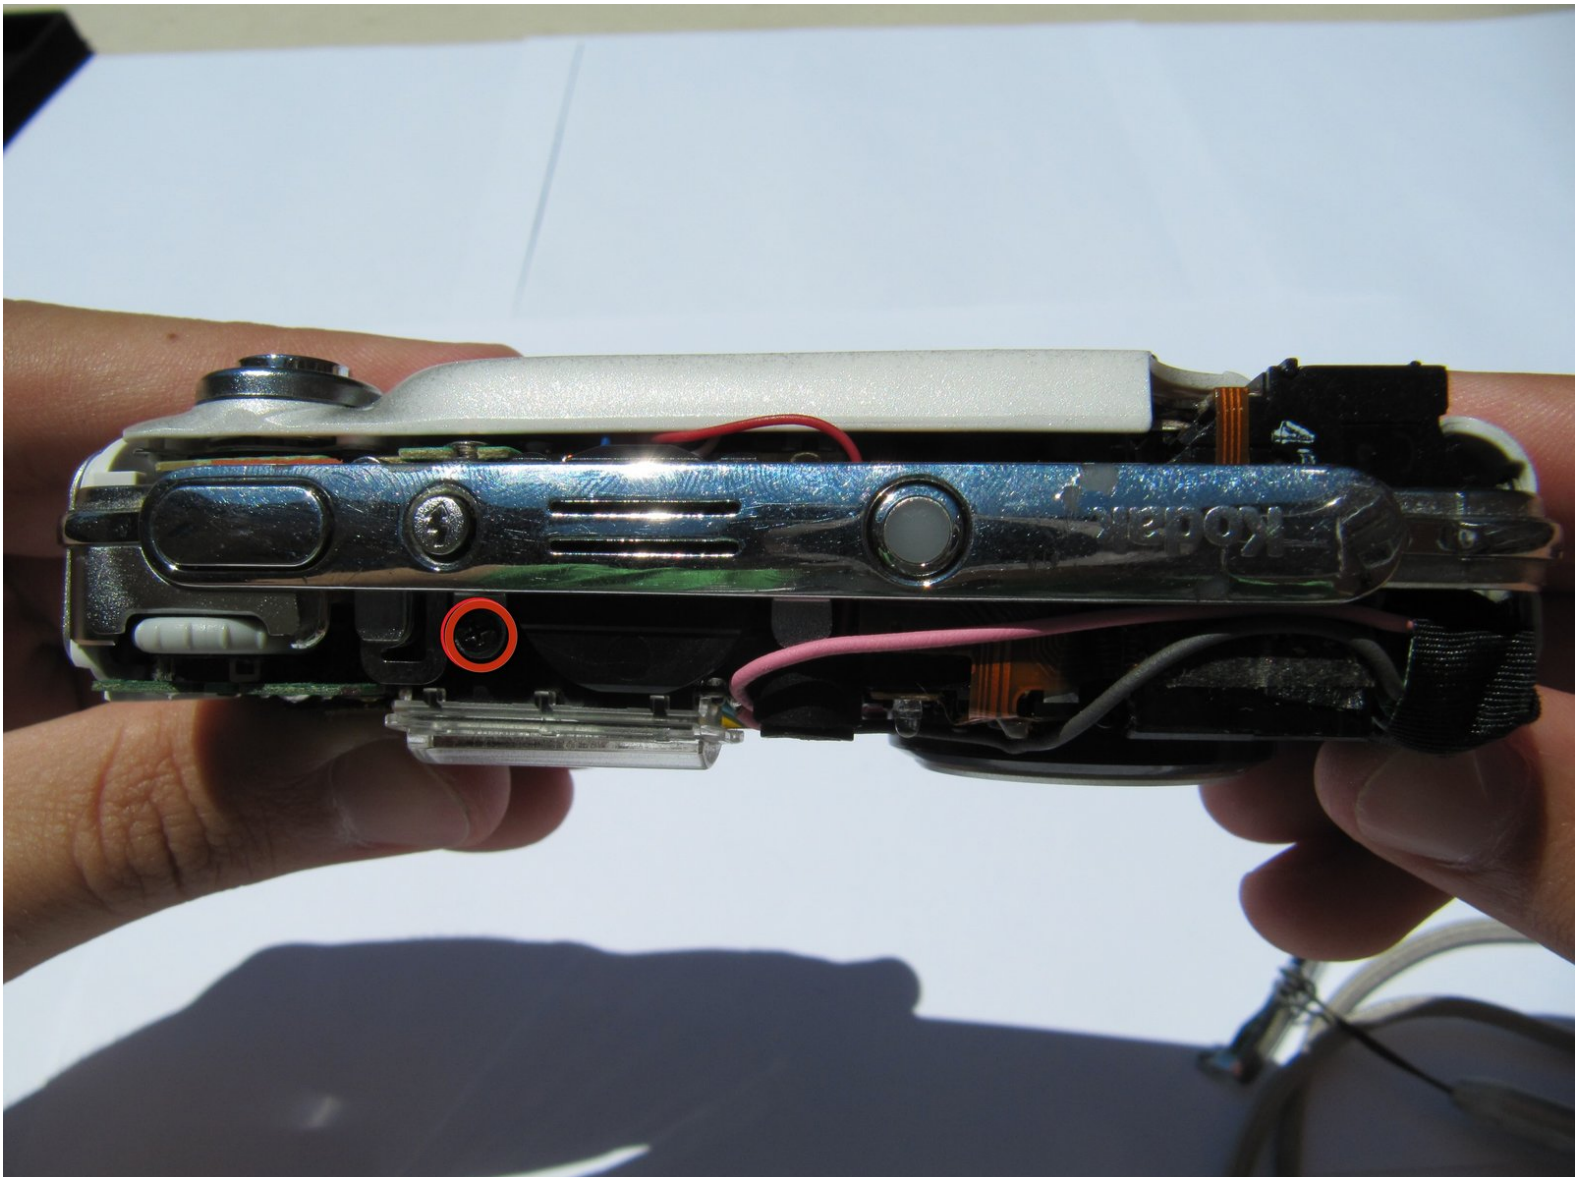

INTRODUCTION


How to replace an unusable or damaged button on your Kodak EasyShare LS743. Be sure to remove the battery from your camera prior to starting this repair.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

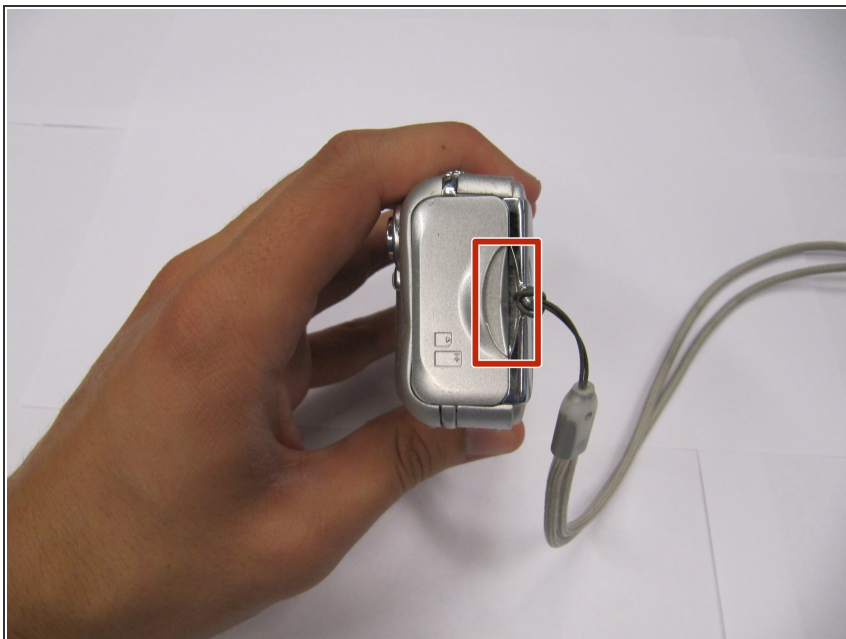

- Using your fingernail, open the battery cover.

Step 2

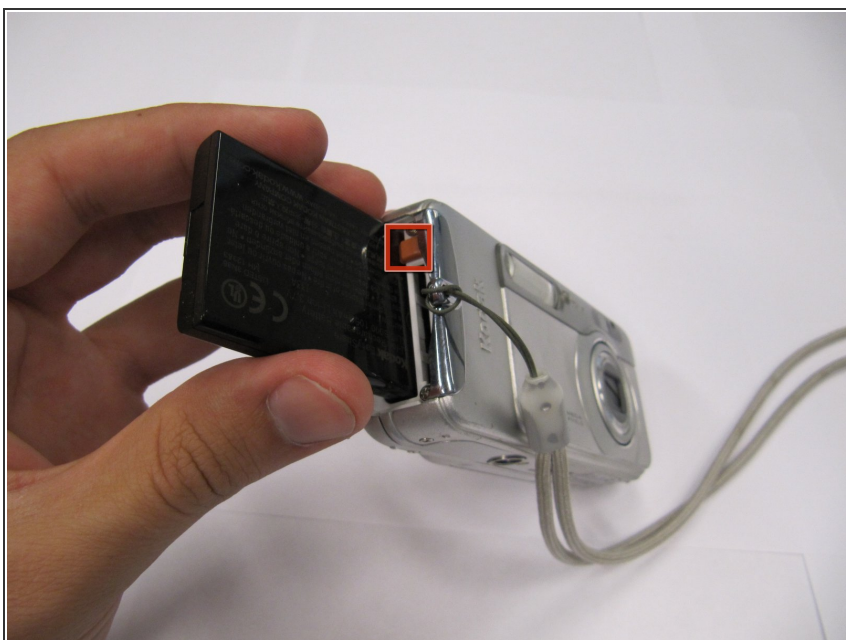

- Slide the orange latch sideways to eject the battery.
- Remove the battery from the battery slot.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Using a Phillips #00 screwdriver, remove two 5.39 mm screws next to the battery slot.
- Remove the metal piece holding down the lanyard, then remove the lanyard.

Step 4




- Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera.
 - One 6.25 mm screw is located on the top right corner, right to the "OK" button.
 - Four 4.45 mm screws are on the bottom of the camera.
 - Two 2.95 mm screws are on the left side of the camera, above the USB port.

Step 5

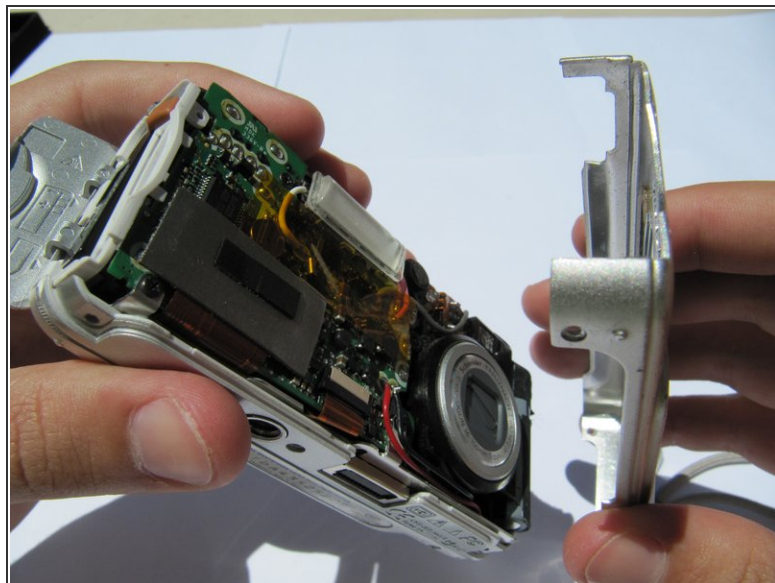



- Carefully remove the rear camera casing.
- Carefully remove the front camera casing.

Step 6 — Top and menu buttons

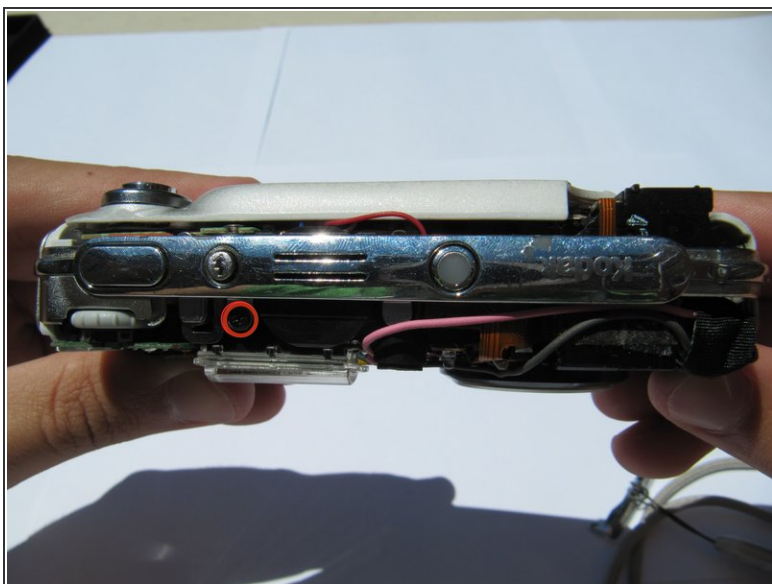

- Remove the top panel screw (1x 4.37mm).

Step 7

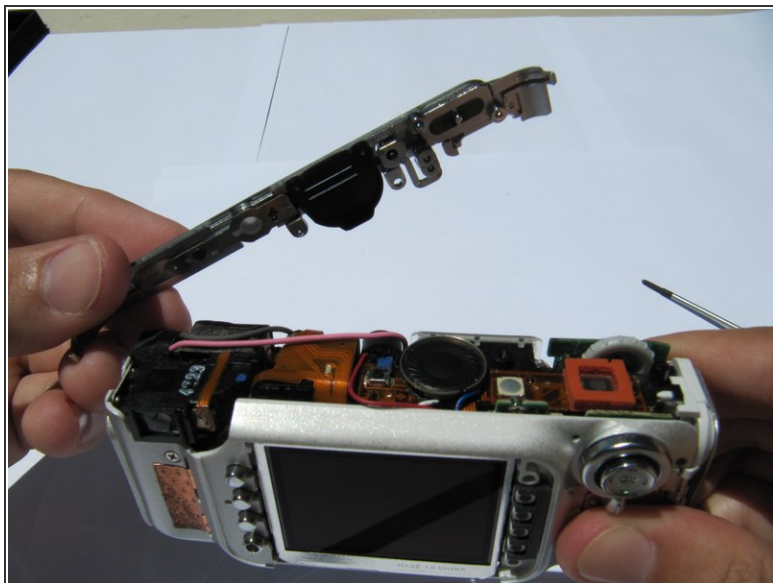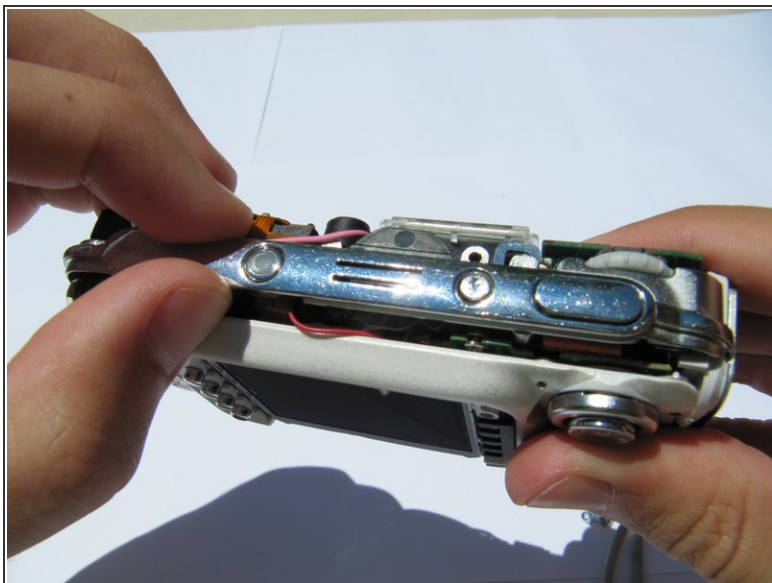



- Remove the top panel.

Step 8





- Remove the back panel screws (1x 3.33mm, and 1x 3.40mm).

Step 9

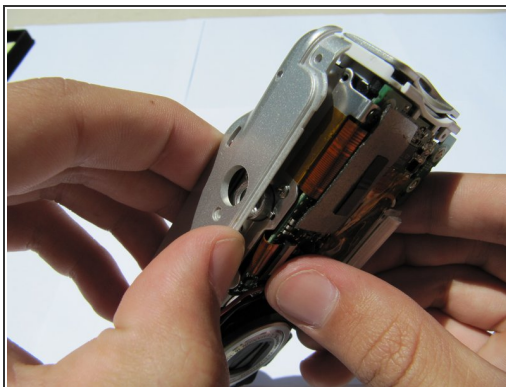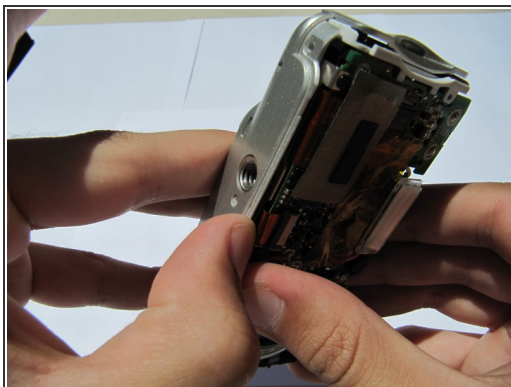



- Separate the inner casing from the tripod mount.

Step 10

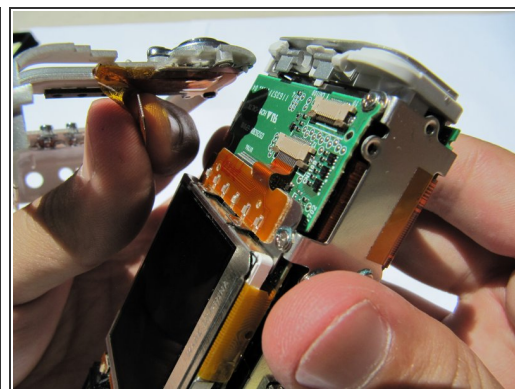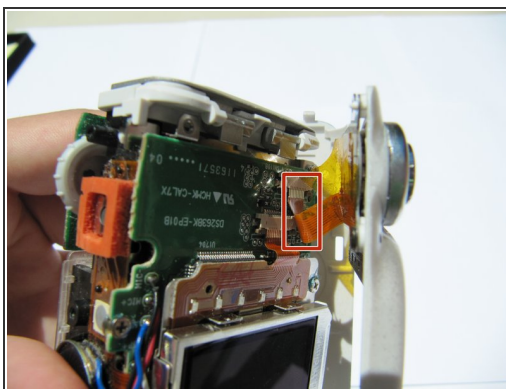


- Gently pull the orange tab out of the circuit board.

Step 11

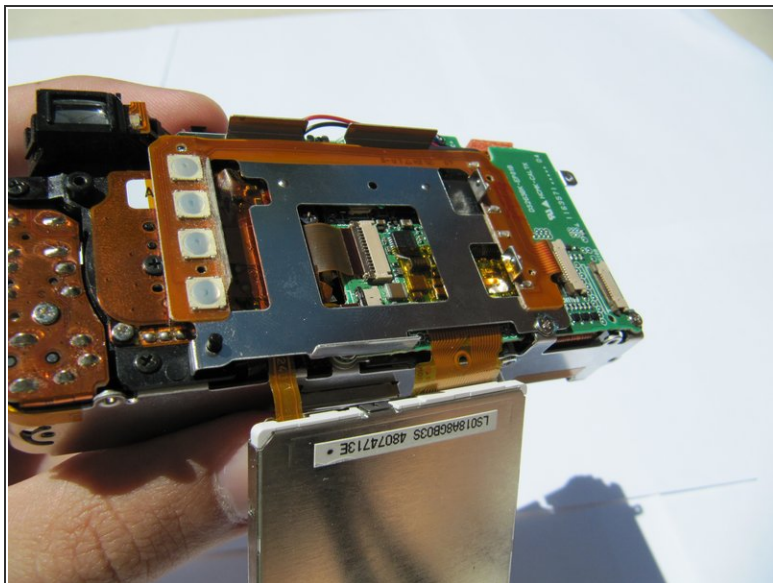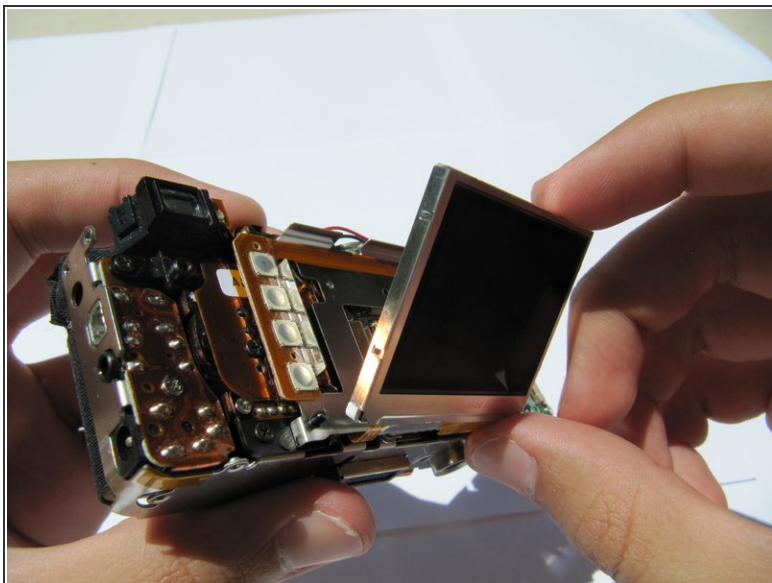



⚠ Carefully separate and flip over the LCD panel to expose the central circuit board.

Step 12

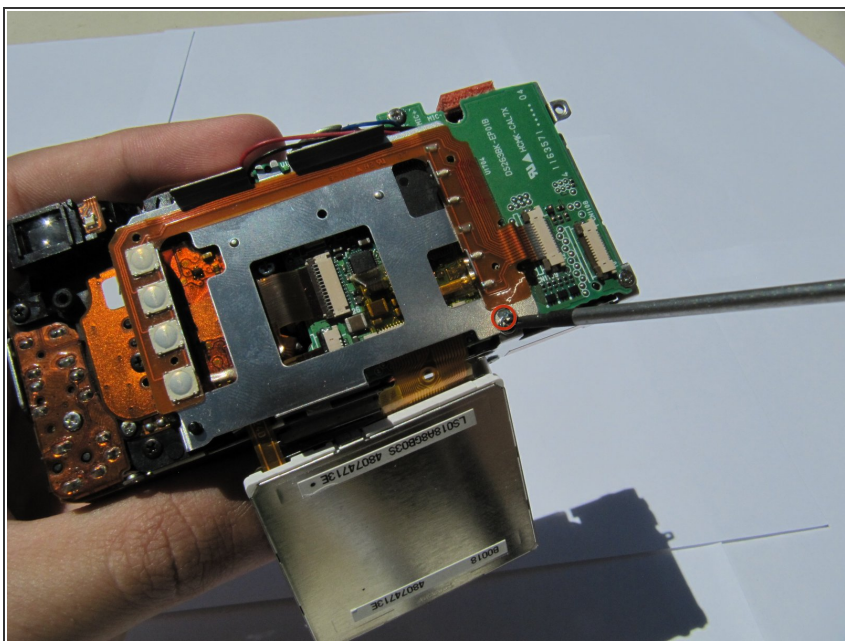

- Remove the (1x 3.33mm) screw from the menu button panel .

Step 13

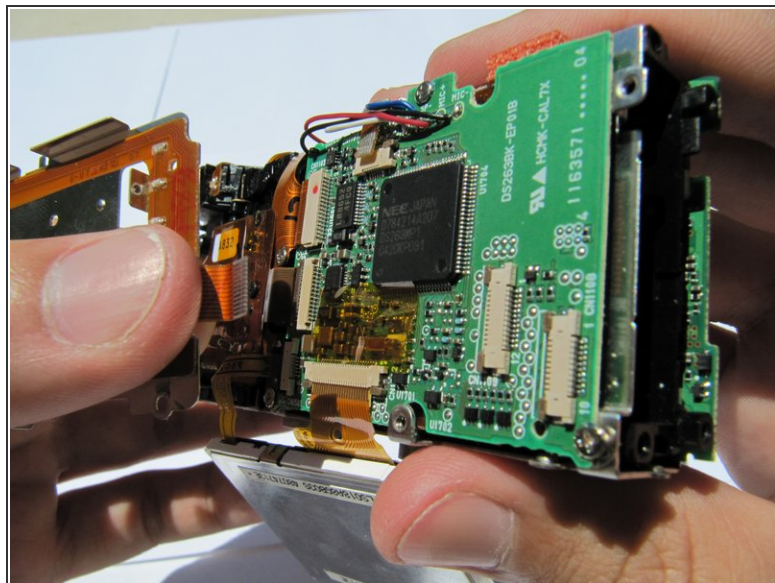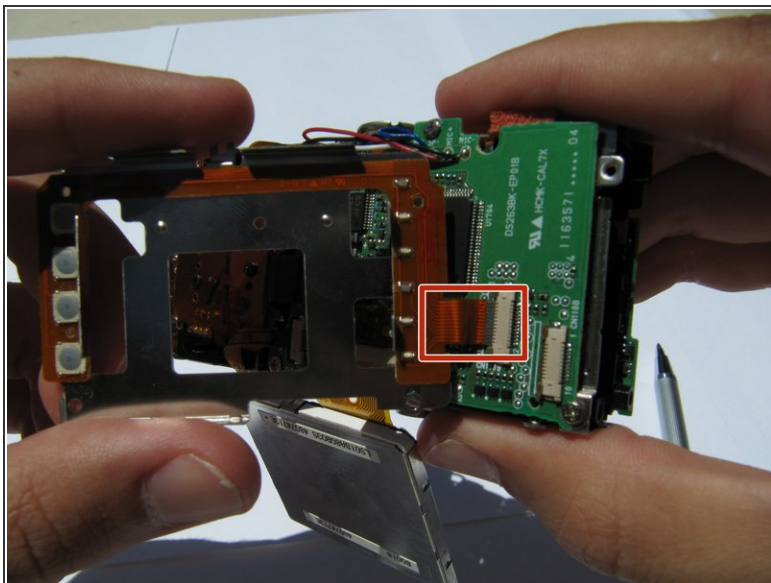

- Pull the second orange tab from the circuit board and remove the buttons.

To reassemble your device, follow these instructions in reverse order.