



Asus X200MA Battery Replacement

If your battery is giving you a hard time on...

Written By: Vanessa Garcia



INTRODUCTION

If your battery is giving you a hard time on your laptop, follow this guide.

TOOLS:

Phillips #0 Screwdriver (1)

Metal Spudger (1)

Tweezers (1)

Step 1 — Back Panel



- Remove the following six screws:
 - Six 4 mm screws using a Phillips #0 screwdriver.
 - Remove the following one screw:
 - One 14 mm screw using a Phillips #0 screwdriver.
- ☒ The 14mm screw goes in the center.

Step 2



- Take two rubber caps off the back side of the laptop.
- Use a Phillips #0 screwdriver to remove the two 14 mm screws under the rubber caps.

Step 3



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

Step 4 — Battery




- Take two rubber caps off the back side of the laptop.

Step 5



- Remove the following two screws under the rubber caps.
- Two 14 mm screws using the Phillips #0 screw driver.

Step 6

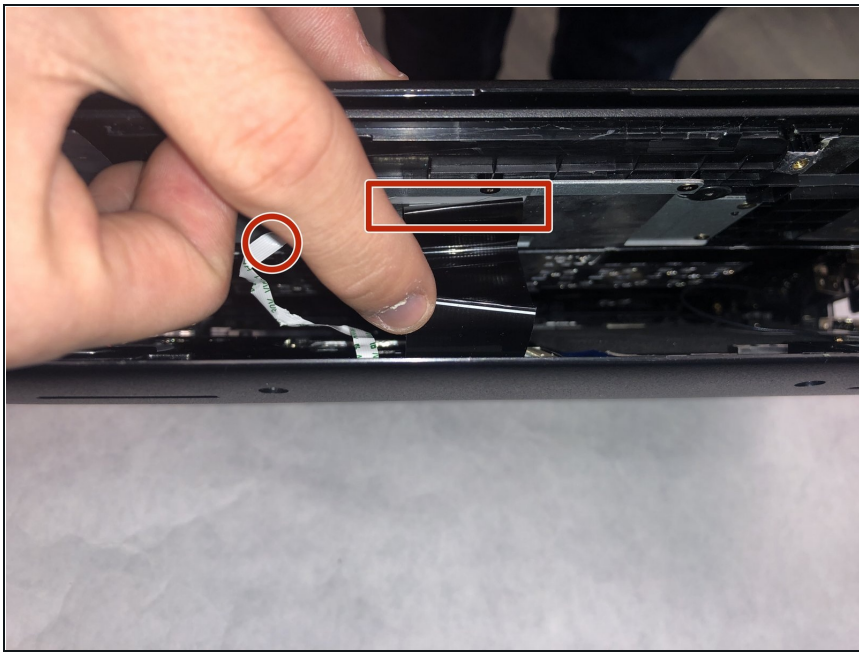


- Flip up the following:
 - The two latches holding the two cables shown(white and black)
- Pull the cables free from the latches
- Lift the keyboard from the computer

Step 7



- Remove the following screws from the inside of the laptop:
 - Two 4 mm screws using the Phillips #0 phillips screwdriver.
 - One 5 mm screw using the Phillips #0 Phillips screwdriver located in the center a little below the battery.

Step 8

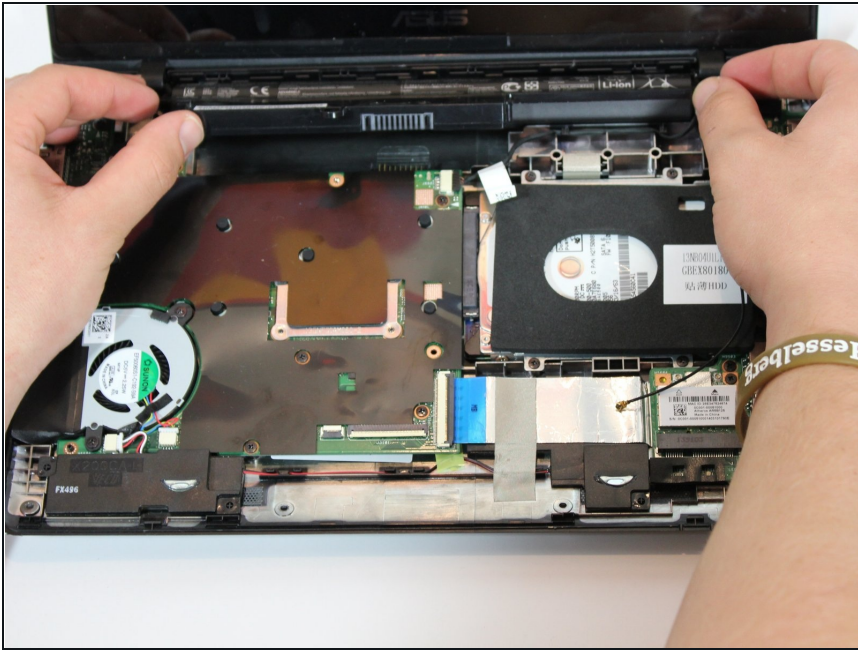

- Slide the battery up and out.

To reassemble your device, follow these instructions in reverse order.