



Nook Color Back Cover Replacement

Written By: Maria Delpilar




 **TOOLS:**

T5 Torx Screwdriver (1)


iFixit Opening Tool (1)

Step 1 — Back Cover

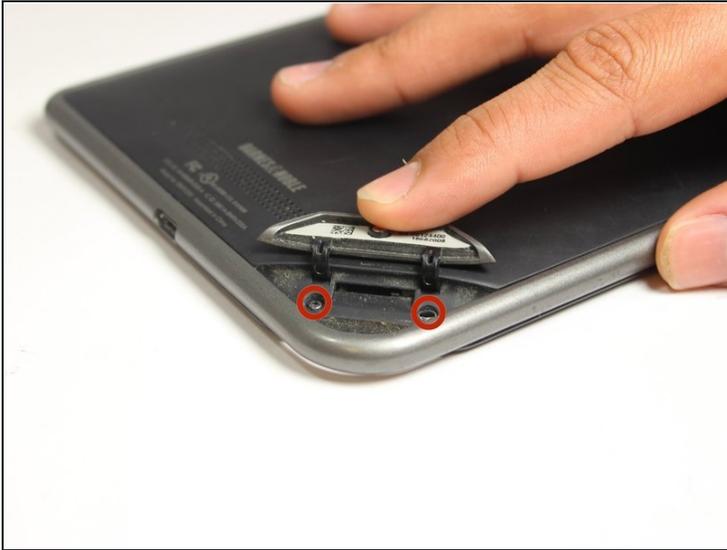

- Remove the two 3.8 mm screws located in the back right corner of the device using the T5 Torx screwdriver.

Step 2

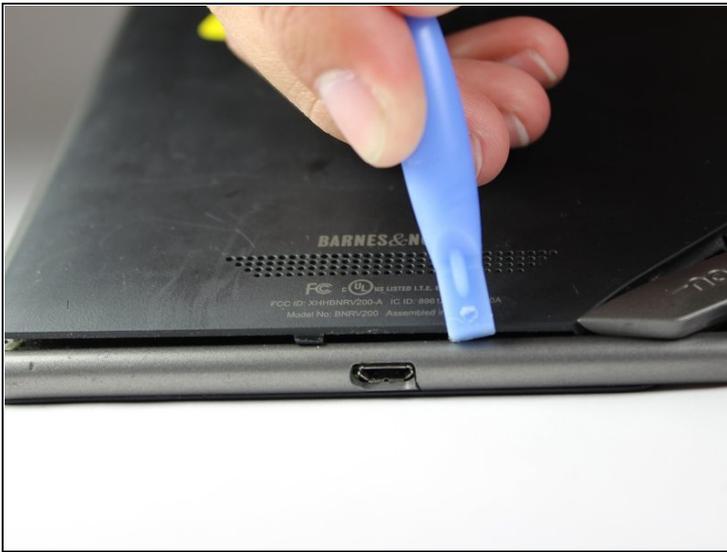

- Pry off the back cover with the plastic opening tool. Go around the device with the tool to ensure complete detachment.

To reassemble your device, follow these instructions in reverse order.