




Torque King Electric RTR RC Monster Truck

Wheel Replacement

This will serve as a wheel replacement guide.

Written By: Erik Rudberg

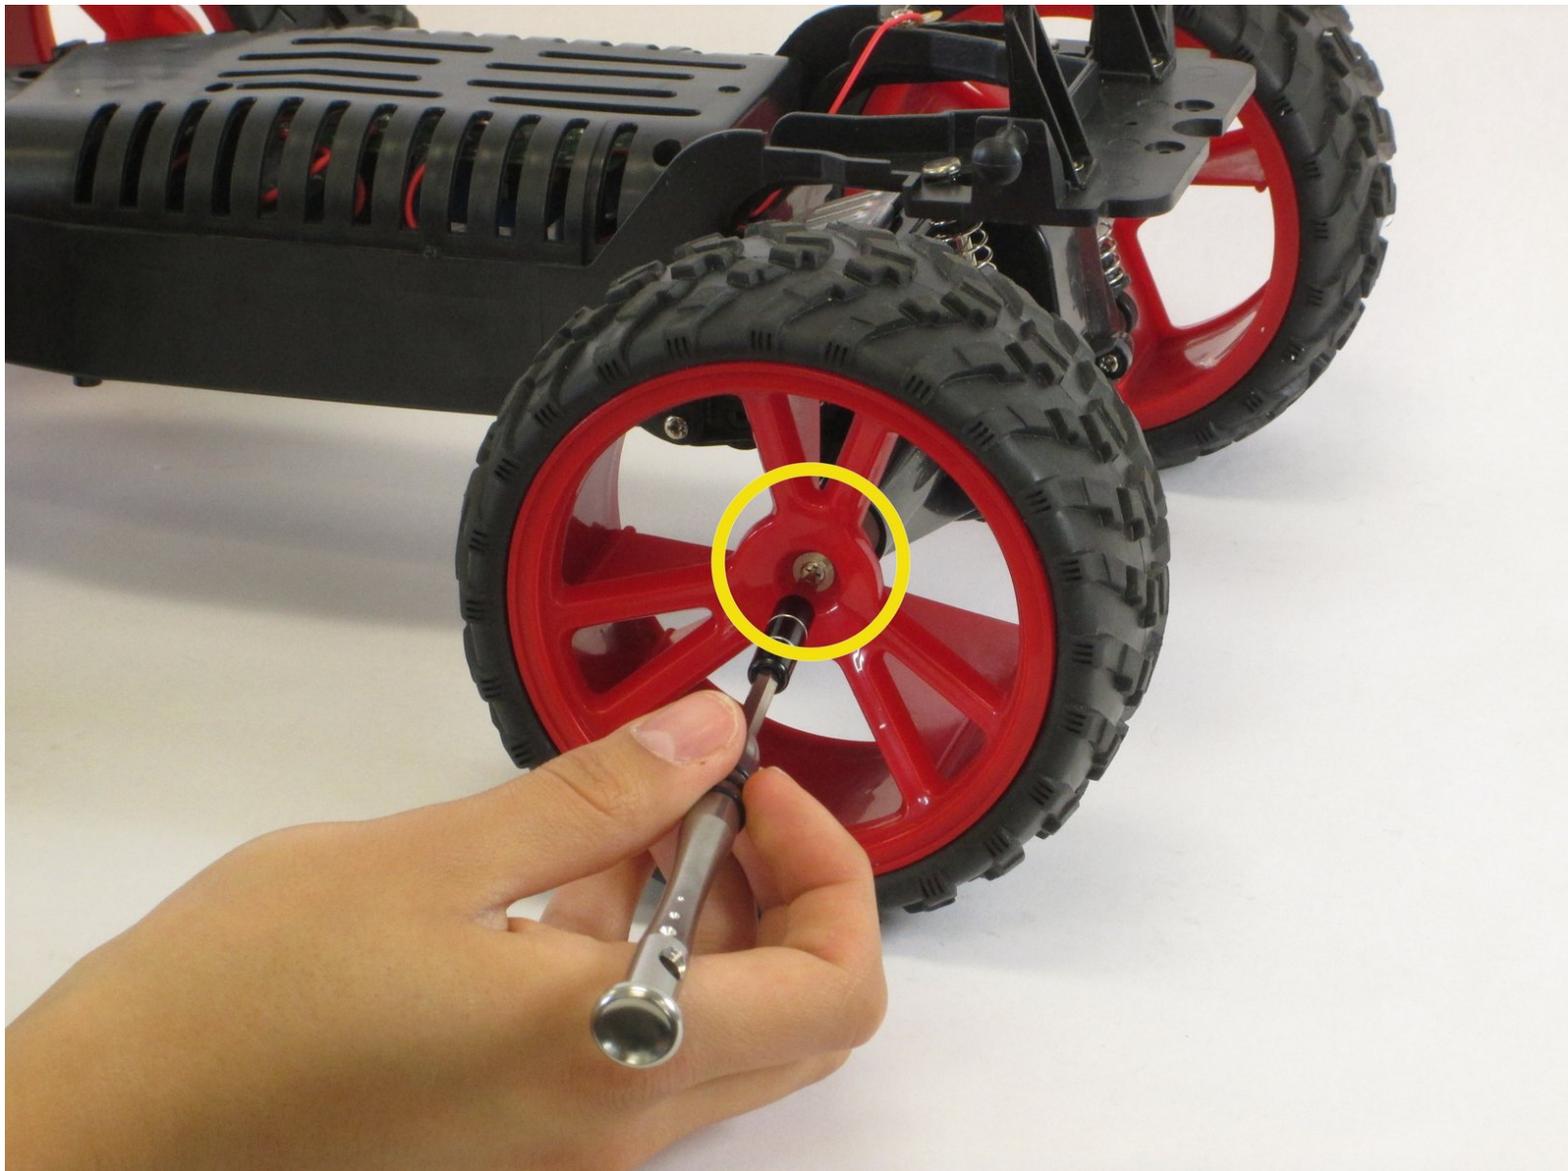

INTRODUCTION

Check to see if anything is obstructing the wheel before referring to this guide.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Casing



- From the top view, remove each of the four pins that hold the casing in place.

Step 2




- Slowly pull the casing up to remove it.

Step 3 — Removing Screws



- Using a Phillips 1 screwdriver, completely unscrew the 8mm screw located in the center of the wheel. Repeat this step for other wheels if needed.

Step 4 — Removing the Wheel

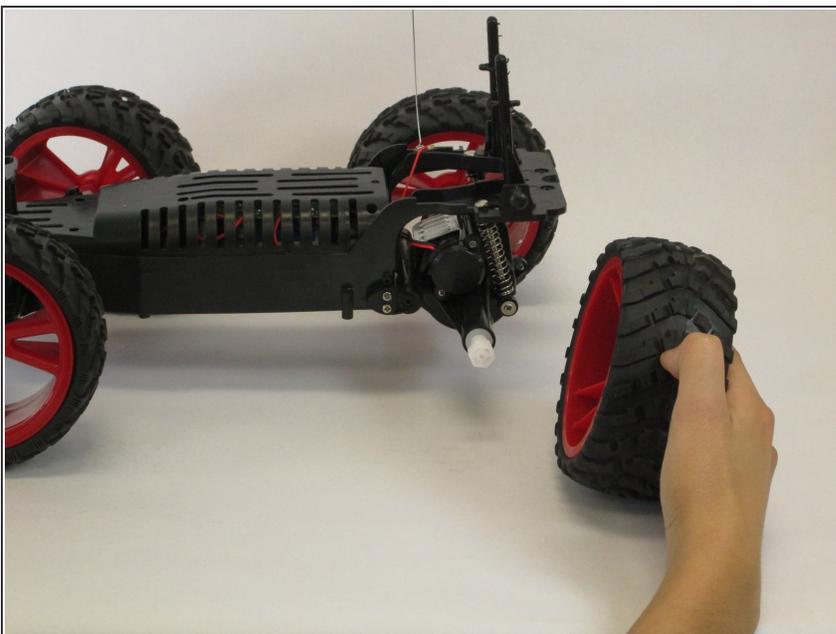

- Carefully pull the wheel off of its axle. Repeat for other wheels as necessary.

To reassemble your device, follow these instructions in reverse order.