

 


Torque King Electric RTR RC Monster Truck

Antenna Replacement

Directions on how to remove the truck's wire antenna.

Written By: Colton Sholtis

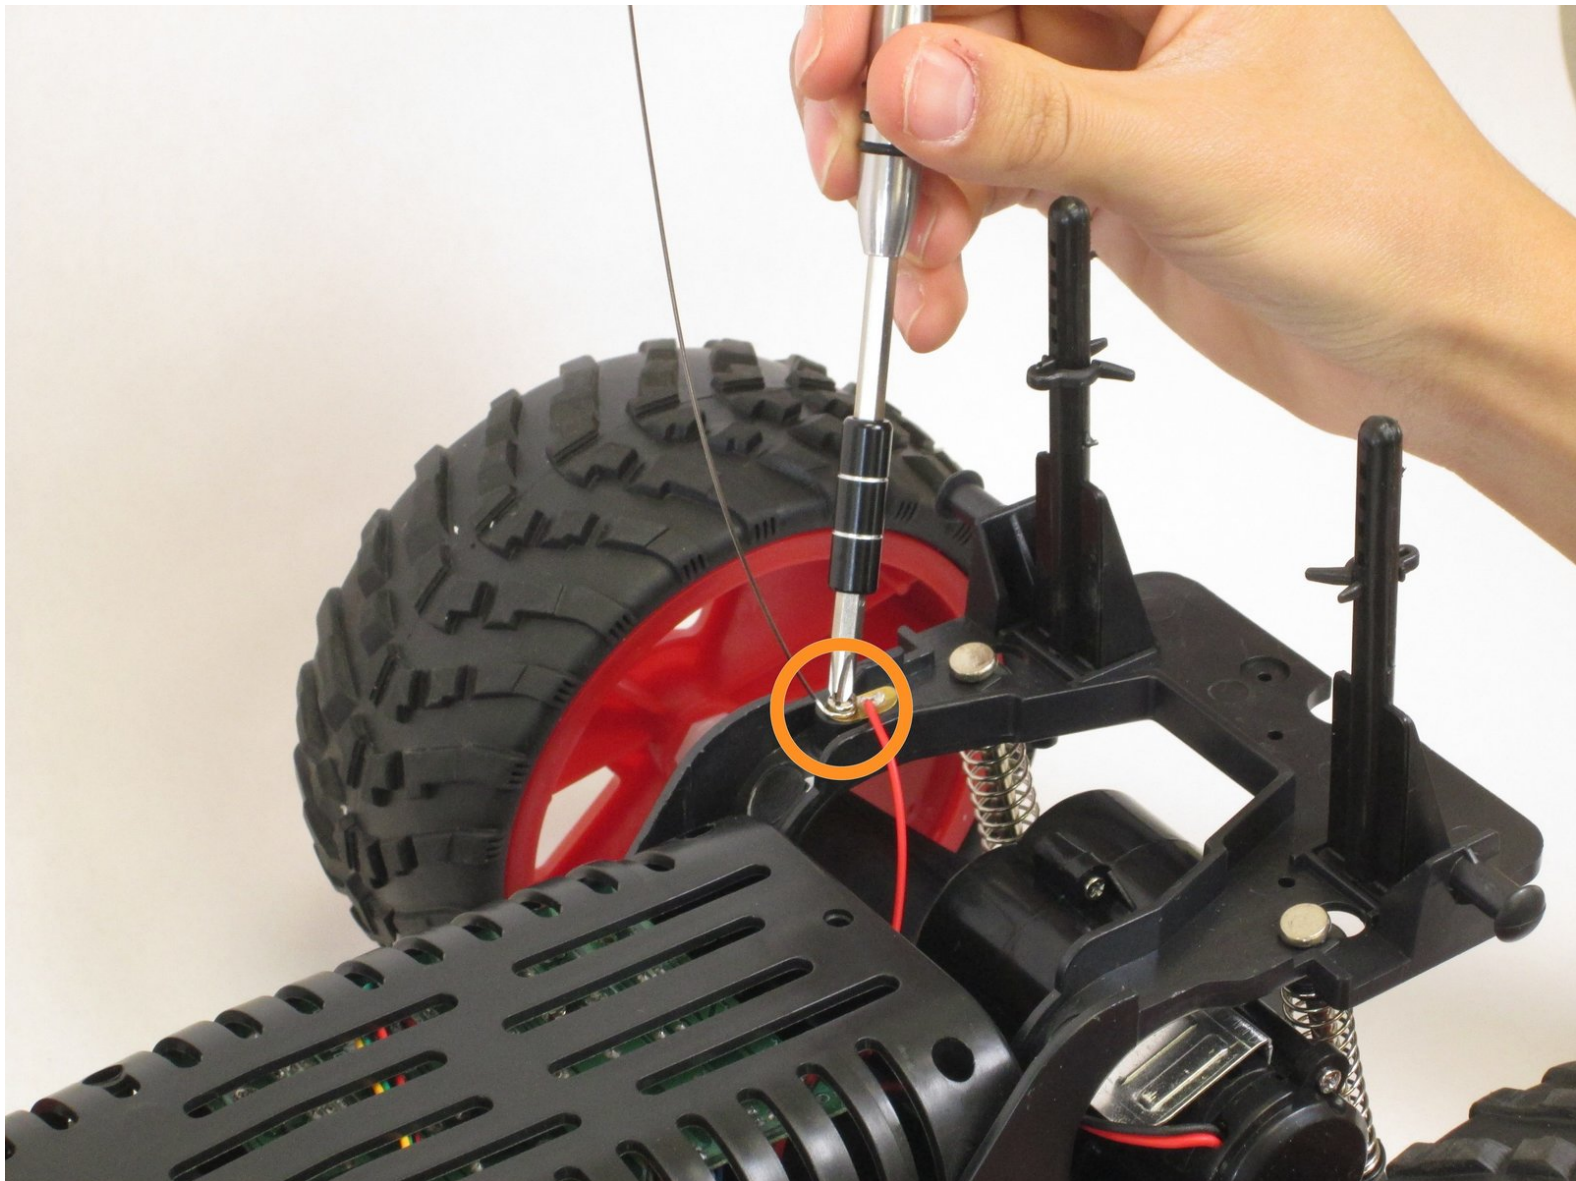

INTRODUCTION

Antennas in RC cars can be bent/broken during use. Fortunately, replacing the antenna on the Torque King is easy.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Casing



 
- From the top view, remove each of the four pins that hold the casing in place.

Step 2



- Slowly pull the casing up to remove it.

Step 3 — Loosen Screw

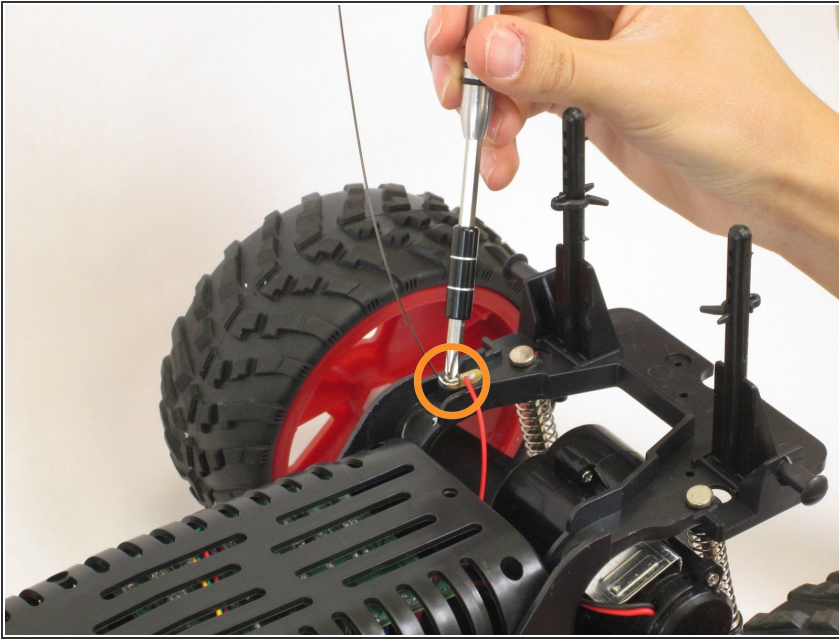

- Loosen the 10mm screw surrounded by the copper using a #2 Phillips head screwdriver.

⚠ The wire that connects the antenna to the circuitry of the truck might be blocking the screw. Take care when moving the wire out of the way not to pull it from its soldering.

Step 4 — Remove Antenna



- Carefully slide the antenna out from under the screw and remove.

To reassemble your device, follow these instructions in reverse order.