



Kodak EasyShare C913 Back Case Replacement

Use this guide to remove the back case.

Written By: Dustin Rodgers



INTRODUCTION

Use this guide to remove the back case.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Batteries



- Position the camera with the bottom facing up.
- Slide the battery cover in the direction of the arrow with your finger gently.
- Remove the batteries

Step 2 — Back Case



- Remove the seven 4.5mm screws with a Phillips #00 screwdriver.
 - 2 on the left
 - 2 on the right
 - 3 on the bottom

Step 3



- Firmly grasp the back of the camera and pull the away the casing.

To reassemble your device, follow these instructions in reverse order.