



Torque King Electric RTR RC Monster Truck

Battery Replacement

This guide will walk you through replacing the battery of the truck.

Written By: Thomas White



INTRODUCTION

This guide requires a Phillips #00 screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Beginning at the bottom of the truck, twist the release clip on the casing until the release clip is no longer covering the battery casing.

Step 2



- Next, use a Phillips 00 screwdriver to remove the 8mm screw on the battery casing and remove the battery casing.

Step 3



- ⚠ Do not skip this step if you are continuing onto the next step, you will risk electric shock.
- Finally, remove the battery from the white connector by squeezing the clip on the connector while pulling.

To reassemble your device, follow these instructions in reverse order.