



HP Pavilion dv5000 RTC Battery Replacement

The battery of the HP Pavilion is made to last...

Written By: Farid Khoshnevisan



INTRODUCTION


The battery of the HP Pavilion is made to last for only a period of time, after which the battery tends to run low sooner than usual. This means the battery capacity has lessened and may need a replacement. This guide will walk you through the process of accessing the RTC Battery of an HP Pavilion dv5000 in order to replace it.

TOOLS:

Tournevis cruciforme #00 (1)

Step 1 — Battery



 Turn off the computer, and unplug it from all external power sources.


- Lay the computer face-down on a flat surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image by the red rectangle. Slide the switch from right to left, and remove the battery.

Step 2 — RAM Cover




- Remove the two 5mm Phillips screws on the right side of the RAM cover.
- Lift the right side of the RAM cover, and remove it.

Step 3 — Wifi Card

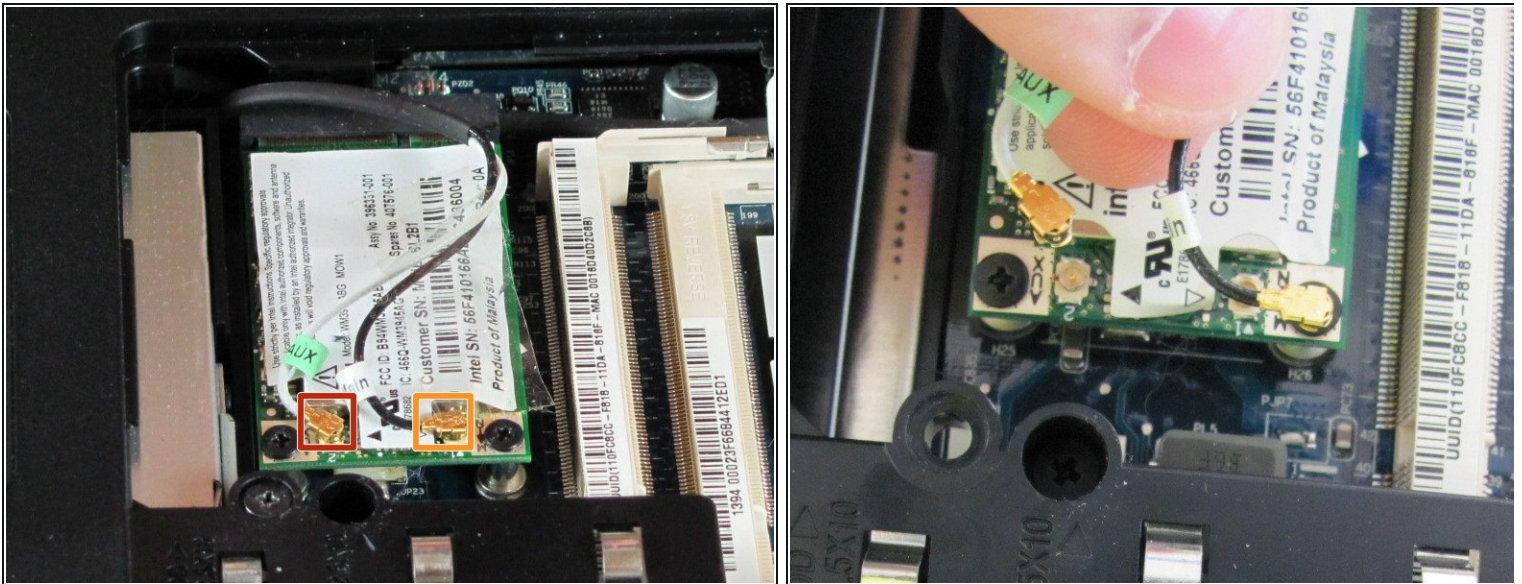


- Disconnect the antenna leads from the wifi card by lifting the gold ends of the wires off the prongs on the wifi card.
- The white wire connects to the AUX terminal.
- The black wire connects to the MAIN terminal.

Step 4

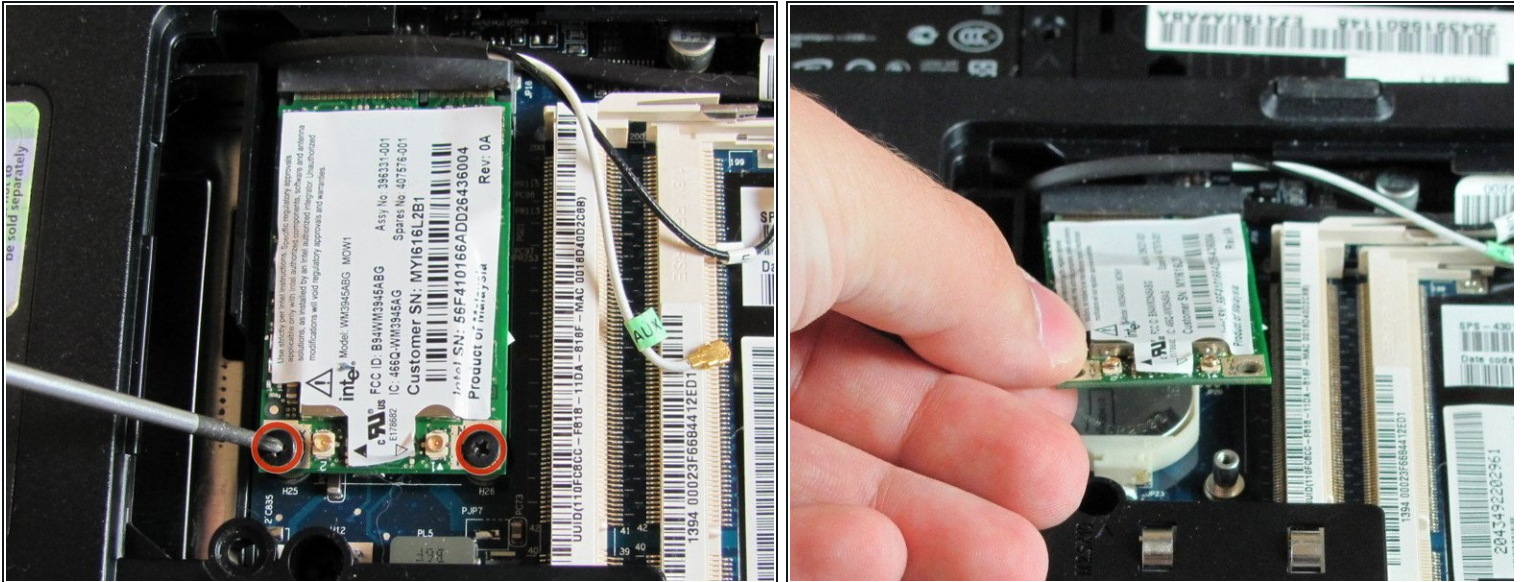

- Remove the two 6.0mm Phillips screws from the wifi card.
- Remove the wifi card.

Step 5 — RTC Battery

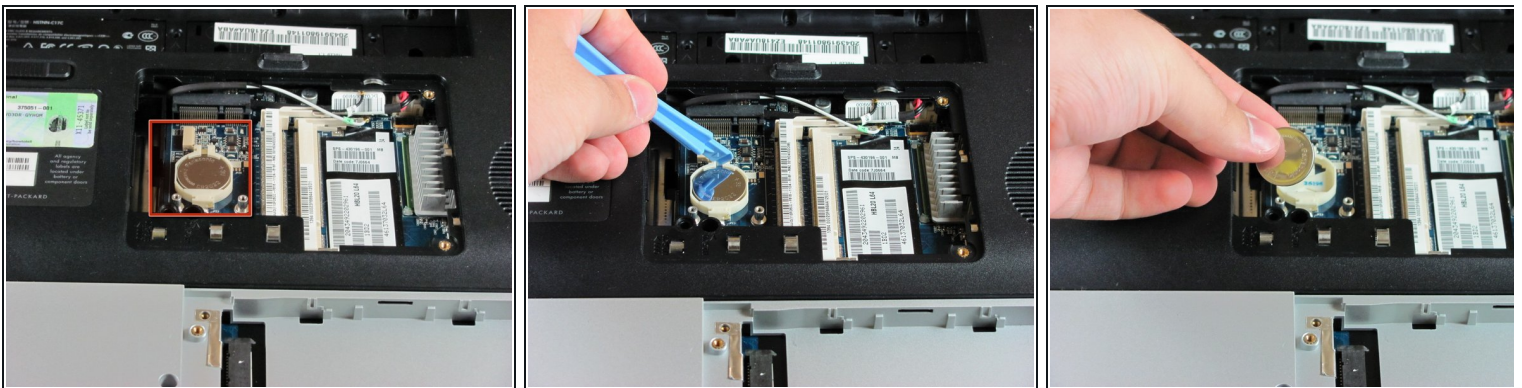

- Remove the RTC Battery from the battery holder.

To reassemble your device, follow these instructions in reverse order.