



# Garmin StreetPilot C330 Outer Casing Replacement

This guide will help you replace the outer...

Written By: Adrian Leon



# INTRODUCTION

This guide will help you replace the outer casing of your Garmin StreetPilot C330.

## TOOLS:

Spudger (1)

Tweezers (1)

Phillips #00 Screwdriver (1)

## Step 1 — Outer Casing



- At the top of the outer frame, insert the plastic spudger into the groove in the center.
- Lever the frame gently until it pops out of the case.

## Step 2



- Use a Phillips #00 screwdriver to remove the four screws around the screen.


### Step 3



- Gently pull from both ends of the casing to separate the front and back panels.

⚠ Do not force the pieces apart wider than the length of the connecting wires, or you will damage the wiring.

### Step 4

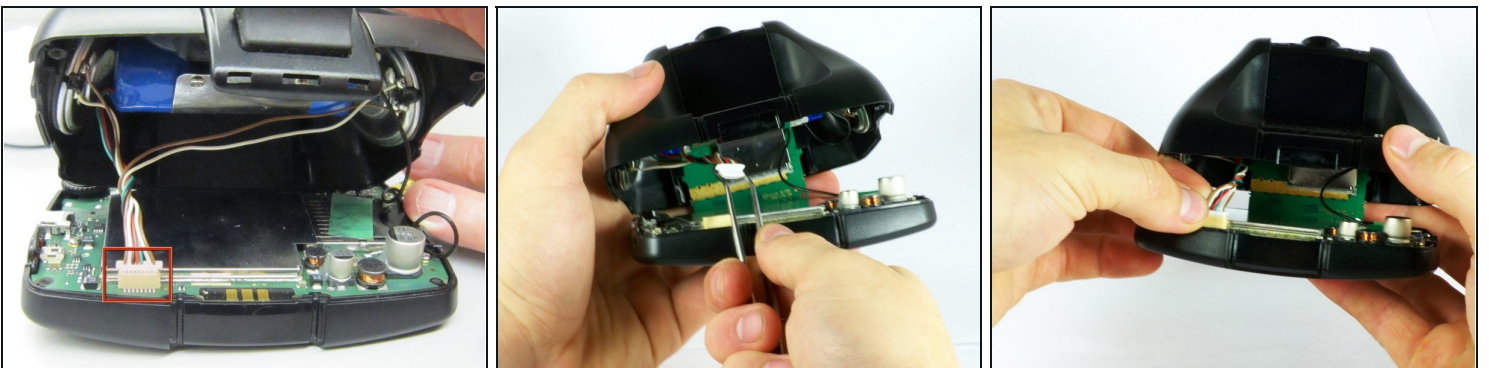

- Gently unplug the white cable connector using either your fingers or [tweezers](#).



## Step 5



- Carefully expose both halves of the device.

⚠ Be sure not to pull the two halves apart further than the black wire can reach.

---

To reassemble your device, follow these instructions in reverse order.