



Nokia 6310i Keypad Replacement

Replacing a new keypad and cleaning metal button contacts for Nokia 6310i cell phone.

Written By: Ka Siu



INTRODUCTION

This guide shows the procedures to replace a new keypad and clean metal button contacts for Nokia 6310i cell phone. Refer to the guides for removing the battery and separating the case from the motherboard.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Press and hold the battery release button and slide the battery away from the Nokia logo

Step 2 — SIM card



- Slide the SIM card lock away from the SIM card.
- ⓘ The SIM card pops out. Remove the SIM card.

Step 3 — Back Cover



- Unscrew and remove the four T6 Torx screws.

Step 4




- Insert a plastic opening tool between the faceplate and the black backplate. Gently pry them apart, working from the lower end to the upper side of the phone.

Step 5




- Use the plastic opening tool to separate the top part of the backplate.
- ⓘ The plastic clips at the top require slightly more force to separate.

Step 6 — Antenna

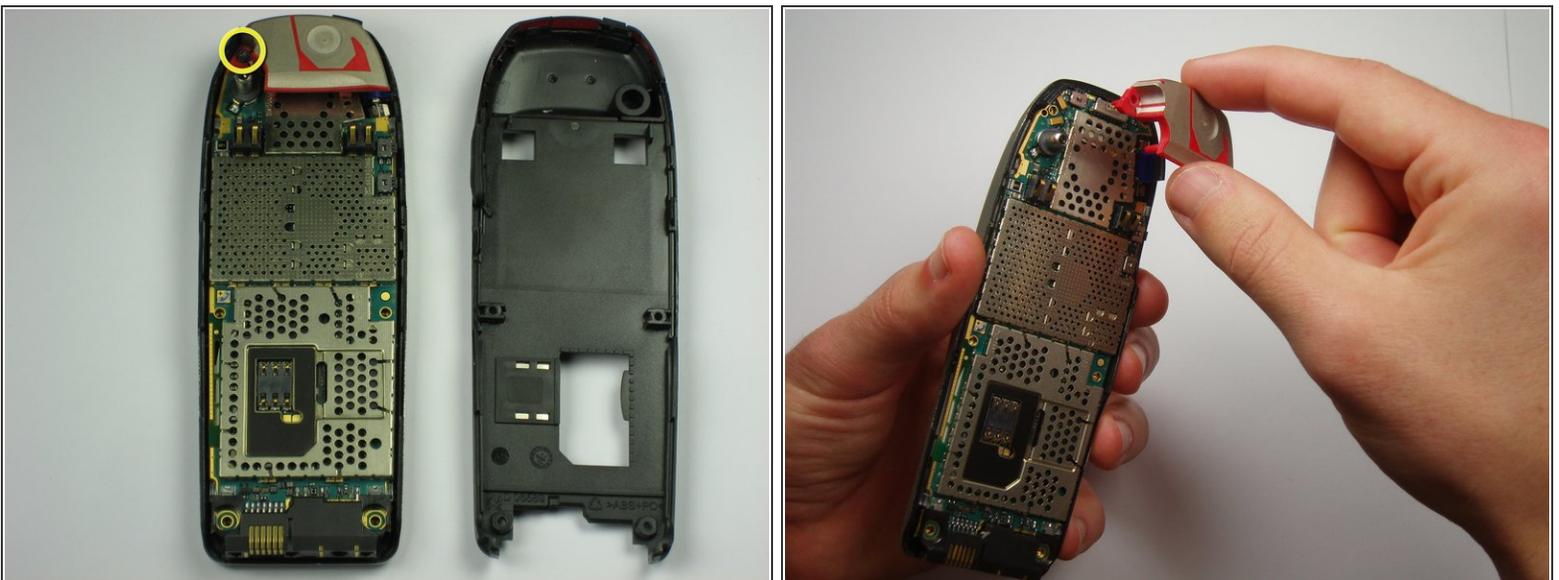

- Remove the screw holding the antenna to the circuit board.
- Carefully lift off the antenna from the circuit board.

Step 7 — Motherboard

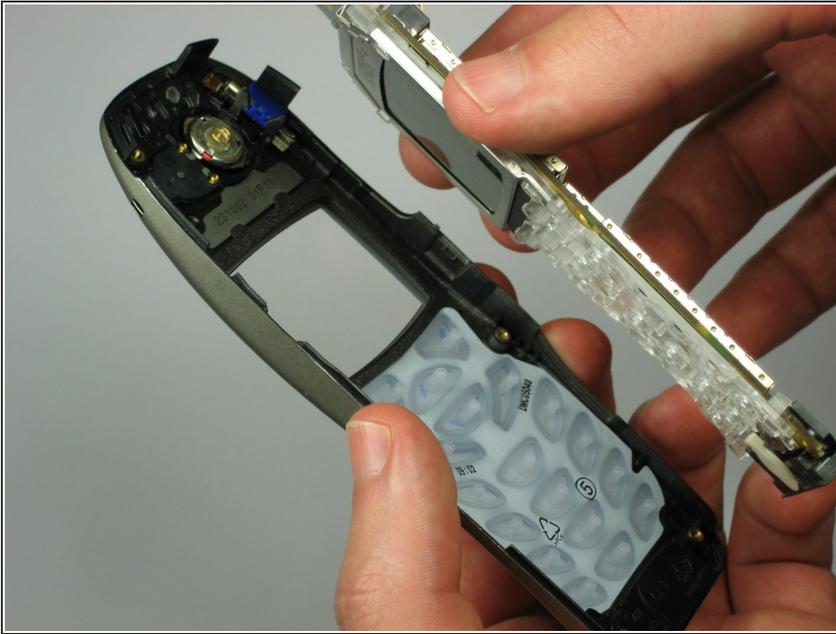

- Lift off the motherboard from the faceplate.

Step 8 — Keypad



- Remove the plastic keypad from the faceplate.

To reassemble your device, follow these instructions in reverse order.